



ESV16U, ESV32U User's Manual

16CH and 32CH Network Video Recorder with Local Display

surveillix^{sv}

Version 1.0.0

Table of Contents

System Overview.....	6
Front View.....	6
Rear View.....	6
LED Status	7
Installation.....	8
HDD Installation.....	8
Rack Mounting Kits and Screws.....	17
Connect to the NVR	18
Use NVR Device Search Utility.....	18
Access the NVR with its default IP address.....	23
Set up Password.....	24
Camera Installation.....	25
Add a Camera -- Automatic Search.....	25
Add a camera manually	27
Live View.....	28
(!) Note.....	29
Retrieve camera's video stream.....	31
Retrieve camera's status	31
Perform Sequence Viewing	32
PTZ Control	34
Perform PTZ Preset Viewing	36
Preset Point Viewing	36
Auto Pan Viewing	37
Preset Point Sequence Viewing.....	38
Live Video Controls.....	39
Display ratio and full screen.....	39
Take a snapshot of a live video	40
Perform Digital PTZ.....	46
Adjust Brightness for Live Video	49
Adjust Contrast for Live Video	50
Change Web UI Display Language	51
Live View through iPhone Safari Browser	52
Live View through Blackberry Phones	57
Playback.....	63
Methods to Search Playback Videos	63
Search by time chart	64
Search by event	66
Play by specific time	68
Search by event (Most Recent)	70
Certain functions you can perform to the playback video	72


Take a snapshot of a playback video	73
Adjust Brightness for Playback Video	79
Adjust Contrast For the Playback Video	80
Export Playback Videos to AVI Files	81
Export Playback Videos to JPEG images	83
Play Exported Playback Videos with NVR Media Player	86
Open Event Snapshot images with NVR Media Player	88
NVR Setup -- System Configurations	90
Network Setup	90
Network Settings	90
DHCP Server	92
DDNS Service	93
Time and Date	99
User Account	100
Add a new user	101
Change the password of the "admin" account	102
Group Privilege	103
Disk Setup	105
Build RAID Volume	106
Deleting RAID	111
Notes for RAID function	111
NVR Setup -- Channel Configurations	113
Add a camera	113
Automatic Search	113
Add a camera manually	120
OSD Settings	121
PTZ Setting	124
PTZ Preset Settings	124
PTZ Preset Sequence	126
E-Map Setting	128
Local E-Map Setting	128
Google Map Setting	131
NVR Setup -- Event Configurations	133
Event Configuration	133
General Settings	133
DI/DO Settings	134
Event Servers	141
Configuring an FTP server	141
Configuring an SMTP server	143
Event Triggers	144
NVR Setup -- Recording Configurations	146
General Settings	146
Schedule Recording	150
To configure a schedule recording	151
NVR Setup -- System Options	153

Device Information	153
Logs and Reports	154
Maintenance	155
Reboot the NVR at a specific time automatically	156
Firmware Upgrade	156
Through the web interface	156
Upgrade through USB thumb drive	159
Reset the NVR to Factory Default.....	159
Disk Status	160
USB Backup	161
Things to pay attention to the USB Backup function.....	163
Play the backup file with the NVR Media Player	164
UPS Configuration	168
Live View (VGA output Interface)	170
Live View	170
Video Area.....	180
Snapshot.....	184
Digital PTZ.....	187
Keep Ratio.....	190
NVR Configuration (VGA output Interface)	191
System Configuration	191
Service.....	191
Display.....	192
Network	193
User Account -- User setting	195
User Account -- User group setting	197
Disk.....	199
Channel Configurations -- Add a camera (Automatic Search)	201
Channel Configurations -- Add a camera (Add manually)	206
E-Map.....	208
Add new E-map.....	209
Change E-map Image	210
Schedule Recording	215
Record Buffer.....	217
Event Handling.....	217
General Setting.....	218
DI/DO Setting.....	221
System Log	229
Maintenance	230
UPS Configuration	235
Playback (VGA output Interface)	237
Playback	237
E-Map Monitor	241
E-Map Monitor	241
Event Monitor	245


Event Monitor	245
History Event Monitor	248
Specifications	249
Technology license Notice	251
About the software	251

System Overview

Front View

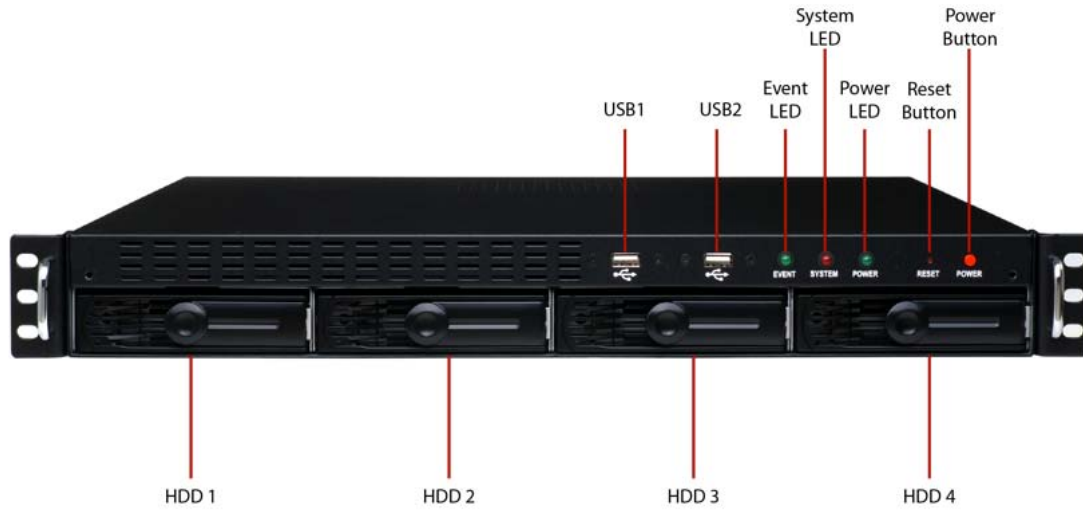

Rear View

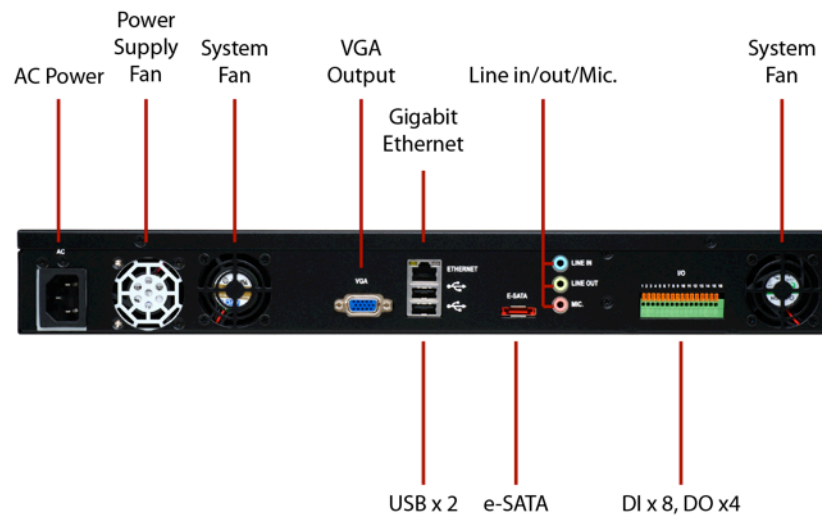

LED Status


Buttons	
Power	
Reset/Restore default	<ul style="list-style-type: none">• Press and release for restart• Press and hold for 3 seconds then release for restore to default, when 3 seconds is reached, System LED blinks until release of the button
LEDs	
Restore default	<ul style="list-style-type: none">• System LED blinks during the process• Power LED stays solid
Restart	<ul style="list-style-type: none">• Power LED stays solid• System LED off
Power	<ul style="list-style-type: none">• Blue• During power on/restart/reset to default/OS fail: stays solid
System	<ul style="list-style-type: none">• Amber• During firmware upgrade: blinking• System failure (AP fail): off• System Normal: Solid
Event	<ul style="list-style-type: none">• Amber• During event recording: solid• No event: off

Installation

HDD Installation



Start by removing the front plate.

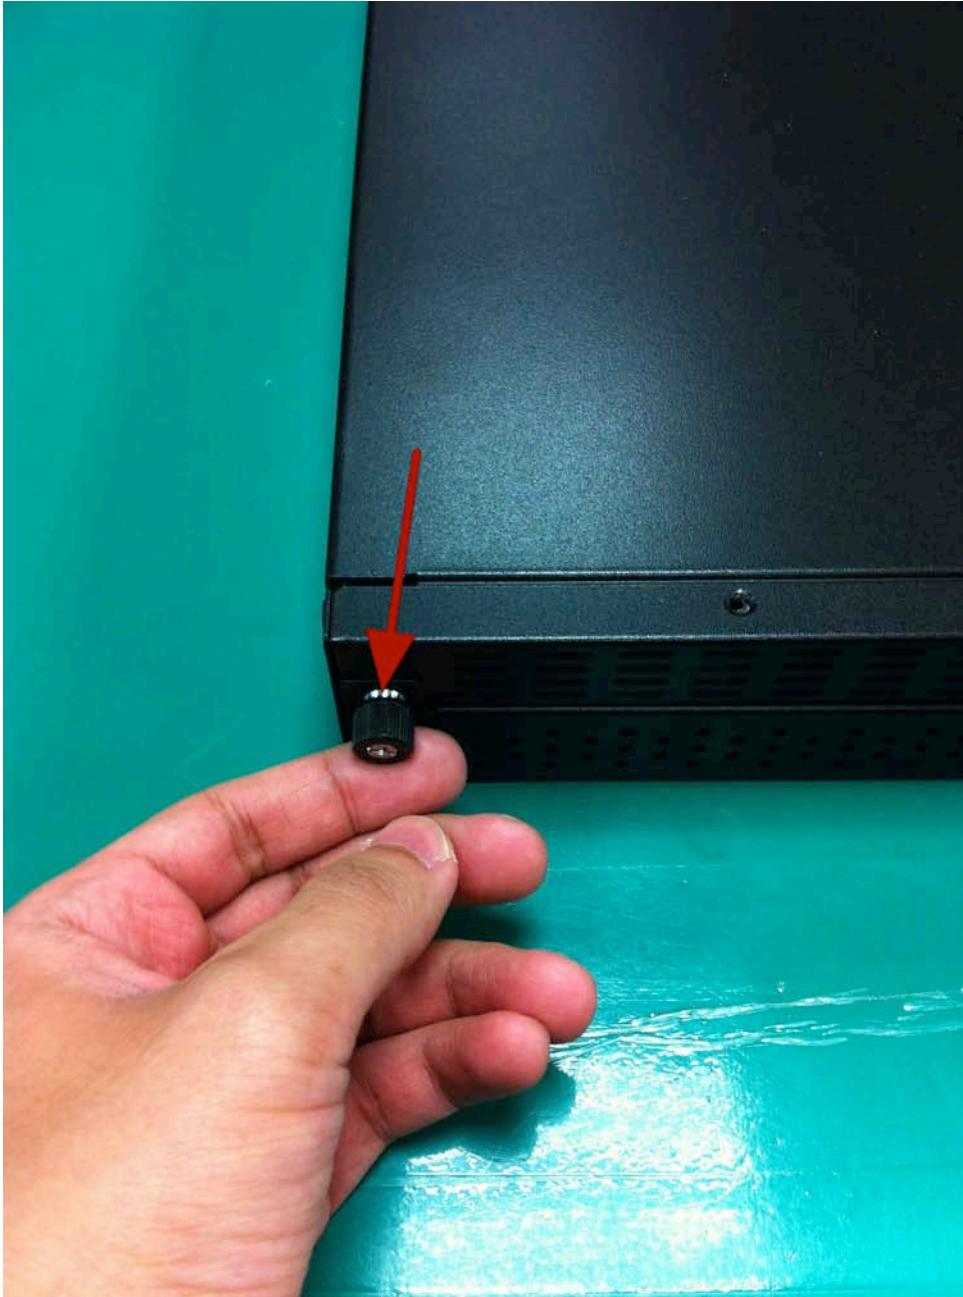


To remove the front plate, turn the tool-less screws on both sides counter-clock wise to lose it from the unit. Please note the screws will still be attached to the front plate even after the screws are completely loosened from the unit.




Simply pull to remove the front plate once the screws are loosened from the unit.




Release the HDD tray by pulling the latch.

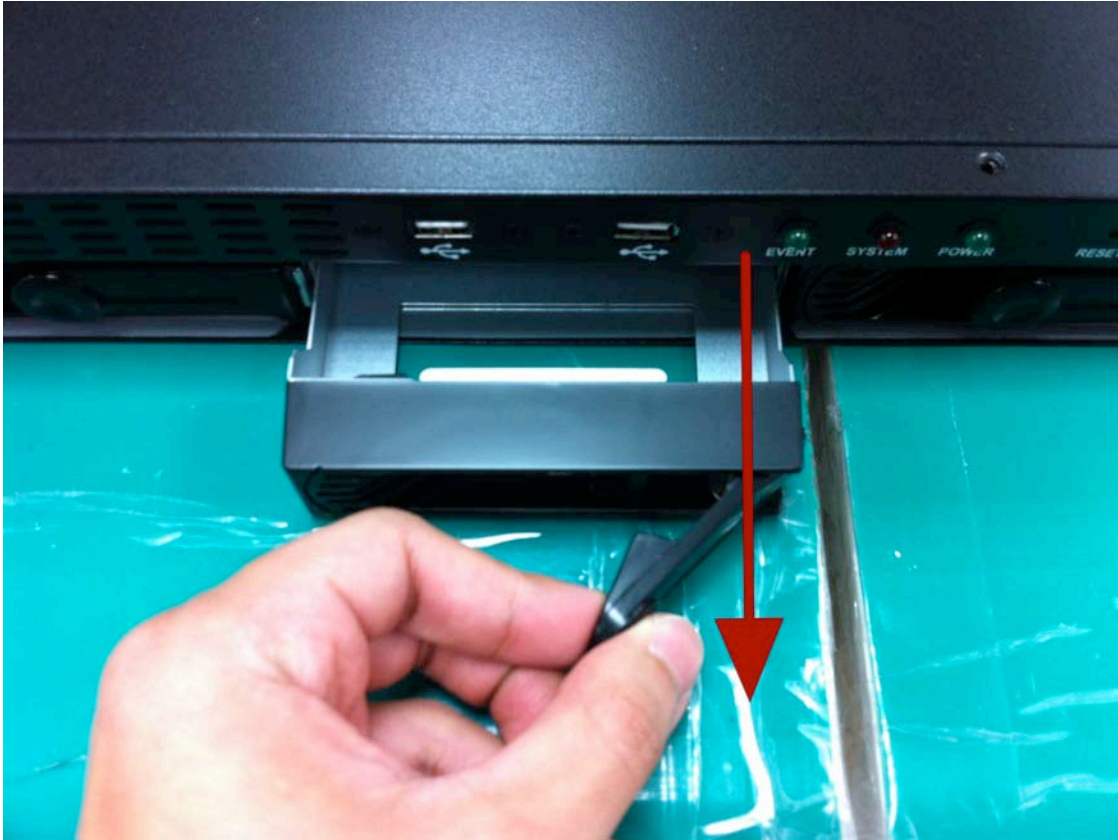


Pull the HDD tray out of the case.

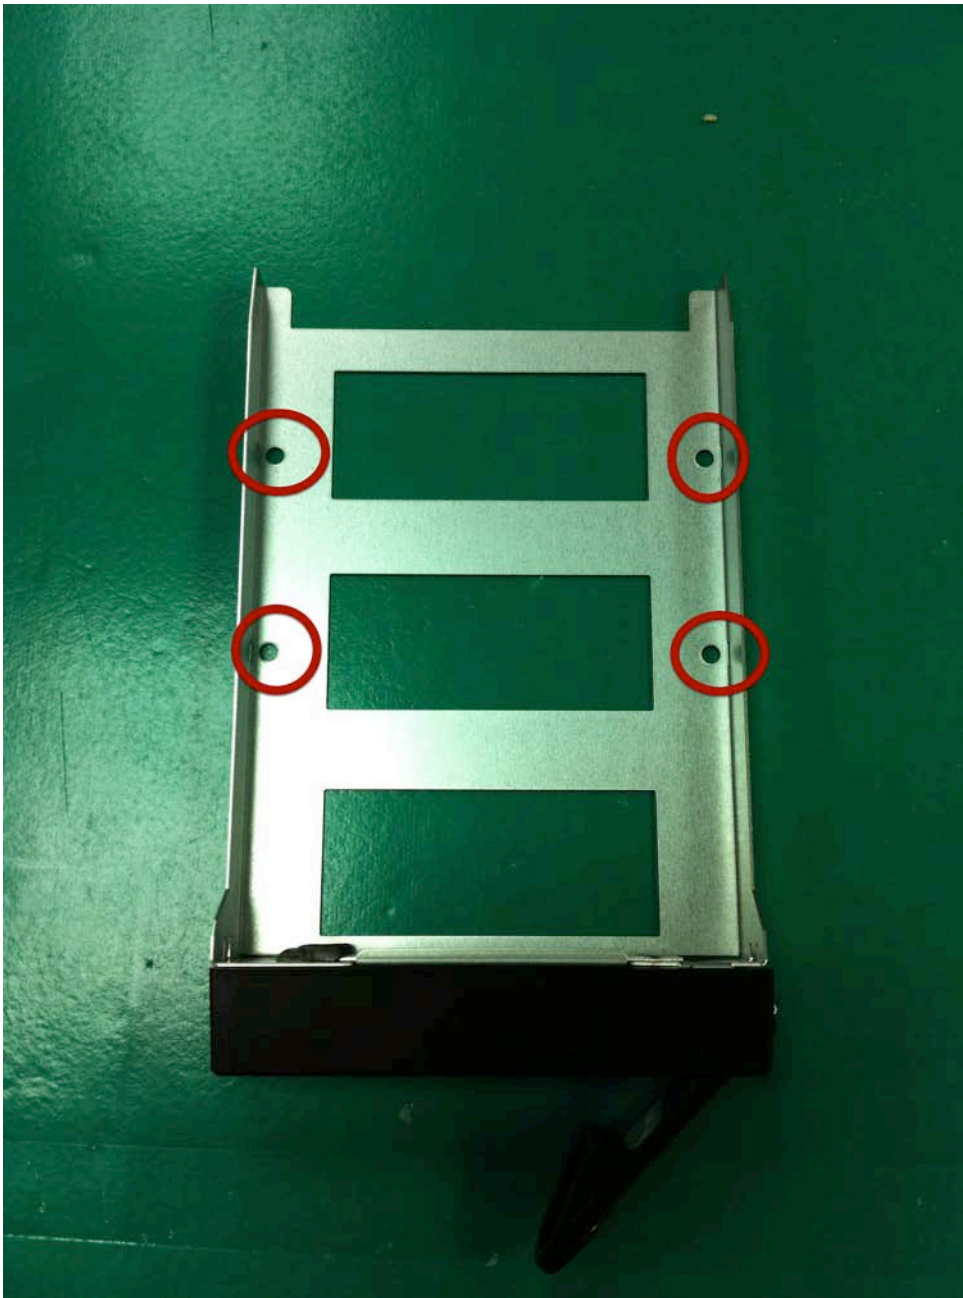

Once the tray is removed from the unit, notice there are four holes, which are used to secure the HDD.

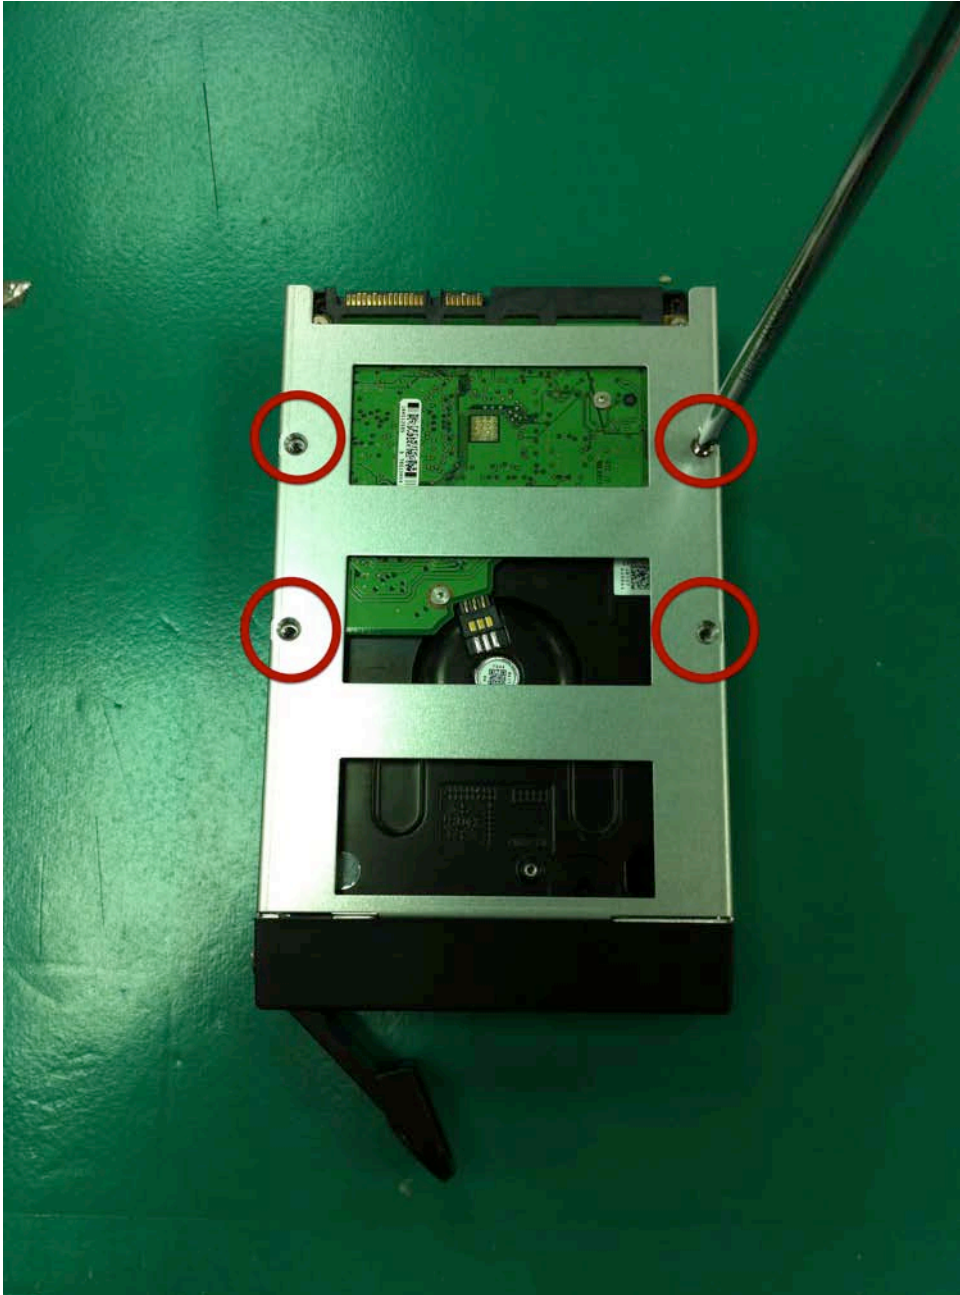

Once the HDD is placed in the tray, flip it over, align the tray screw holes with the HDD screw holes and secure the HDD with the supplied screws (Flat head #6-32 x 4).

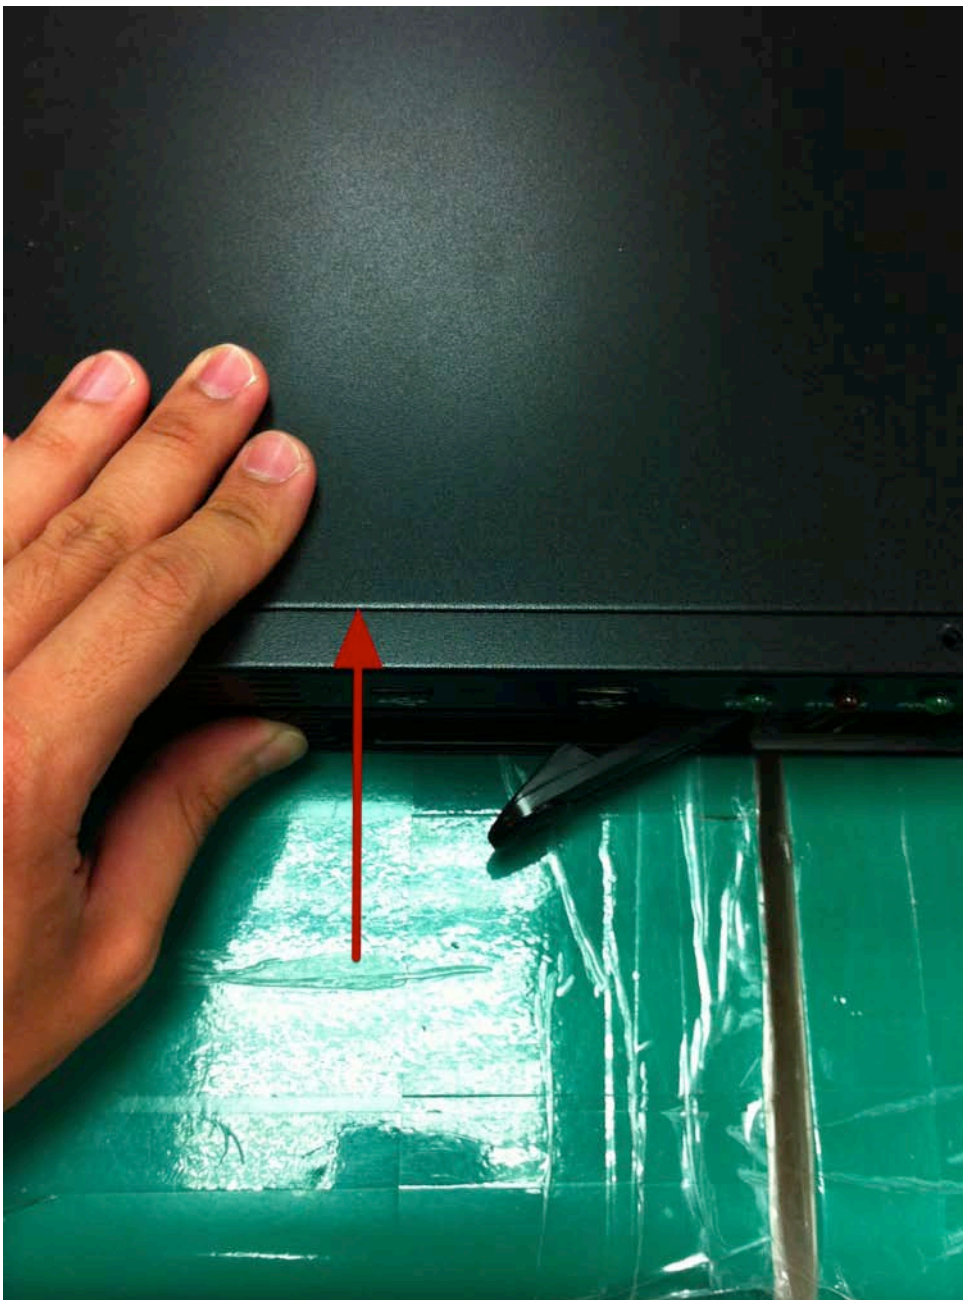

Put the HDD tray back in the case and insert it completely.



Secure the HDD tray by pushing in the latch, which locks the HDD tray with the unit.

NOTE:


Maximum capacity of each hard disk drive is 3TB.

Do not use hard disk drives with power saving functions such as Intellipower.

For a list of compatible hard disk drives, visit

www.toshibasecurity.com."

Rack Mounting Kits and Screws

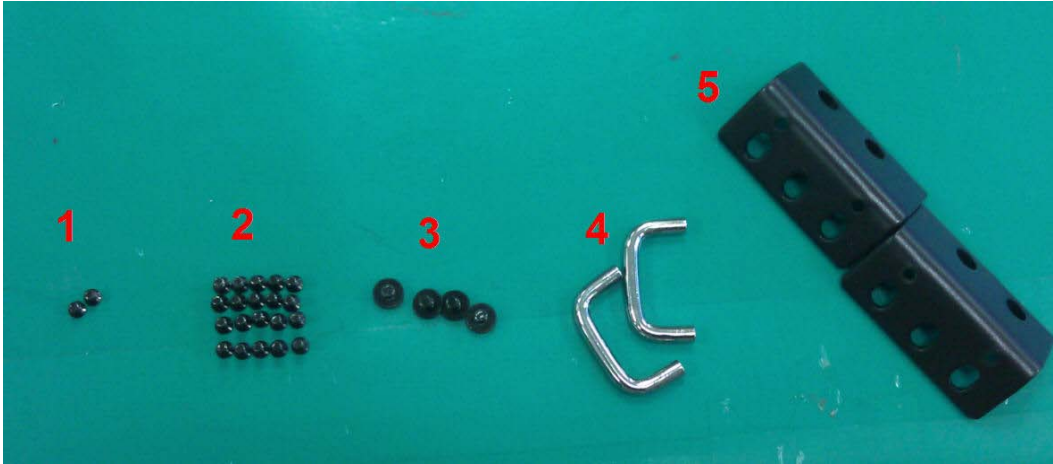

1. Flat head 3 x 6, 2pcs
2. Flat head #6-32 x 4, 20pcs
3. Pan Head 4 x 4.2, 4pcs
4. Handle, 2pcs
5. Ear, 2pcs

Secure the Rack Mount Kits with the supplied screws as shown.



Note:

- The screws of #1 are spare.
- The remaining screws of #2 are used in order to install HDD. Please refer to page 13 of the QSG.

Connect to the NVR

There are various ways you can connect to the NVR and below are the suggested methods for different network setup:


Through the browser from another PC on the network:

- The NVR is placed in a network with a DHCP server: Connect to the NVR by using **"NVR Device Search" Utility**
- The NVR is placed in a network without DHCP server (or you are connecting to it directly): **Access the NVR with its default IP**


Direct operation:

Connect a USB keyboard and mouse to the NVR's USB port and a monitor with VGA input to the VGA output port in the back of the NVR.


Use NVR Device Search Utility

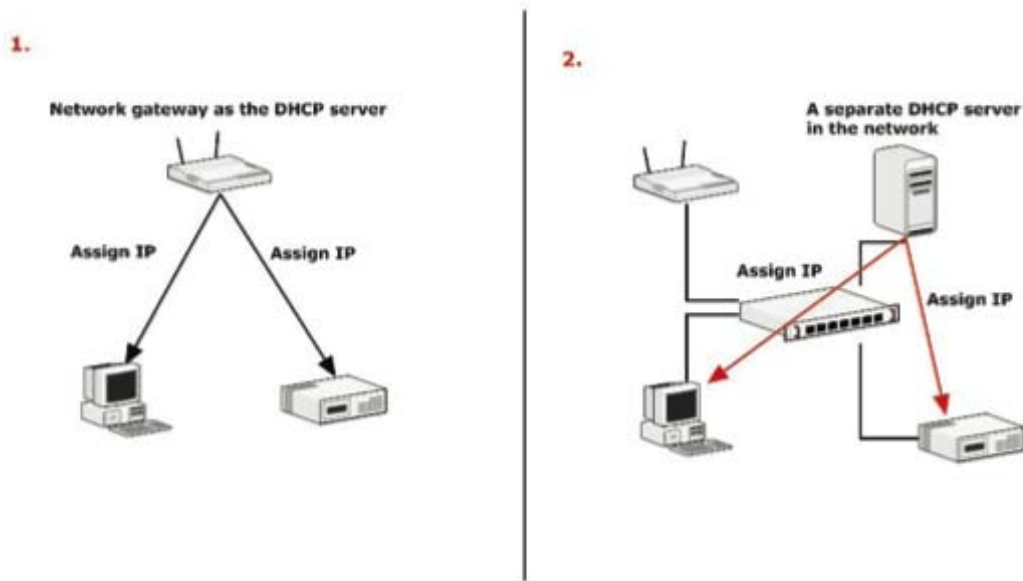

If the NVR is placed in a corporate network or a local area network where a DHCP server is already presented, run the "NVR Device Search" utility from a computer that is on the same network and locate the NVR with its IP address that is assigned by the top-level DHCP server.

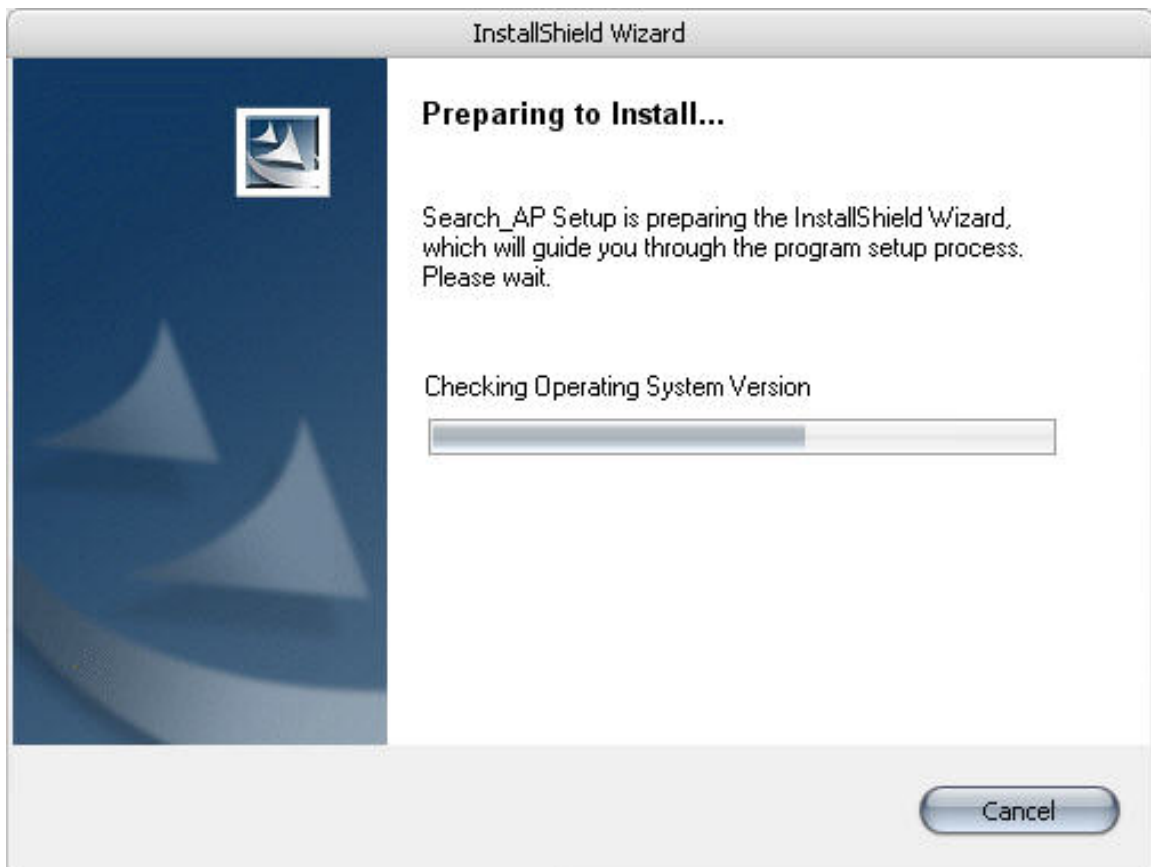


To begin, launch the "NVR Device Search" utility from the CD and proceed with the installation:

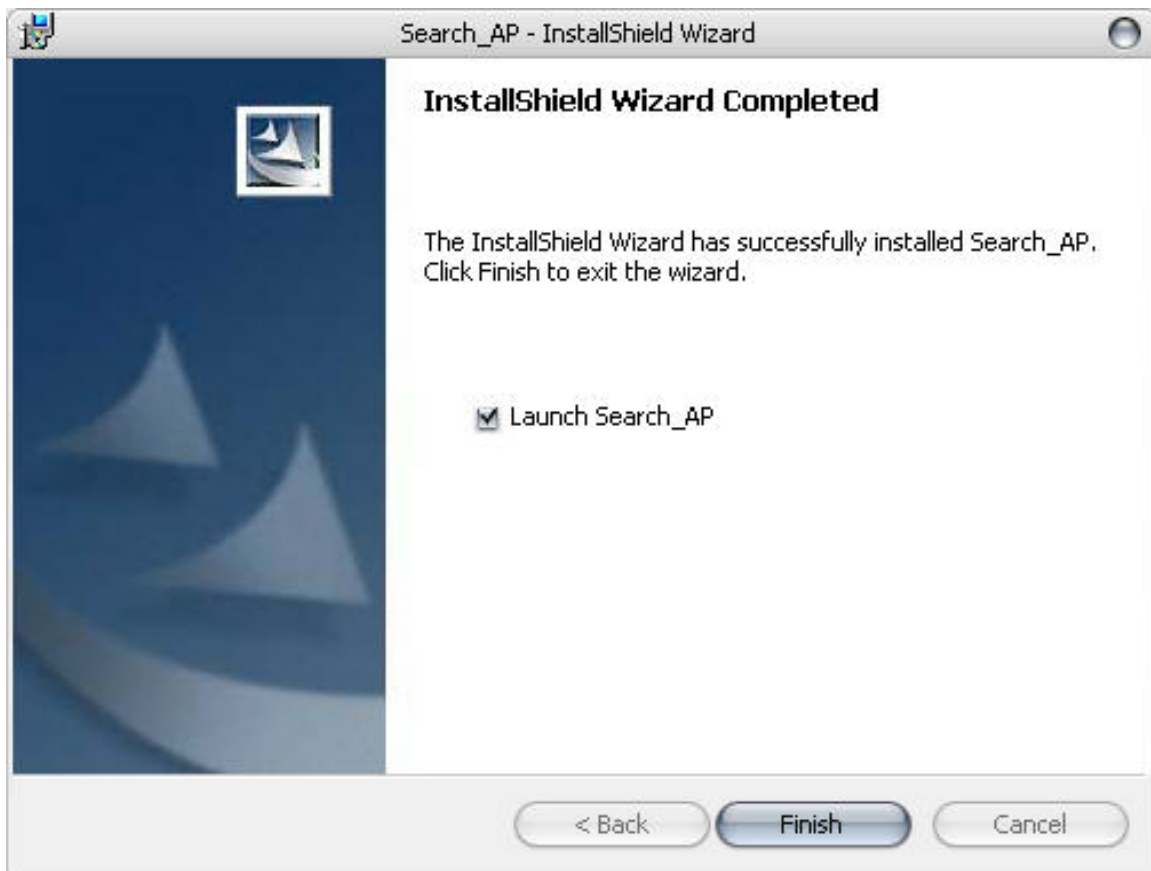


Once the installation is complete, check the "Launch the Search AP" option and click "Finish".




The search should start automatically and its status should be displayed.

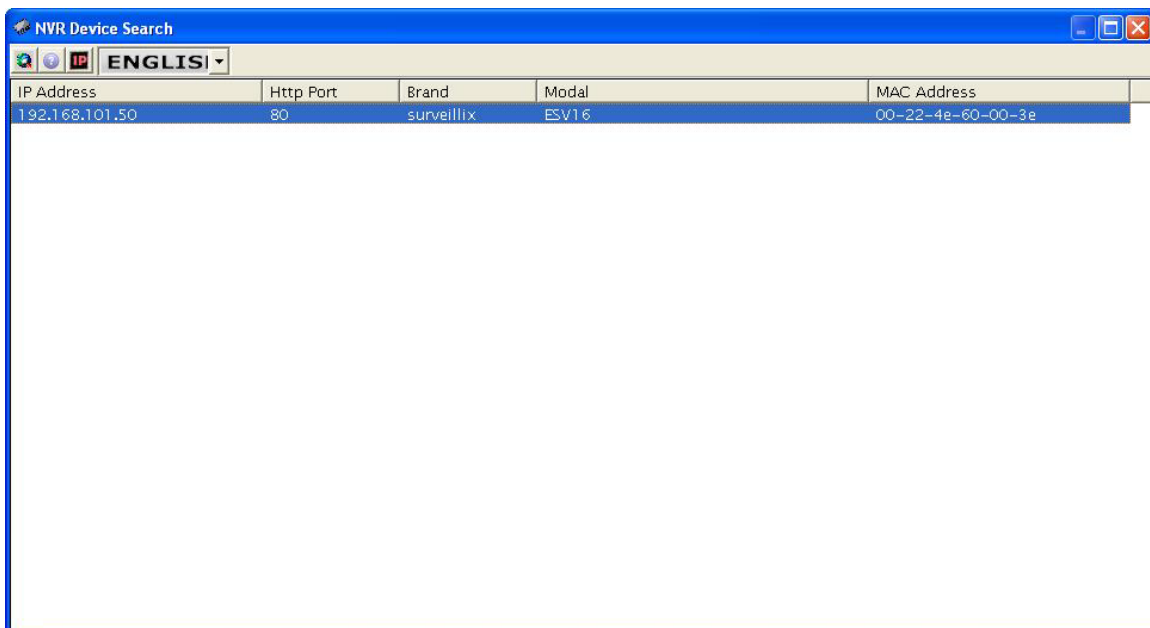

The NVR should be located and its IP address should be displayed.

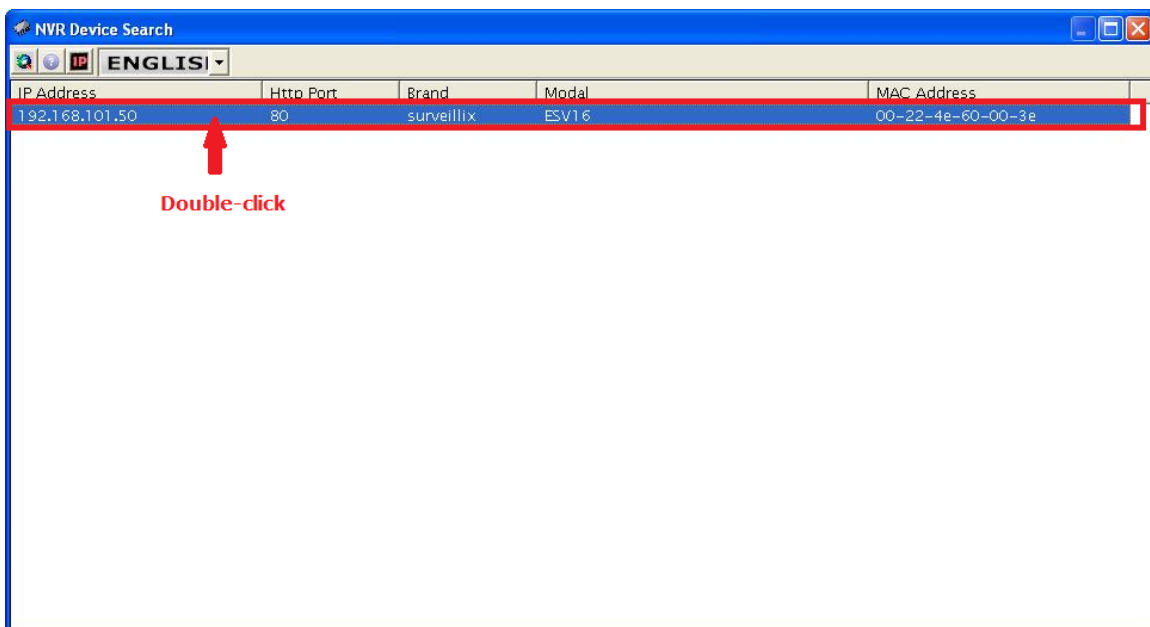


Double-click on an NVR and the search program should automatically access the NVR's web administration page from your default browser.

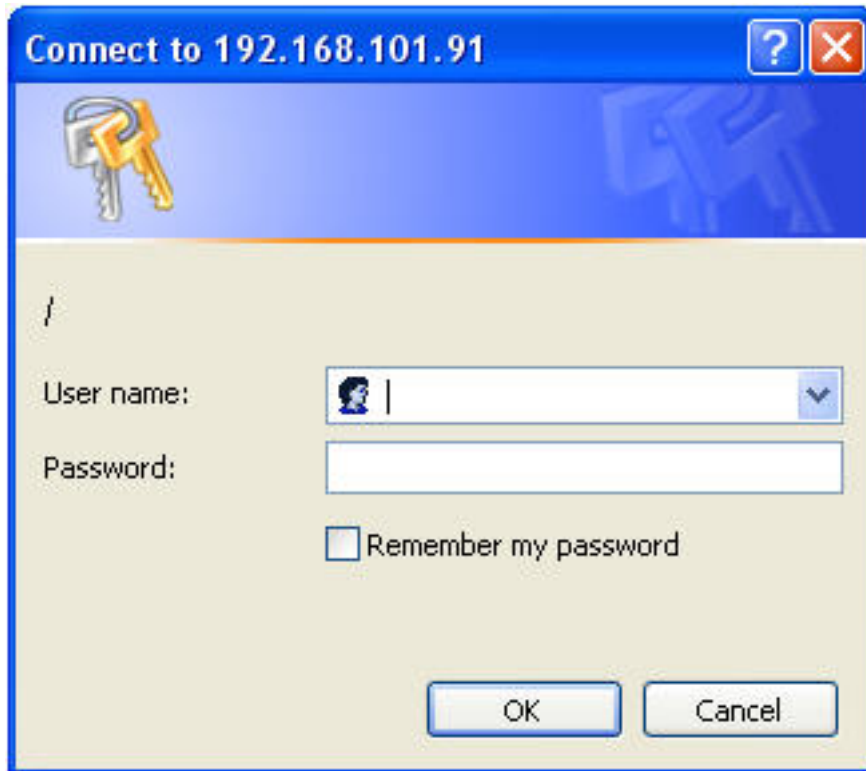


You will be prompted for the NVR's username and password. Enter its default username "**admin**" and password "**admin**" and then click "OK" to enter the system


- Please make sure you are using Internet Explorer 7 or above (IE 10 is NOT yet supported).
- If you are running Windows Vista or 7, please make sure you are running Internet Explorer with the "administrator" privilege.

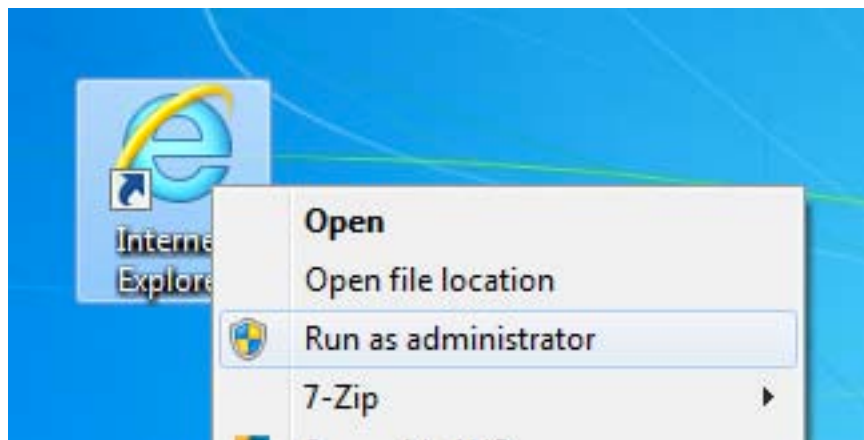


Access the NVR with its default IP address

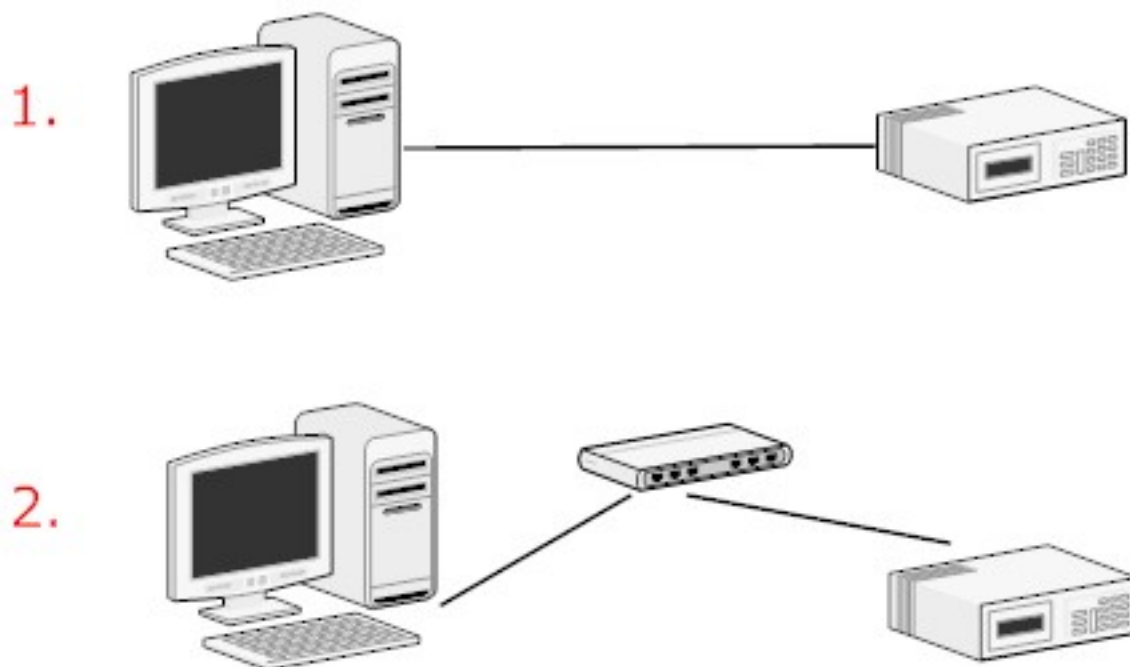

The NVR comes with a pre-configured static IP "**192.168.101.50**". However, it is only used when there is no DHCP server presented in the network. The NVR will turn on its DHCP server function and act as the DHCP server in the network. To connect to the NVR, use a PC that is on the same network over a switch or hub, or connect the PC directly to the NVR using a crossover CAT5 Ethernet cable.

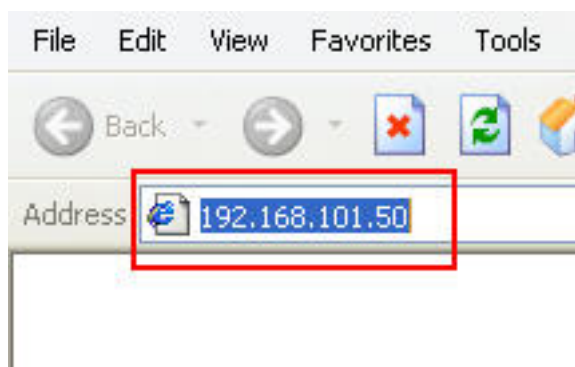


The PC that is connected directly to the NVR (or within the same local area network) should receive an IP from the NVR. Simply access the NVR from your web browser with its IP address

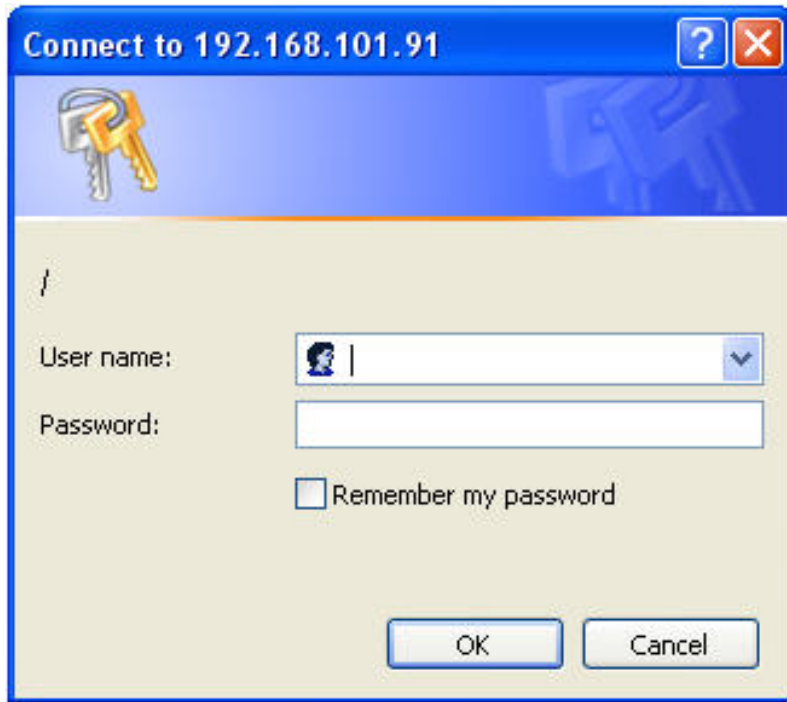

Again, you should be prompted for the username and password. Enter its default username "**admin**" and password "**admin**" and then click "OK" to enter the system

Set up Password

"NVR Setup" → "System Configuration" → "Users Account"

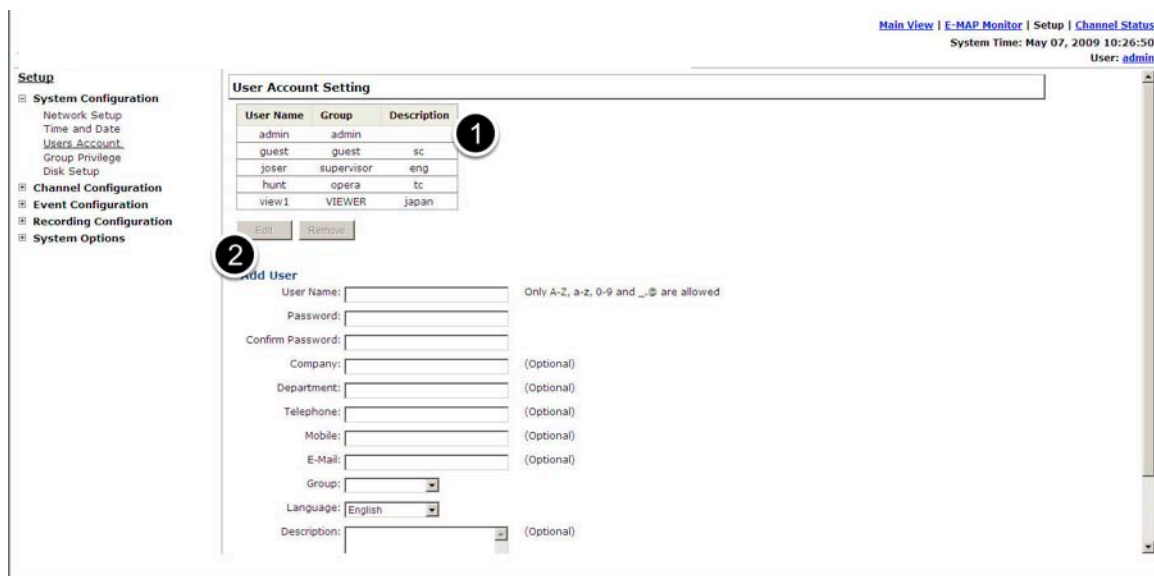


The default login username and password is admin/admin. To change the password of the admin account, go to "NVR Setup" --> "System Configurations" --> "User Account", click on the "admin" account in the account list then press the "edit" button to change its password. Finally, click "Apply" to save the change.

Camera Installation


Add a Camera -- Automatic Search

"NVR Setup" → "Channel Configuration" → "Channel Setting"

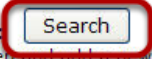Click Search to Add: 

* You may skip this step and add a new camera by manually entering camera's settings in the "Camera Information" section

Brand	Model	IP Address	HTTP Port
AVTech	FIX	192.168.101.25	80
Panasonic	BB-HCM515A	192.168.101.23	80
Axis	215 PTZ	192.168.101.21	80
Axis	212 PTZ	192.168.101.24	80
Axis	Q7401	192.168.101.28	80
Axis	207W	192.168.101.20	80
SONY	SNC-RX550N	192.168.101.27	80
SONY	SNC-RZ25N	192.168.101.26	80

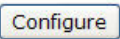 *select a camera from the search result and click configure to "Configure" setting below.

Click the "Search" button to perform the camera search.



You will be prompted to install Active Control component in order for the search to function properly. Go ahead and click "Install"

Network Communication

After that, the search should begin and its status should be displayed:

Click Search to Add:

* You may skip this step and add a new camera by manually entering camera's settings in the "Camera Information" section

Brand	Model	IP Address	HTTP Port
AVTech	FIX	192.168.101.25	80
Panasonic	BB-HCM515A	192.168.101.23	80
Axis	215 PTZ	192.168.101.21	80
Axis	212 PTZ	192.168.101.24	80
Axis	Q7401	192.168.101.28	80
Axis	207W	192.168.101.20	80
SONY	SNC-RX550N	192.168.101.27	80
SONY	SNC-RZ25N	192.168.101.26	80

Select a camera from the search result and click configure to "Configure" setting below.

Found cameras should be listed and simply select a camera from the list and press "Configure"

Add New Channel:

Channel ID:

Channel Name:

IP Address:

User Name:

Password:

HTTP Port:

Its corresponding information should be displayed in the "Camera Information" section. Enter its username and password and select the channel ID and name the camera.

Detect ← Once you fill out above information, click "Detect" to retrieve camera settings

Additional Camera Information

Audio Port:

Video Port:

Live video Format:

Live Video Frame Rate:

Live Video Resolution:

Live Video Quality:

Click on "Detect" to establish connection between the recorder and the camera. If a connection is established successfully, the camera's detailed information will be displayed as below.

Adjust its video format, frame rate, resolution or bitrate...etc if you wish and then click "Add" to finish adding the camera

Add a camera manually

Add New Channel:

Channel ID:

Channel Name:

IP Address:


User Name:

Password:

HTTP Port:

Simply follow the instruction described above but instead of using the "Search" function, enter the camera's IP address and credential in the "Camera Information" manually.

Live View

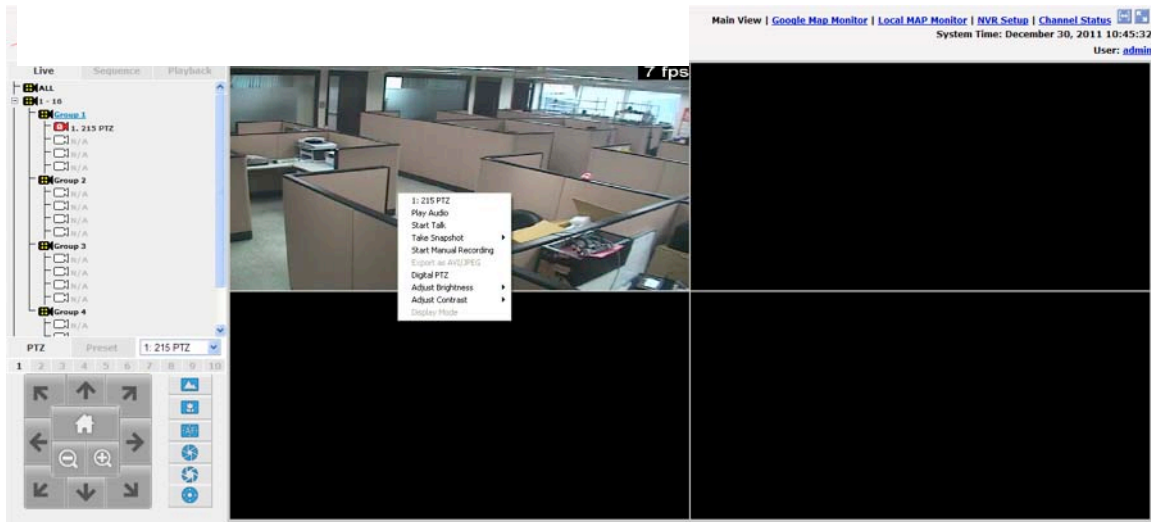

The “Live View” page provides the following functions:


- Retrieve camera's video stream
- Retrieve camera's status
- Perform Live Sequence Viewing
- PTZ Control
- Perform PTZ Preset Sequence viewing
- Perform manual recording
- Take snapshot
- Receive audio of a video stream
- Send audio
- Control “Buzzer”
- Change web UI display language

(!) Note


The systems will detect current security settings of Internet Explorer upon logging in to the web UI. You will see warning message as shown below if you are running Internet Explorer with a customized security settings, in which the UI will be displayed with errors. Simply click on the message to run the compatibility correction tool.



You will be prompted to confirm the action before running the tool. You can click "Run" to execute the tool now or "Save" and run it at a later time.

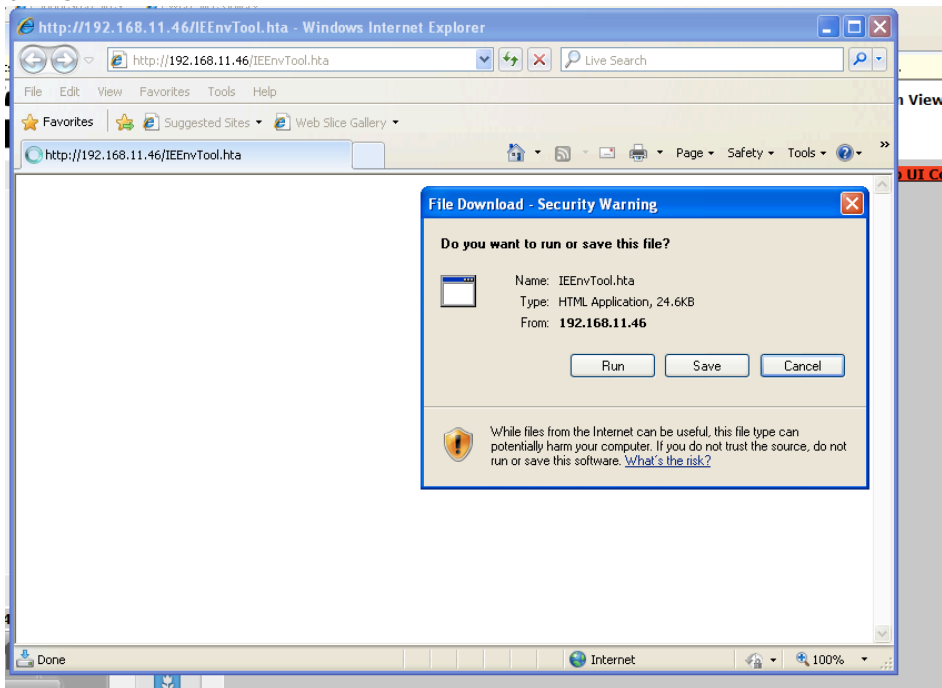


An additional window will pop up displaying the current security settings of your Internet Explorer (as shown below). Simply click on "Change my settings to ensure best compatibility" to proceed.

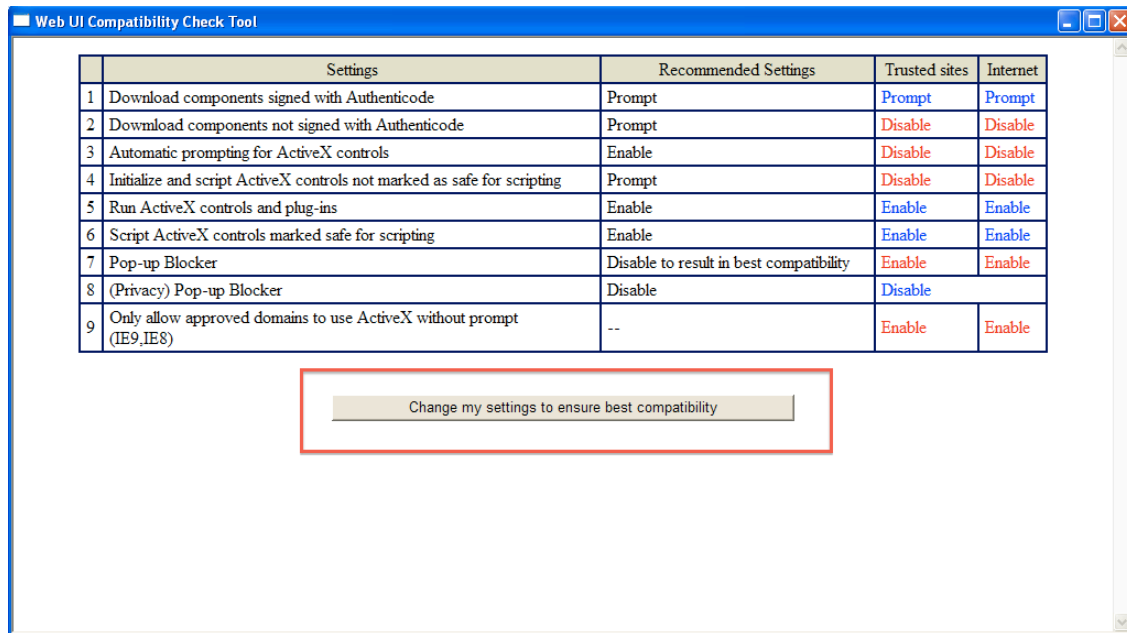

Click "OK" to finish. Restart Internet Explorer for the settings to take effect.

Retrieve camera's video stream

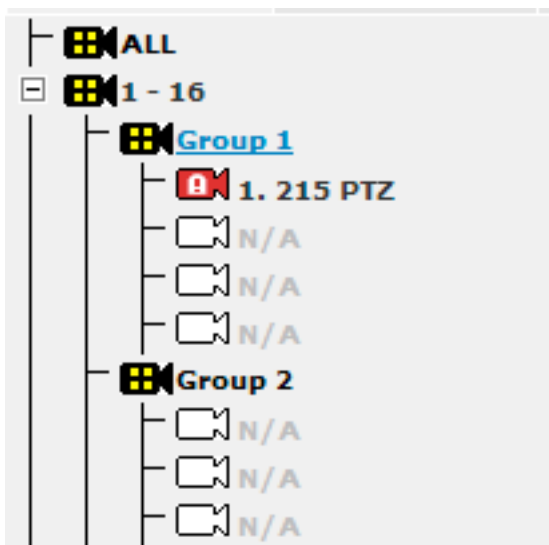

The camera list is expanded and displayed on the Live View page:

- Click "All" to display videos of all 32 channels
- Click "1-16" or "17-32" to display videos of in 16-video view
- Click on a "Group" (ex. Group 1) to display videos from cameras under that group in quad view
- Click on any camera to display video in single-view mode

Retrieve camera's status

The camera list can show each camera's current status. Each status is represented with different colors:

Blue: Connected


Gray: Disconnected

Red: Performing event recording


Green: Recording (manual/continuous/schedule)

White: This channel is not configured with any camera

Perform Sequence Viewing

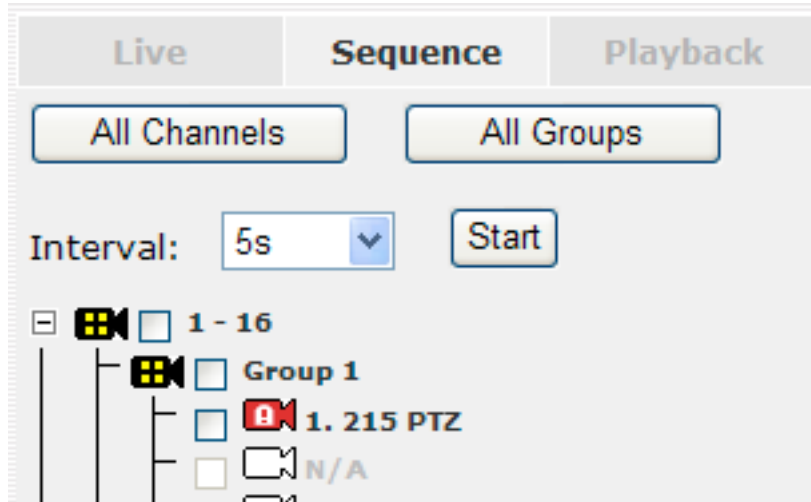


Sequence view is a function that allows you to view multiple video streams from certain cameras in sequence automatically without having to select them one by one. To perform sequence view, select "SEQ View" from the upper-left hand corner

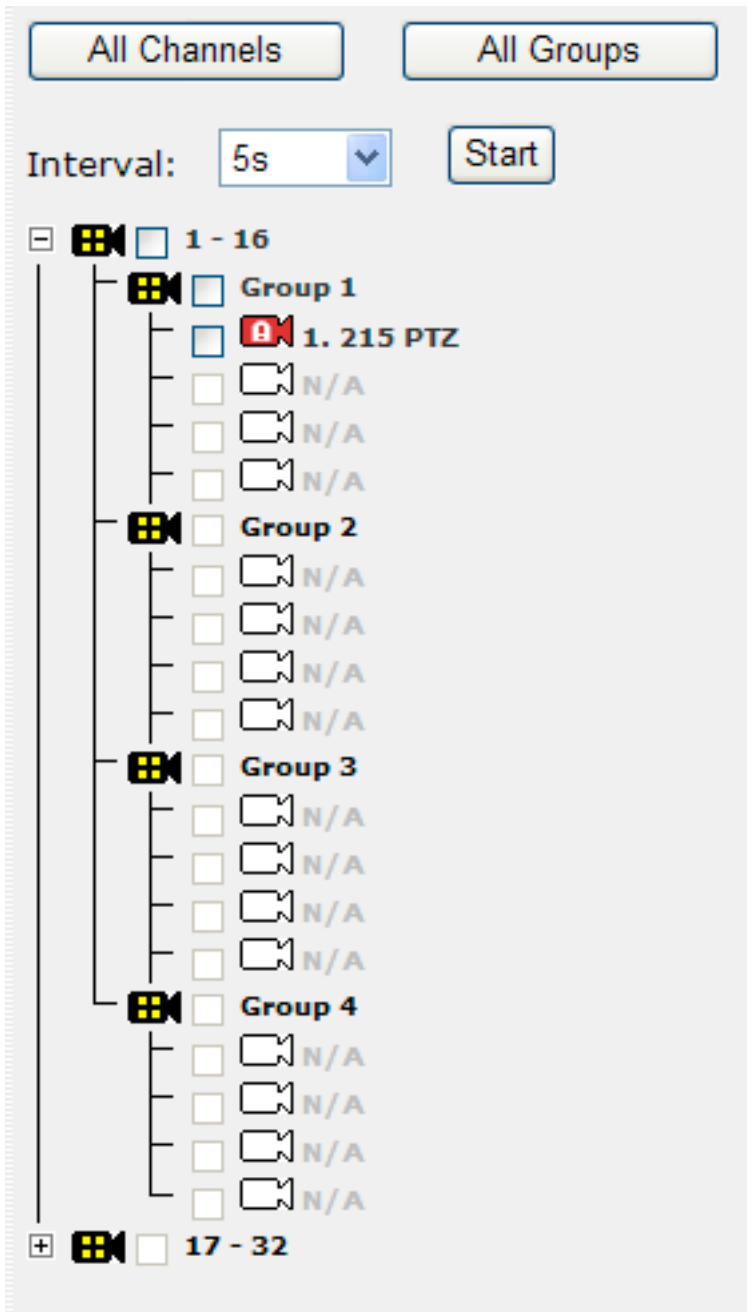


Next, select one or more camera(s) or camera group(s) for sequence viewing:

Select "1-16" and "17-32" to start sequence viewing in 16-video view
 Select "Group(x)" to start sequence viewing in quad view
 Select "cameras" to start sequence viewing in single video view

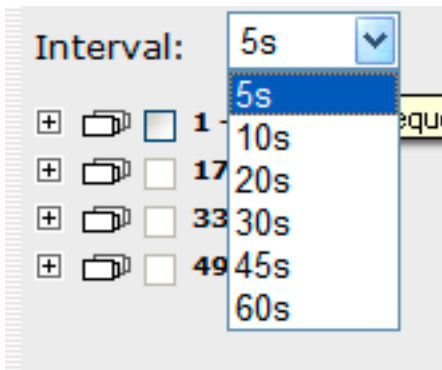


Then, select dwell interval from the drop-down menu and click "Start" to begin.


PTZ Control

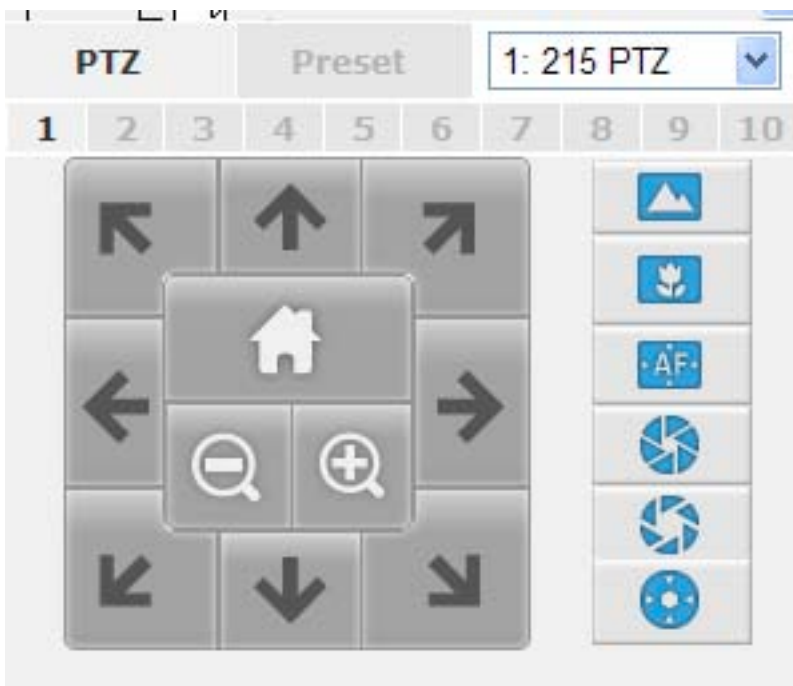

PTZ control provides functions to pan, tilt, zoom, and PTZ camera as well as the ability to adjust camera focus and iris.

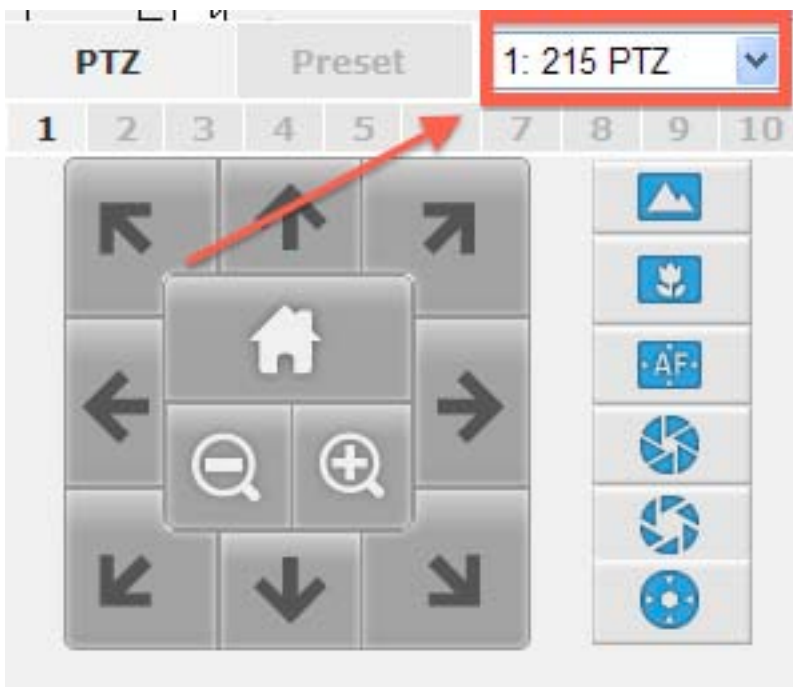


Only PTZ capable cameras will be listed in the drop-down menu

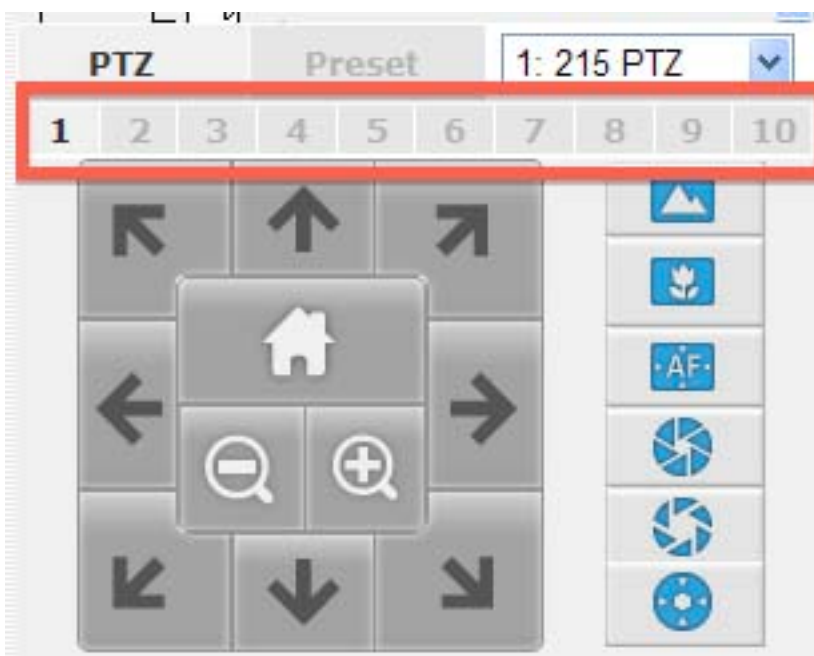

The bar highlighted above controls the moving angle. Larger number means bigger movement angle.

Perform PTZ Preset Viewing

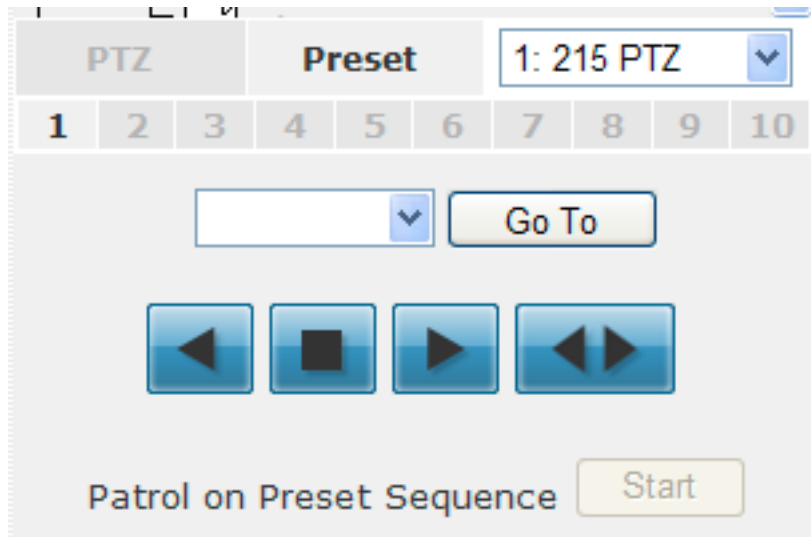


There are three functions provided in the "Preset" section:


- Perform preset point viewing of a particular camera
- Auto pan a particular camera
- Perform preset point sequence viewing

(In order to use this function, one must configure camera's preset points in "NVR Setup" >> "Channel Configurations" >> "PTZ Setting">>"PTZ Preset" first)

Preset Point Viewing

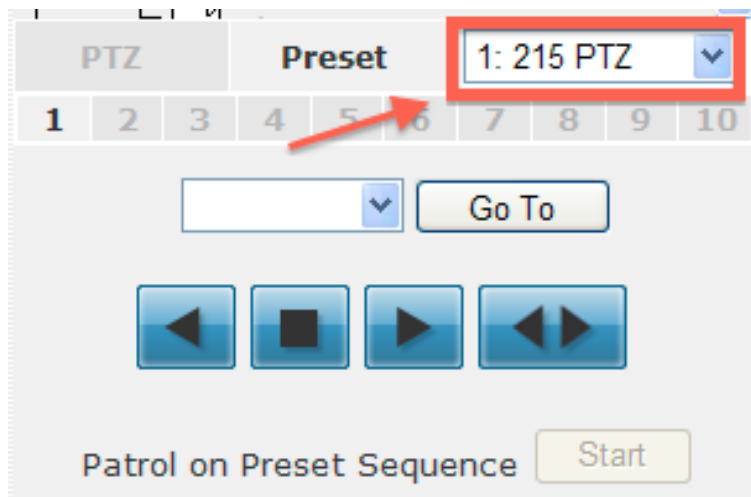


Start by selecting a PTZ camera from the drop-down list

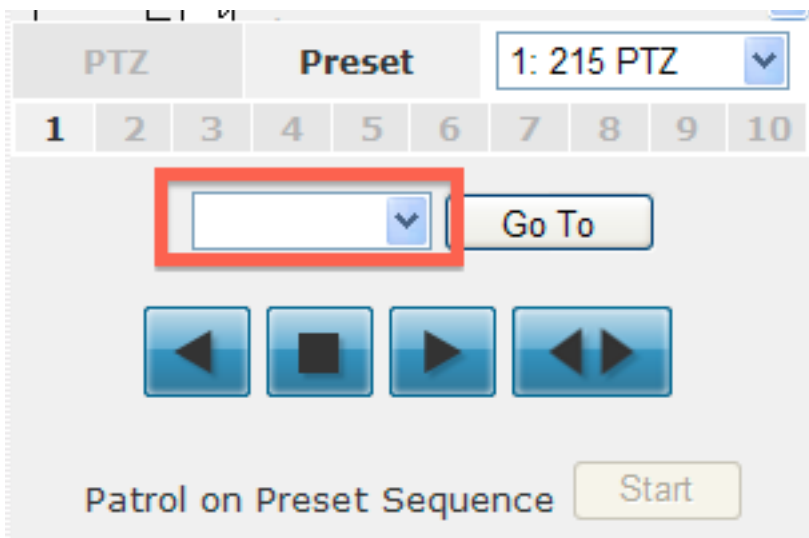

It's available PTZ preset points will be listed in the drop-down list shown below. Click "Go to" to move to the selected position.

Auto Pan Viewing

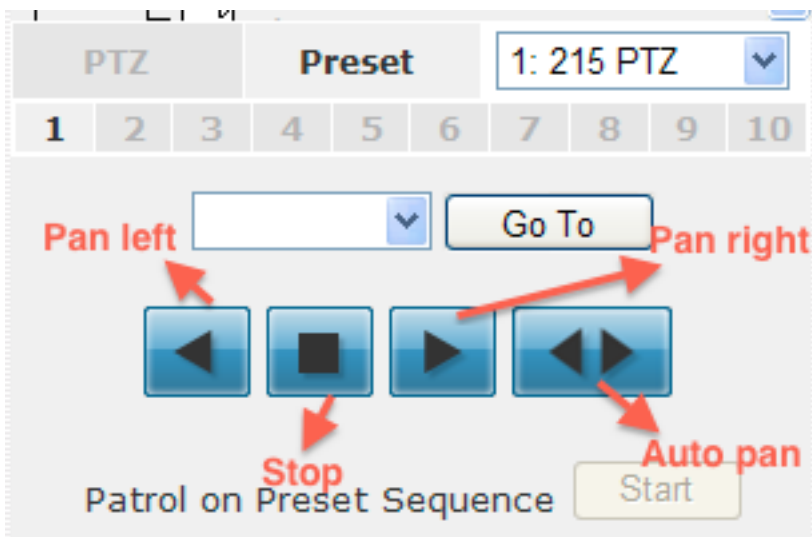


Use the Auto Pan Control buttons to pan right, left and stop auto pan.

Note:


Certain cameras do not support bi-directional pan movements. Use the "Autopan" button for such cameras

Preset Point Sequence Viewing

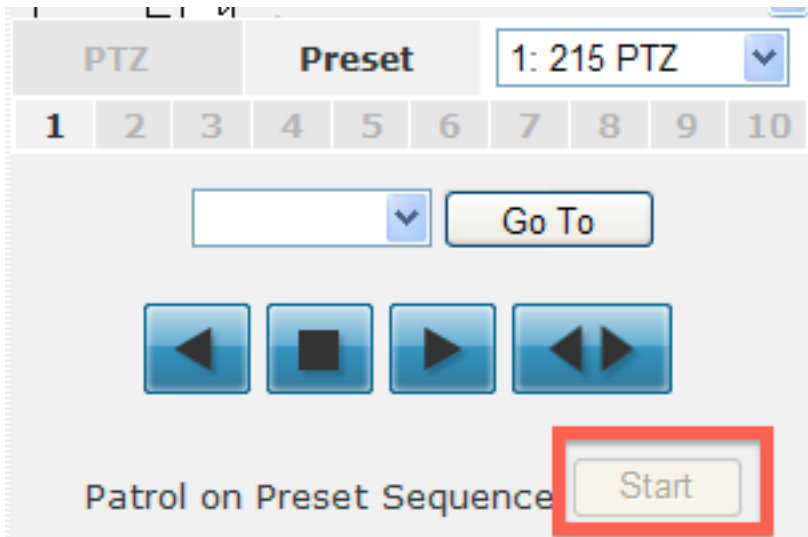

This function allows you to view multiple preset points from a video of a camera without having to select them one by one. Once you have defined the preferred preset points in **"Channel Configurations" >> "PTZ Setting" >> "PTZ Sequence"** under the **"NVR Setup"** menu, click **"Start"** in the lower-left hand corner in Live View under **"Preset"** and the recorder will begin to display videos from those preset points in sequence automatically until you click **"Stop"**

Live Video Controls

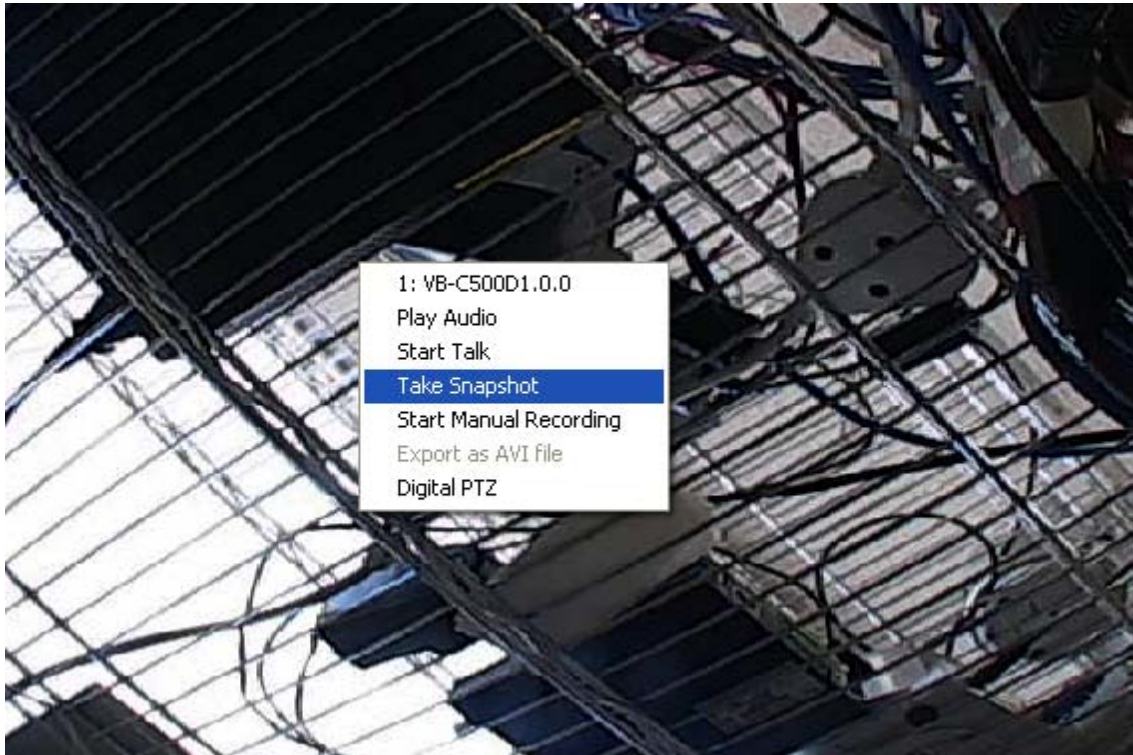


Users can perform certain functions to a live view video. They can be accessed by right clicking on a video.

Display ratio and full screen




By default, the videos are set to fill the whole video window, to display its original size or ratio, use the button in the upper-right hand corner.


Take a snapshot of a live video

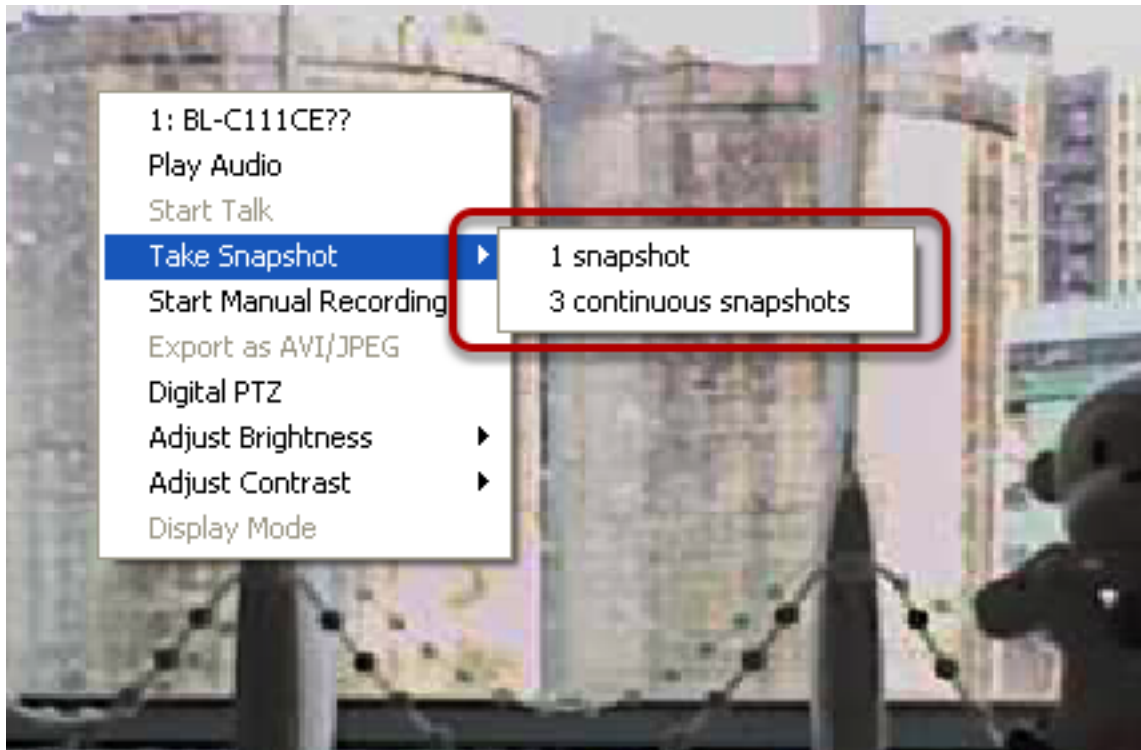


To take a snapshot of a live video, right-click on the video and select "Take Snapshot". You are given options to take 1 snapshot or 3 continuous snapshots.

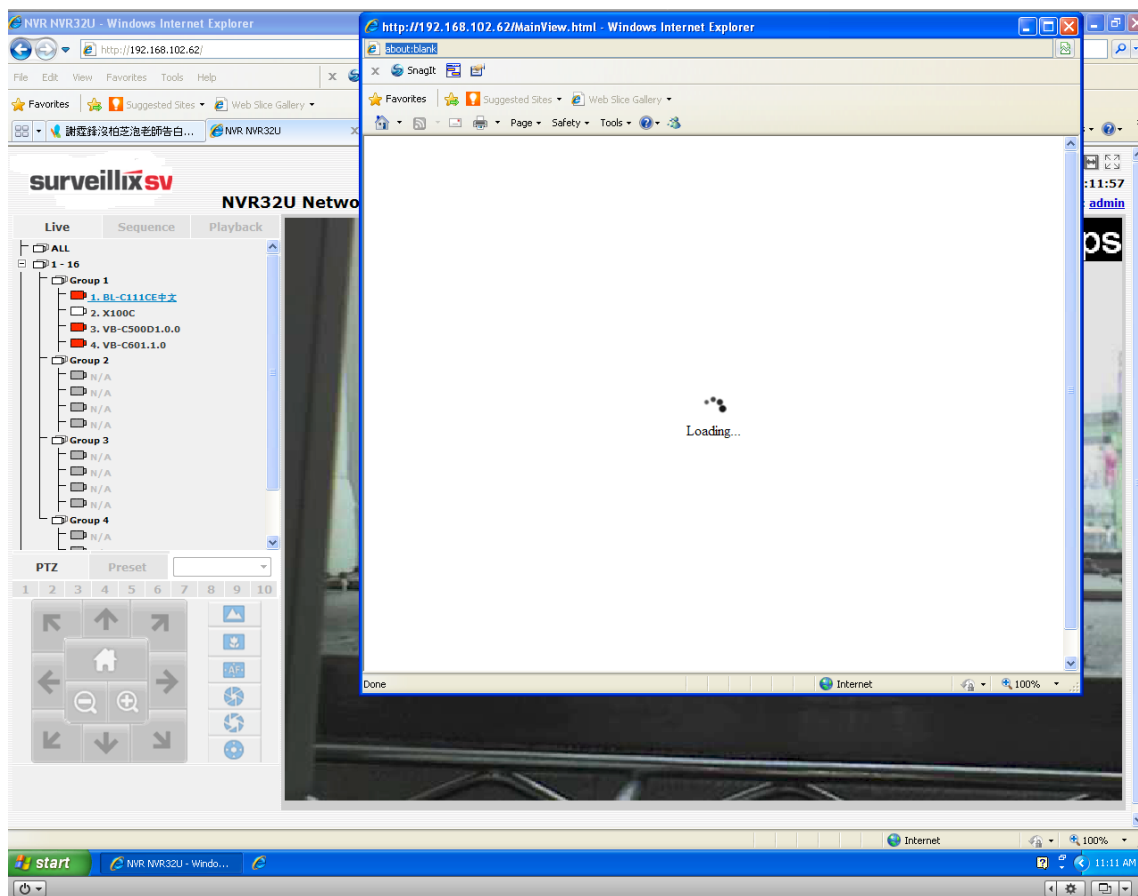


A new window should display and load the snapshot image.

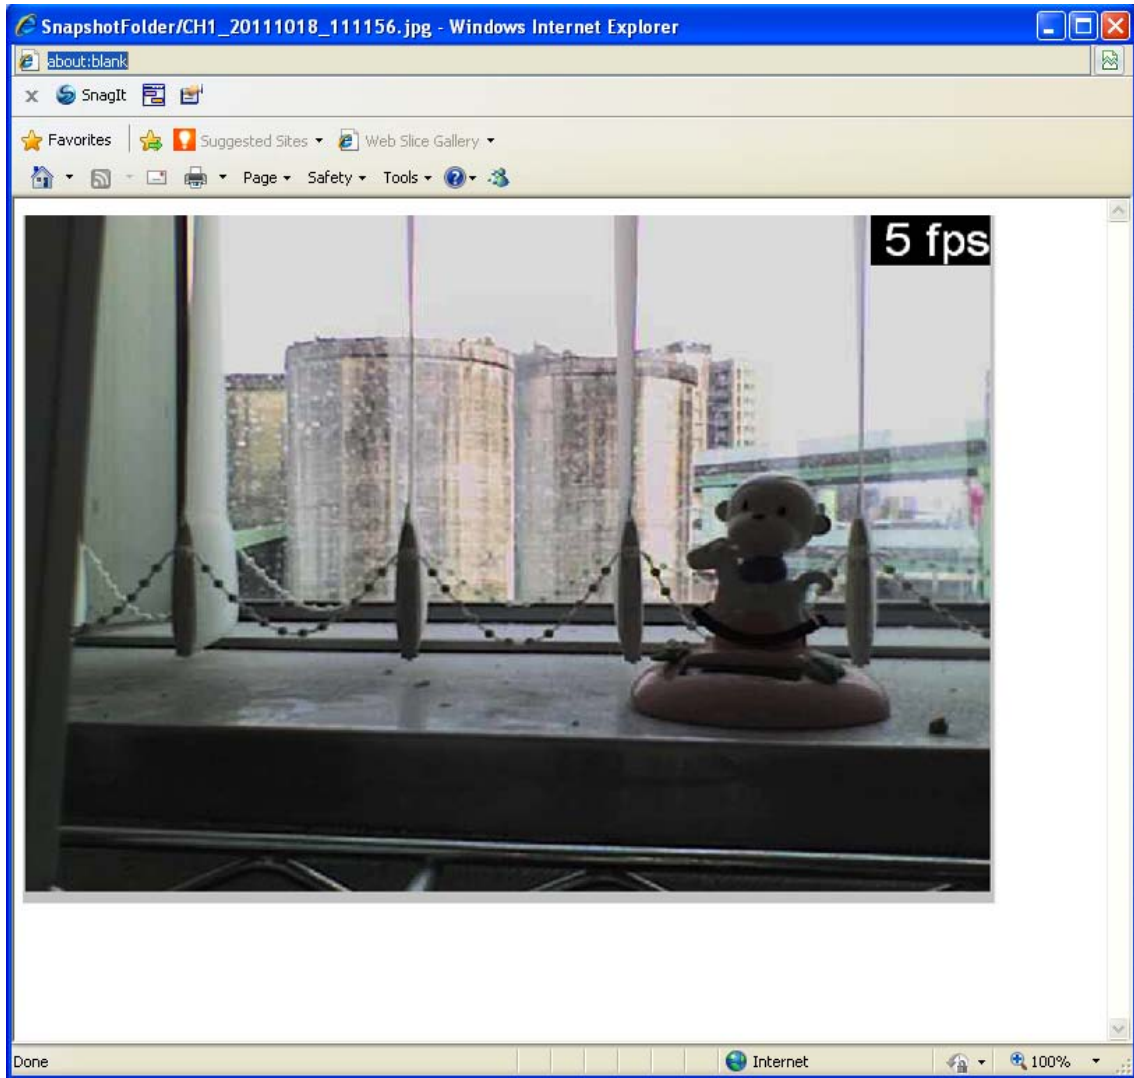


The new window displays the snapshot.

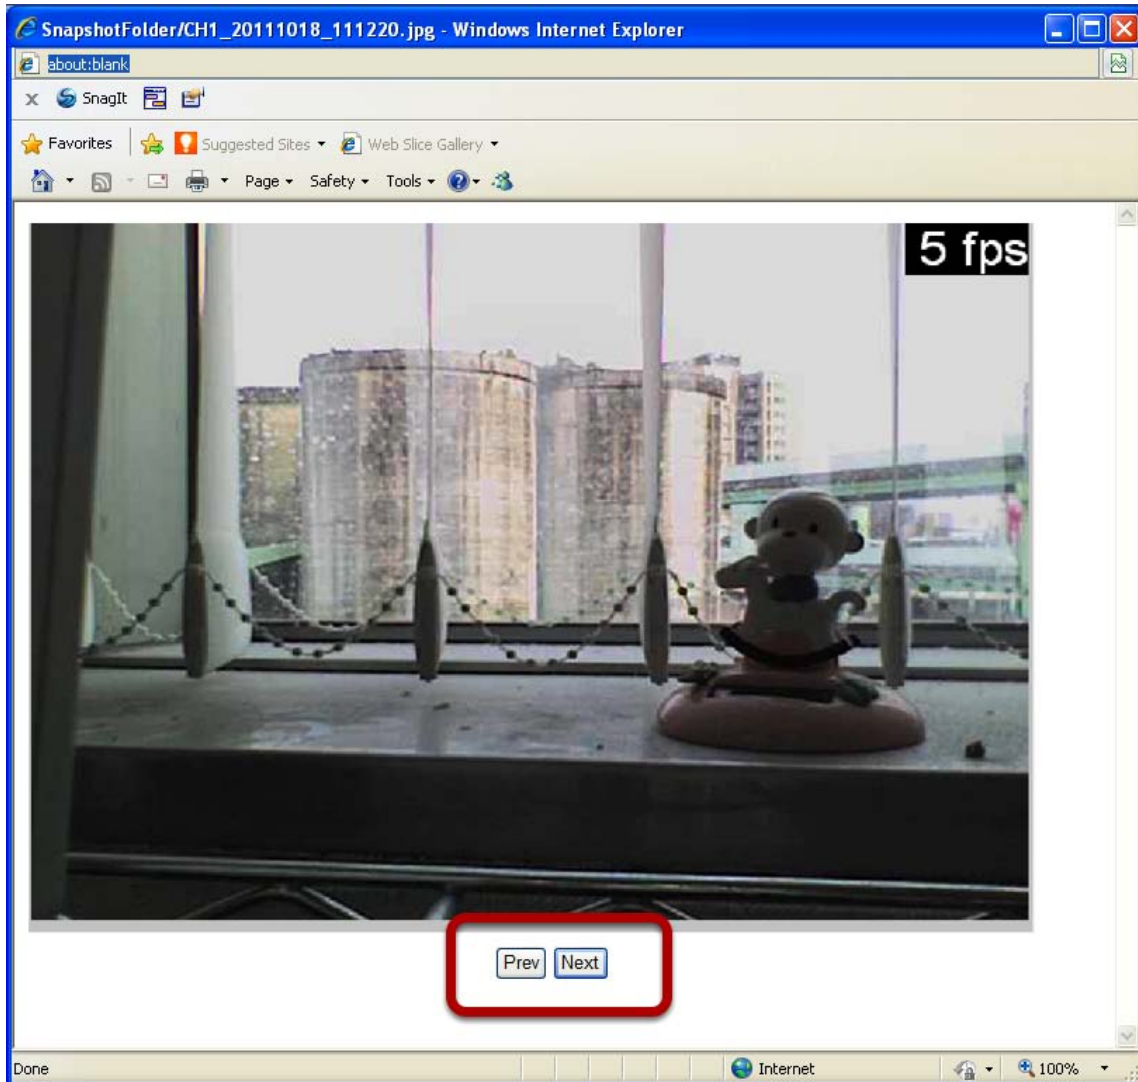

If the "3 continuous snapshots" option is chosen, the new window displays snapshots and lets you view them individually by using the "Prev", "Next" buttons shown above.

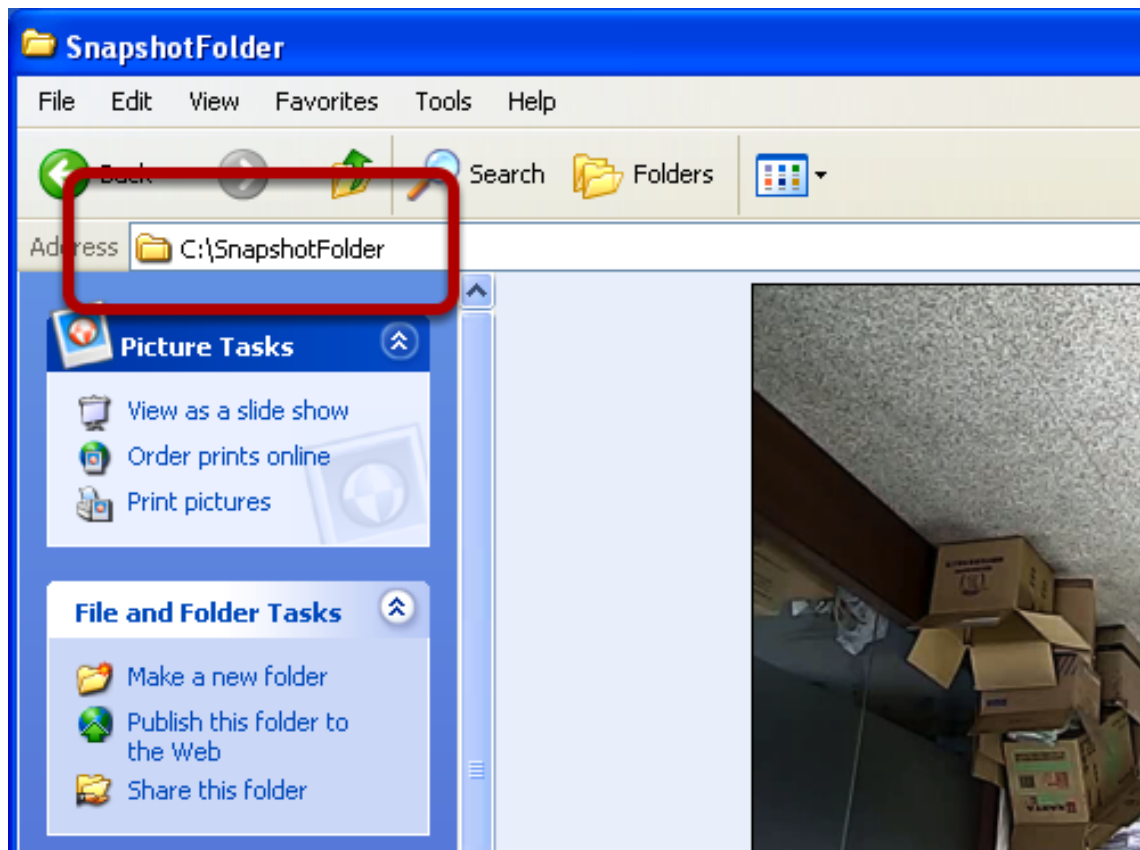


However, as soon as a snapshot selection is made, the snapshots are automatically saved to x:\SnapshotFolder ("x" represents the partition where Windows is installed, e.g.: C:\)

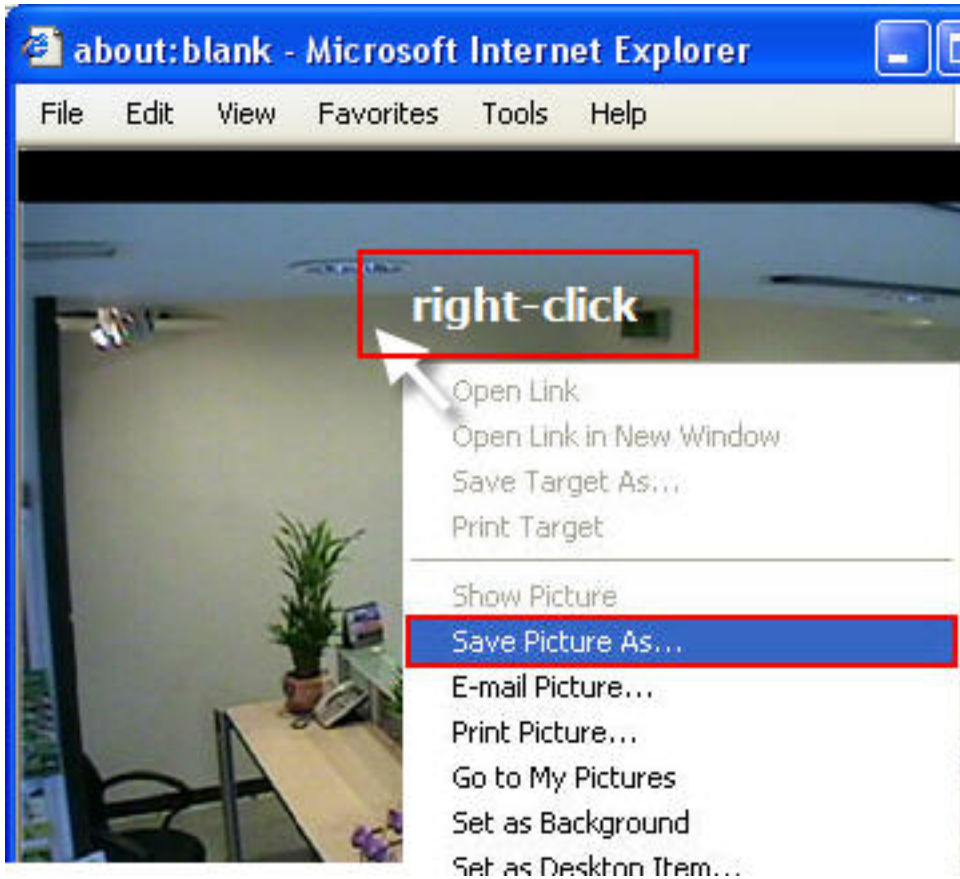


You can right-click anywhere on the image and select "Save Picture As..." to save the images somewhere else if you wish.

Perform Digital PTZ

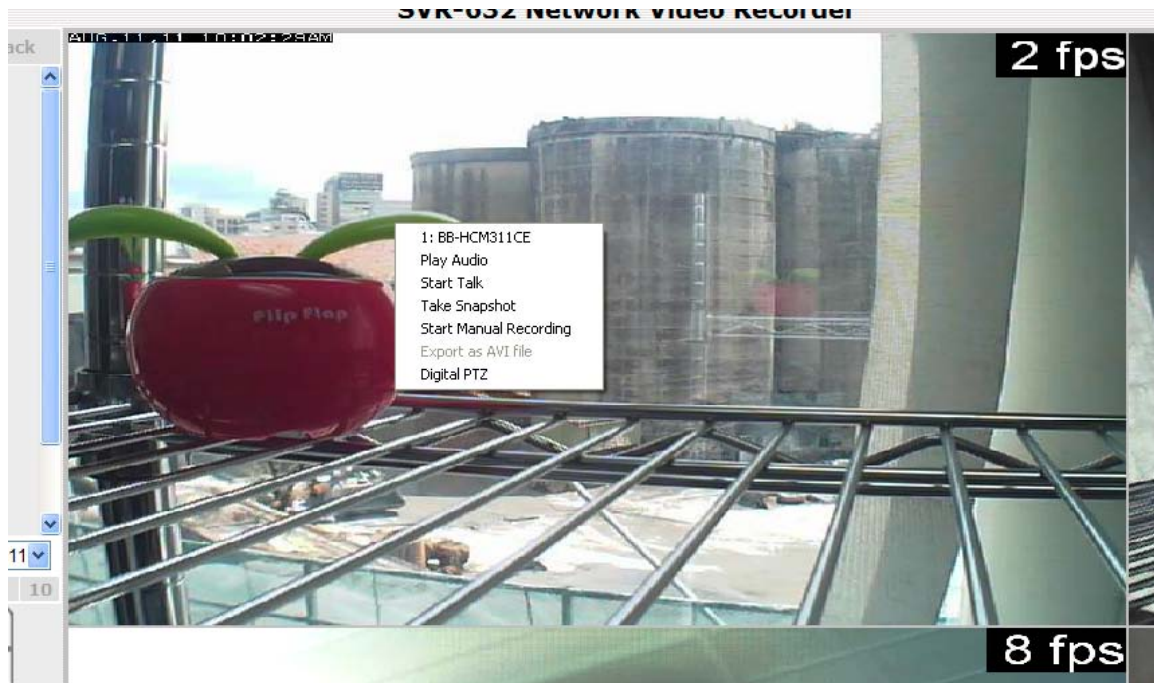

To perform digital PTZ on a particular channel, right-click anywhere on its video and select "Digital PTZ".

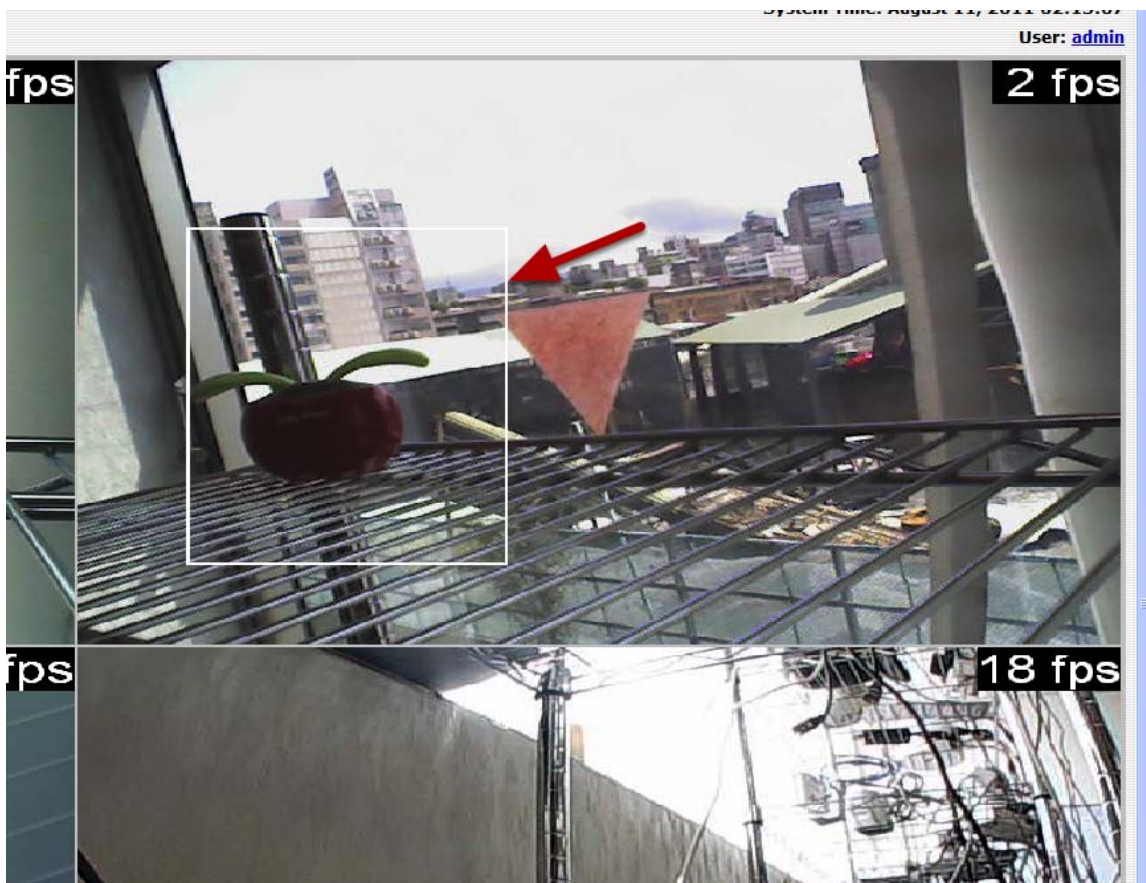


Next, hold the mouse left button and draw a square on the video to specify the zoom in area




Once the image is digitally zoomed in, use the mouse scroll button to further zoom on or zoom out the image. Hold and left-click on the image and move the mouse to move the zoomed in video.

Adjust Brightness for Live Video

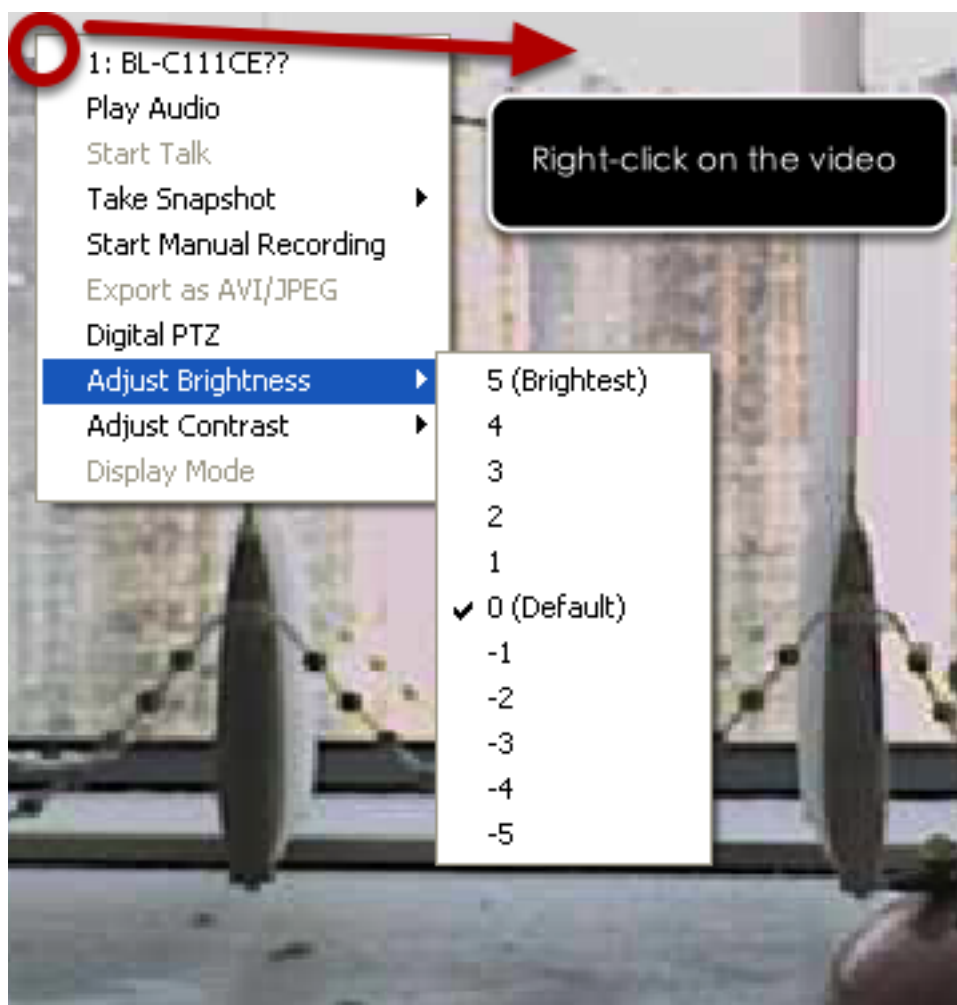



You are able to adjust brightness of the live video from the right-click menu.

Adjust Contrast for Live Video

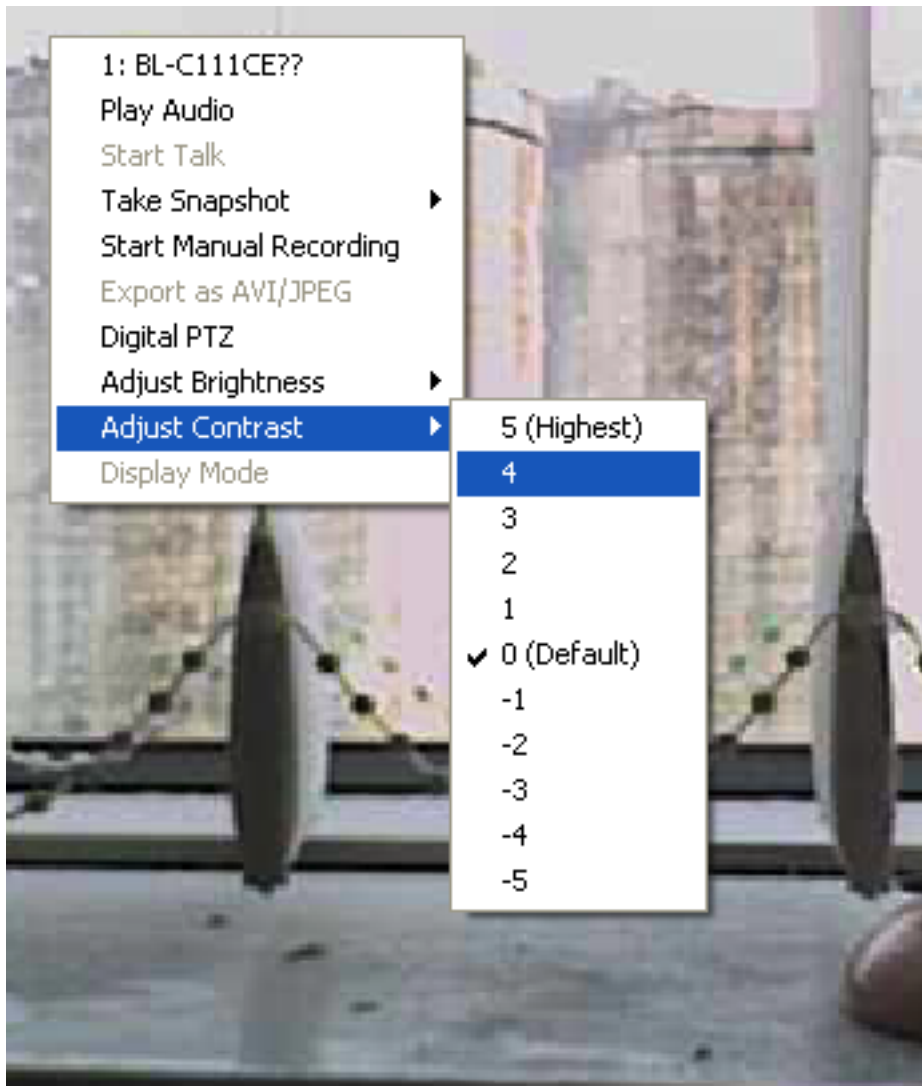

Same thing as the brightness, you can set the contrast for the live video from the right-click menu as well.

Change Web UI Display Language

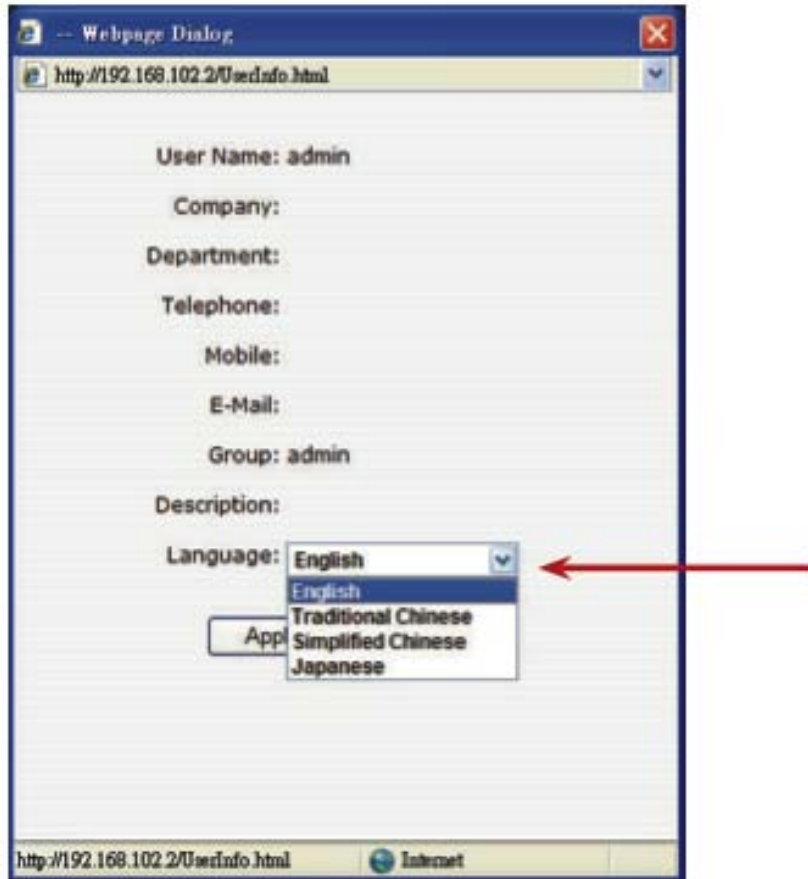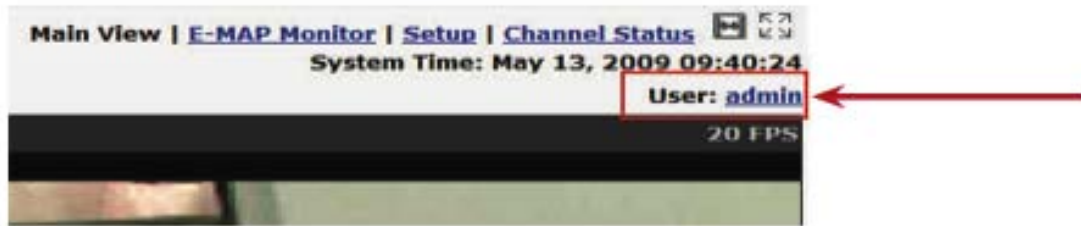

You can change the web UI display language from the current login username link located at the upper-right hand corner. Click on the link opens up a new window, which displays detail information about the user as well as a drop-down menu that lets you change the display language.


Live View through iPhone Safari Browser




You can use iPhone and perform single channel live view to the NVR by using its Safari browser. To be able to view the live video through the Safari browser, make sure "javascript" is on under "Settings" >> "Safari" >> "Javascript"



Once Javascript is enabled, click the "Home" button on the iPhone to go back to the home screen and open the Safari browser

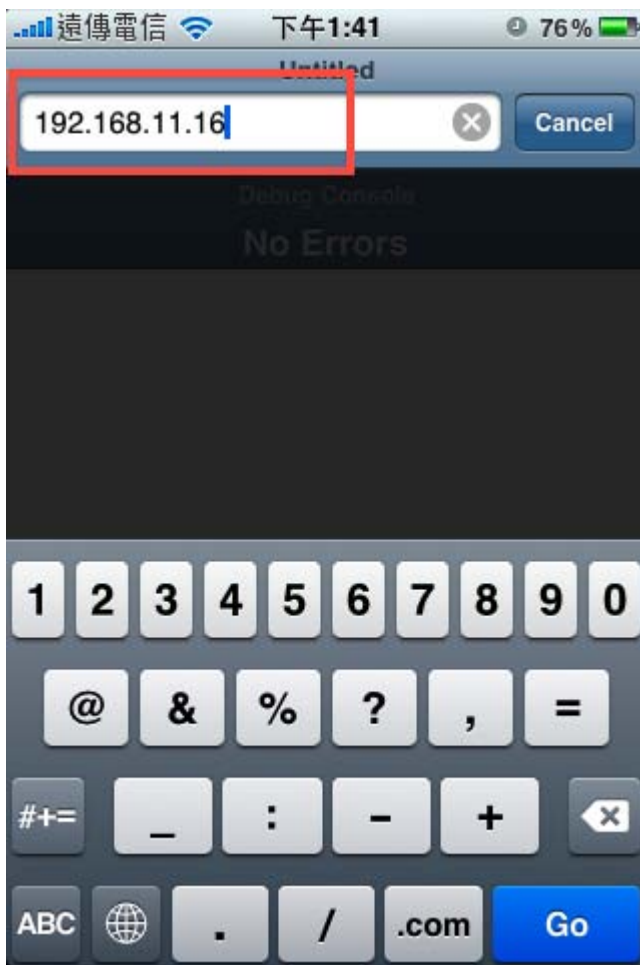

Type in the IP address of the NVR in the address bar

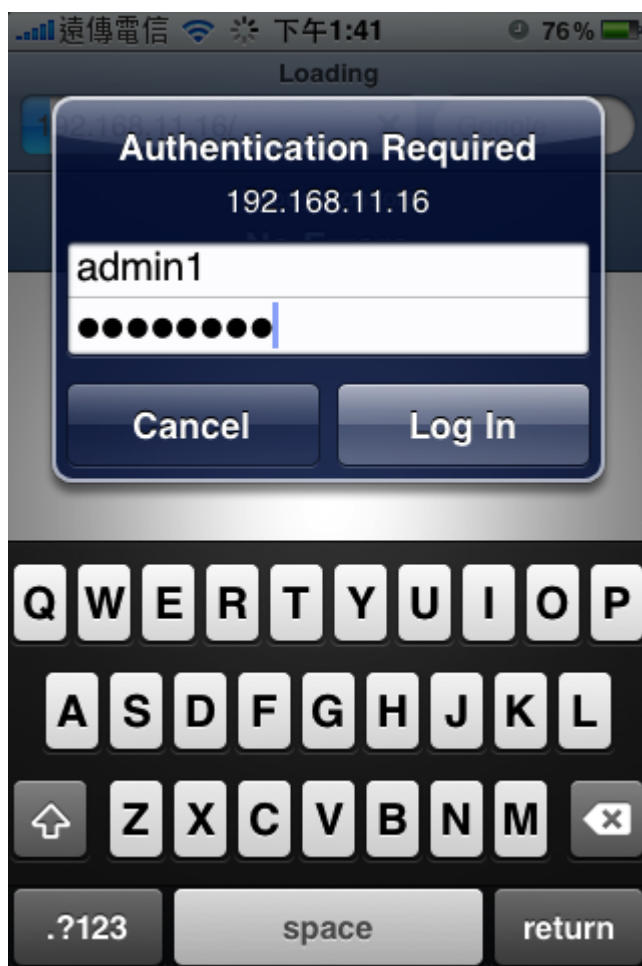


You should be prompted to enter the username and password to access the NVR



Upon successful login, you should see the live view video of the first channel



Click on the "Channel" drop-down menu to select other cameras

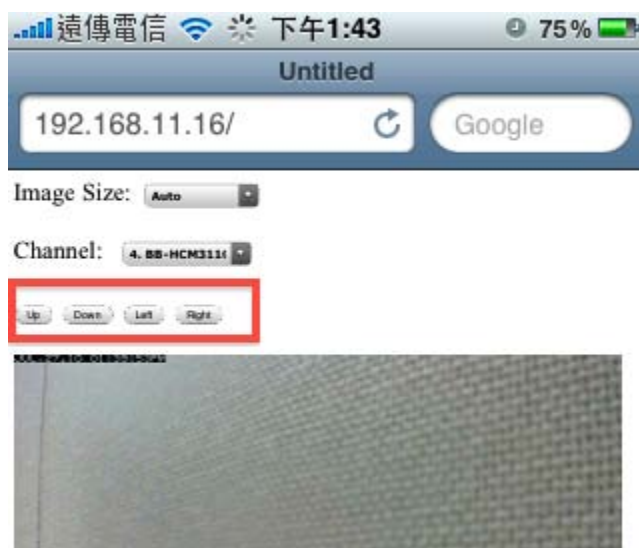


If a PTZ camera is selected, the corresponding control buttons will display (control PT only)

** Please note that this function is camera dependent and is not available to all cameras. Certain cameras do not allow adjusting image size and the selection "Auto" will be used.*


Live View through Blackberry Phones




You can use Blackberry and perform single channel live view to the NVR by using its Safari browser. To be able to view the live video through its browser, make sure "javascript" is enabled under "Browser" >> "Menu button" >> "Options" >> "Browser Configuration"

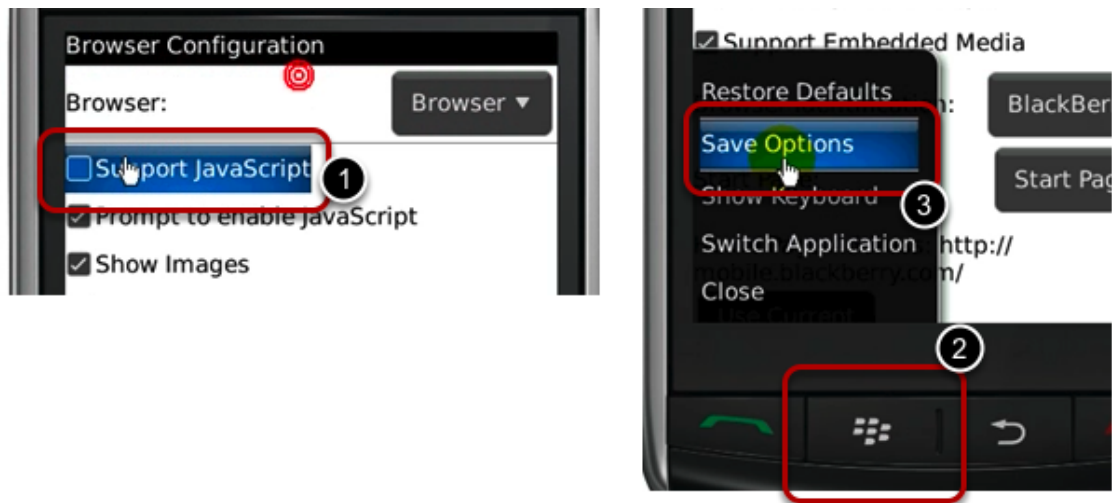

Enable the "Support Javascript" option and click the menu button and click "Save Options"

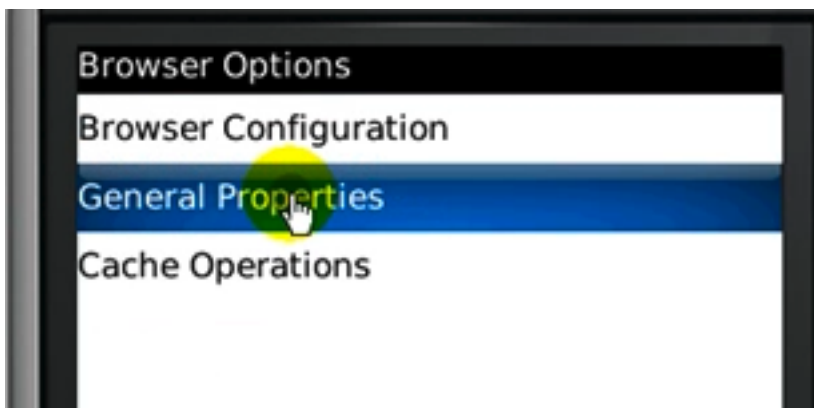

Go to "General Properties"

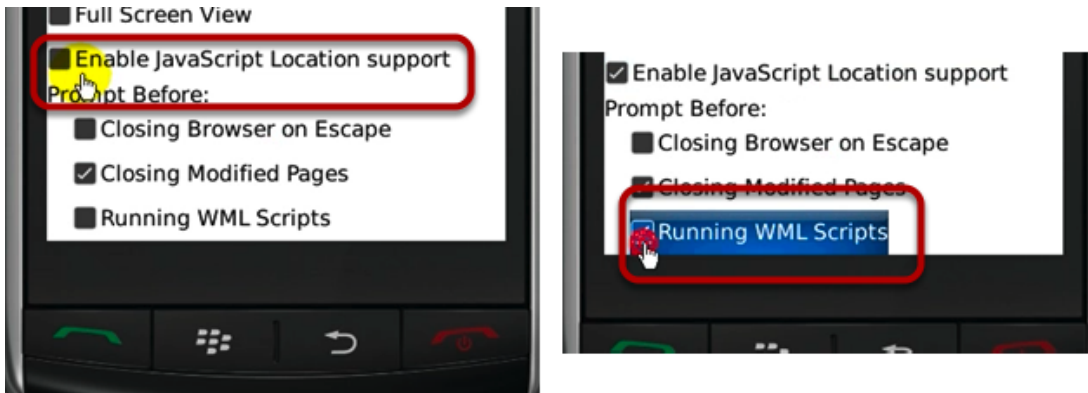

Make sure two options illustrated above are enabled



Press the menu button and click the "Save Options" to save settings



Press the button highlighted above to go back to the browser



Type in the IP address of the NVR in the address bar



You should be prompted to enter its username and password for access

Playback



Playback is a function that allows you to play one or more videos that were previously recorded by a chosen recording method or due to an event trigger. The NVR offers synchronized playback from up to 4 channels and various types of search methods are provided to help you find the footage you need quickly.

You can turn on or off the audio of a recorded video at your choice if audio was also recorded during the recording of the video.

Playback video can be viewed in full screen and snapshots can be taken and saved during a video playback.

Methods to Search Playback Videos

The NVR offers three methods to quickly help users find videos that were previously recorded:


- **Search by time:** *Specify a time range and search videos recorded within that range*
- **Search by event:** *Find videos that were recorded due to event triggers*
- **Most Recent Events:** *Displays the most recent 15 events*
- **Play by start time:** *Enter a specific time a video was recorded to start playing back the video*

Search by time chart


The screenshot shows a software interface for searching by time chart. It features three tabs: 'Live', 'Sequence', and 'Playback'. The 'Playback' tab is selected. Below the tabs is a 'Playback Info.' section with fields for 'Channel:', 'Play Time: ---', and 'Speed: ---'. Below this is a 4x8 grid of buttons numbered 1 to 32. At the bottom, there is a 'Search mode:' label, a dropdown menu showing 'By Time Chart', and a 'Go' button.

1. Start by selecting which channel(s) you would like to perform a search on.
2. Select "Search by time chart" from the "Search Method" drop-down list and click "Go" to start the search

** Selected channels will be marked in red*

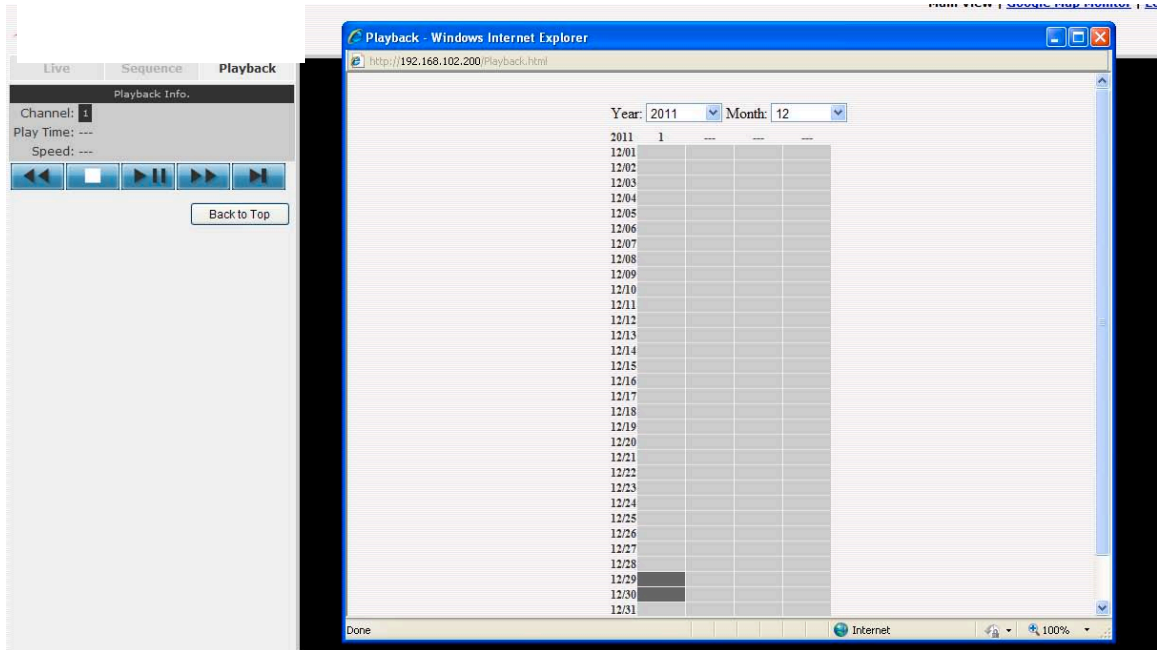


Results will then be displayed in a new dialog with a “Month/Channel” table and boxes marked in dark gray represent videos found in those dates. (* Videos from other cameras that are recorded on the same date will also be displayed)

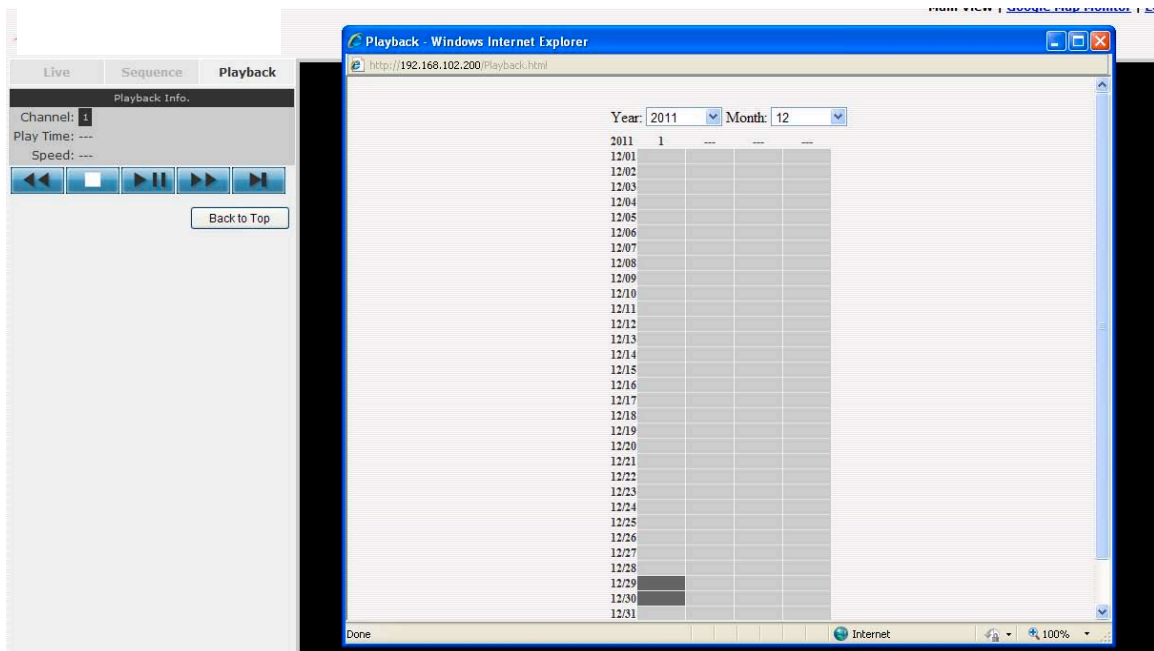

Clicking on a cell box marked with gray will take you to the "day" view of the selected month. Repeating the same step will eventually take you to the "second" view (5sec per cell box). Right-click anywhere or the "Back" button on the table will take you back to the previous view.

Click on the play button at anytime will start playing videos from the beginning of the current time view (ex. if the table is in the "month" view, click play will start playing from the first available clip of that month)

Search by event

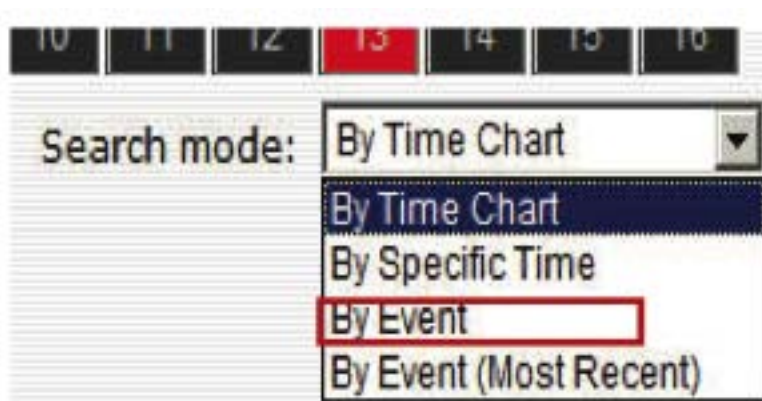


Start by selecting which channel(s) you would like to perform a search on.

Select "Search by event" from the "Search Method" drop-down list and click "Go" to start the search

The screenshot shows a software interface with three tabs: "Live", "Sequence", and "Playback". The "Playback" tab is active. Below the tabs is a "Playback Info." section with fields for "Channel:" (set to 1), "Play Time:" (---), and "Speed:" (---). Below this is a row of five playback control buttons: previous, stop, play/pause, next, and fast forward. The main area displays a list of search results, each preceded by a small icon and followed by a timestamp. The results are: "CH1 : 2011/12/29 20:05:52", "CH1 : 2011/12/29 20:06:11", "CH1 : 2011/12/29 20:06:50", "CH1 : 2011/12/29 20:06:59", "CH1 : 2011/12/29 20:07:07", and "CH1 : 2011/12/29 20:46:55". At the bottom, there is a date selector showing "December 29, 2011", a time selector showing "20 : 05 : 52", and two buttons labeled "Search" and "Back to Top".

Results will then be listed like what is shown below (displays the oldest record top down). Click on a particular result to start the playback. (* You can click "Next Search" to display the next 15 results.)

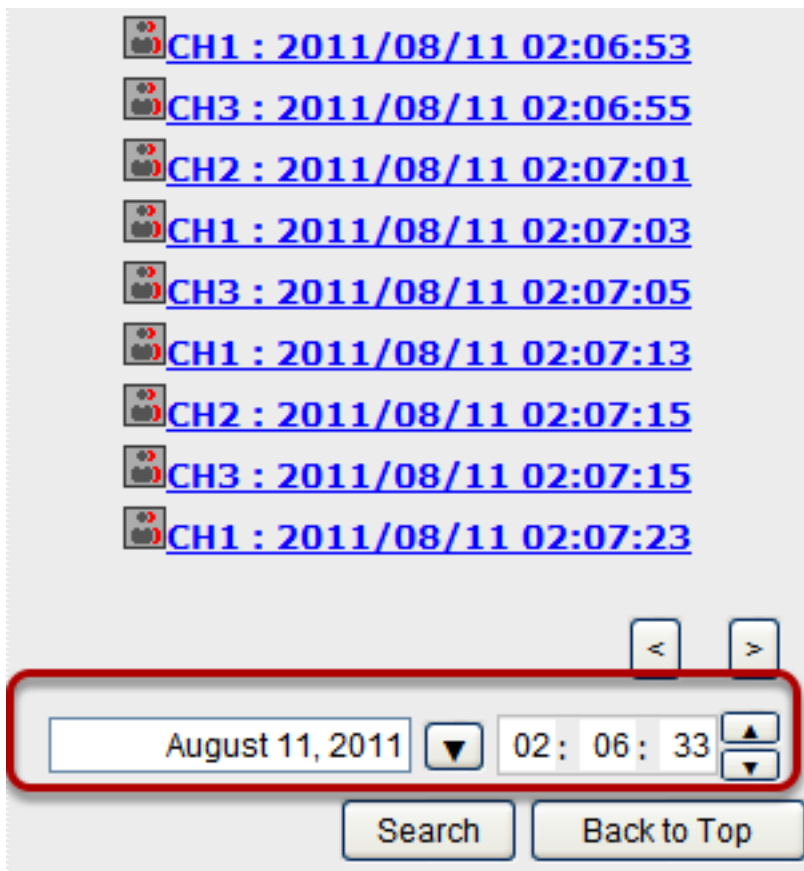


You may also specify a new start time to search and display results from then on. You can restrict the number of results to be displayed at once (max. 30) and perform the search again

Play by specific time



If you know when a recording was taken place, you may choose the "Play by start time" from the "Search Method" drop-down list

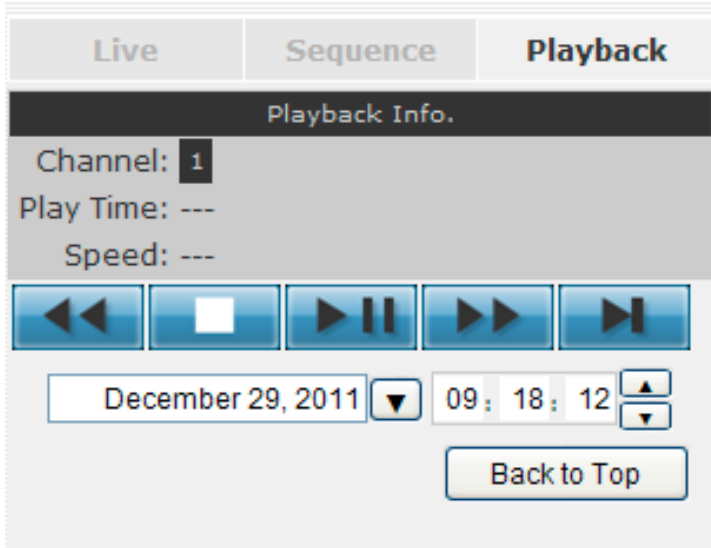

Then you will be prompted to enter a specific time and date for the recorded video.

Search by event (Most Recent)


Live	Sequence	Playback
Playback Info.		
Channel: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16		
Play Time: -----		
Speed: --		
1	2	3
4	5	6
7	8	9
10	11	12
13	14	15
16	17	18
19	20	21
22	23	24
25	26	27
28	29	30
31	32	
Search mode: By Event		
By Time Chart		
By Specific Time		
By Event		
By Event (Most Recent)		

This function quickly displays the most recent event recordings from the selected channels, displaying the most recent result top down.



You may click "Update" to update the list to display the most recent results.


Certain functions you can perform to the playback video

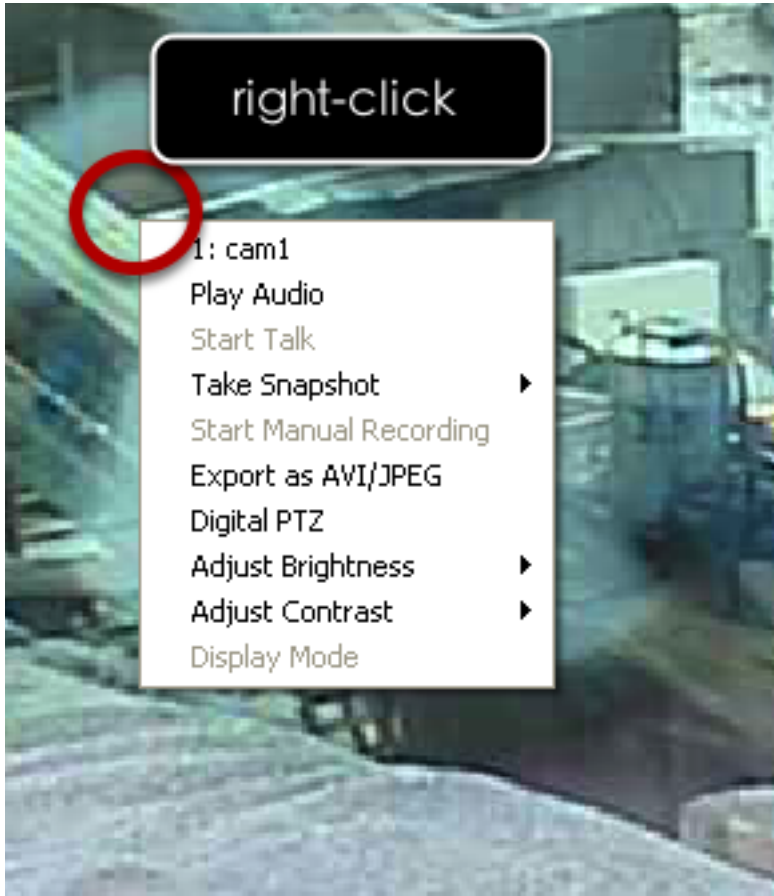


You can do the followings by right clicking on the playback video:

1. Play Audio
2. Snapshot
3. Export as AVI file
4. Digital PTZ
5. Adjust Brightness
6. Adjust Contrast


Take a snapshot of a playback video

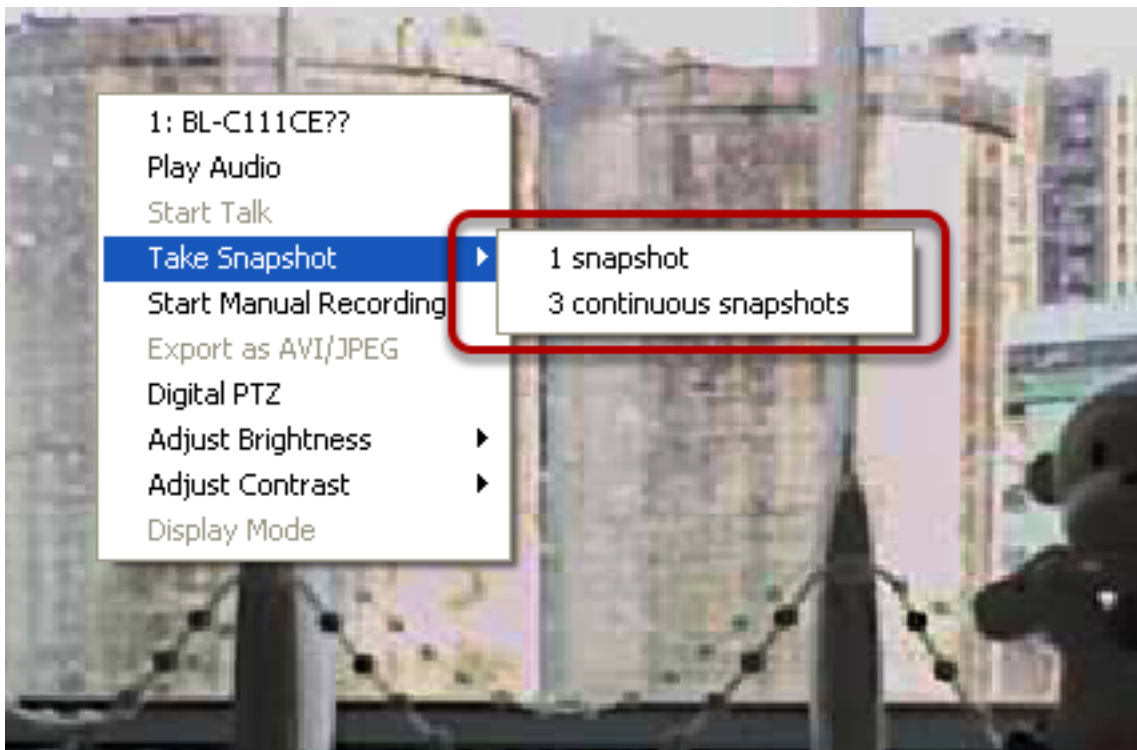


To take a snapshot, right-click on the video and select "Take Snapshot". You are given with options to take 1 snapshot or 3 continuous snapshots.

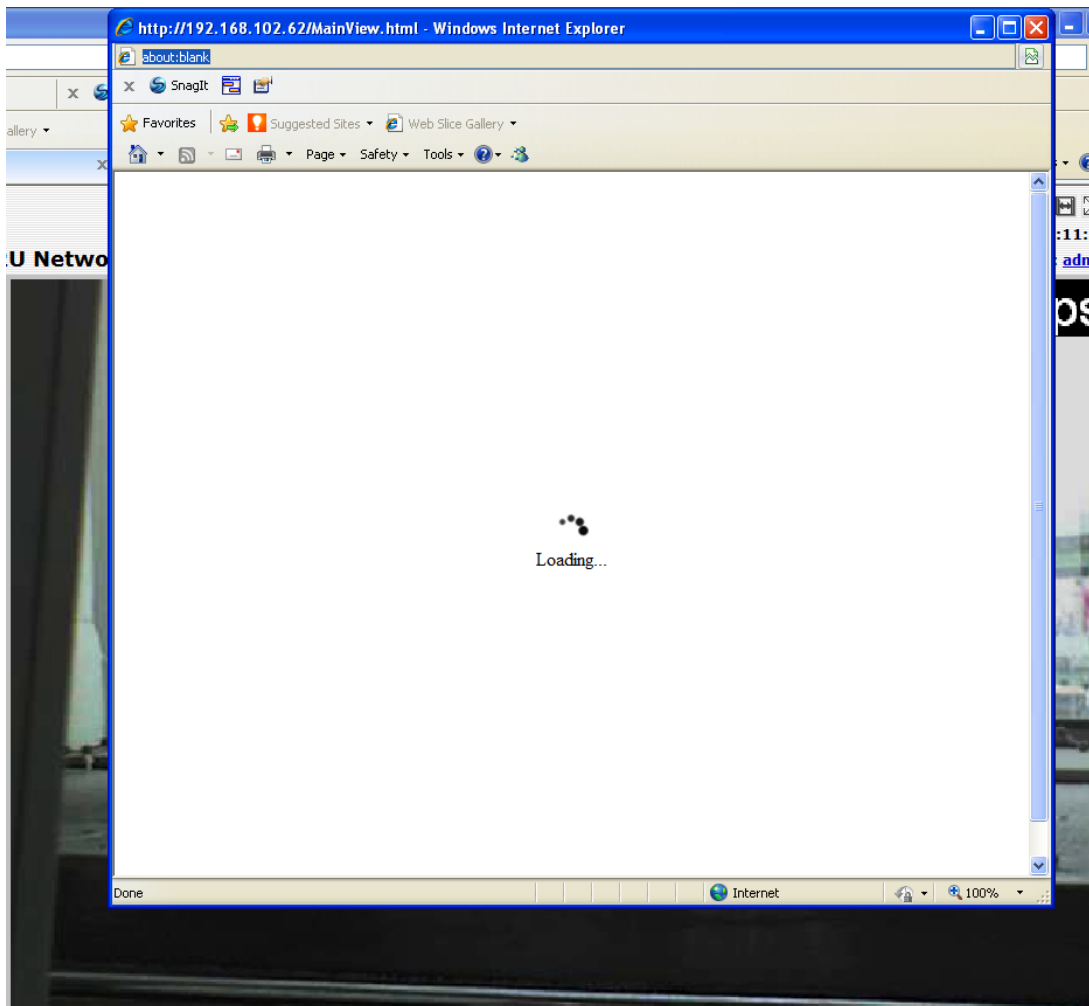


A new window should display and load the snapshot image.

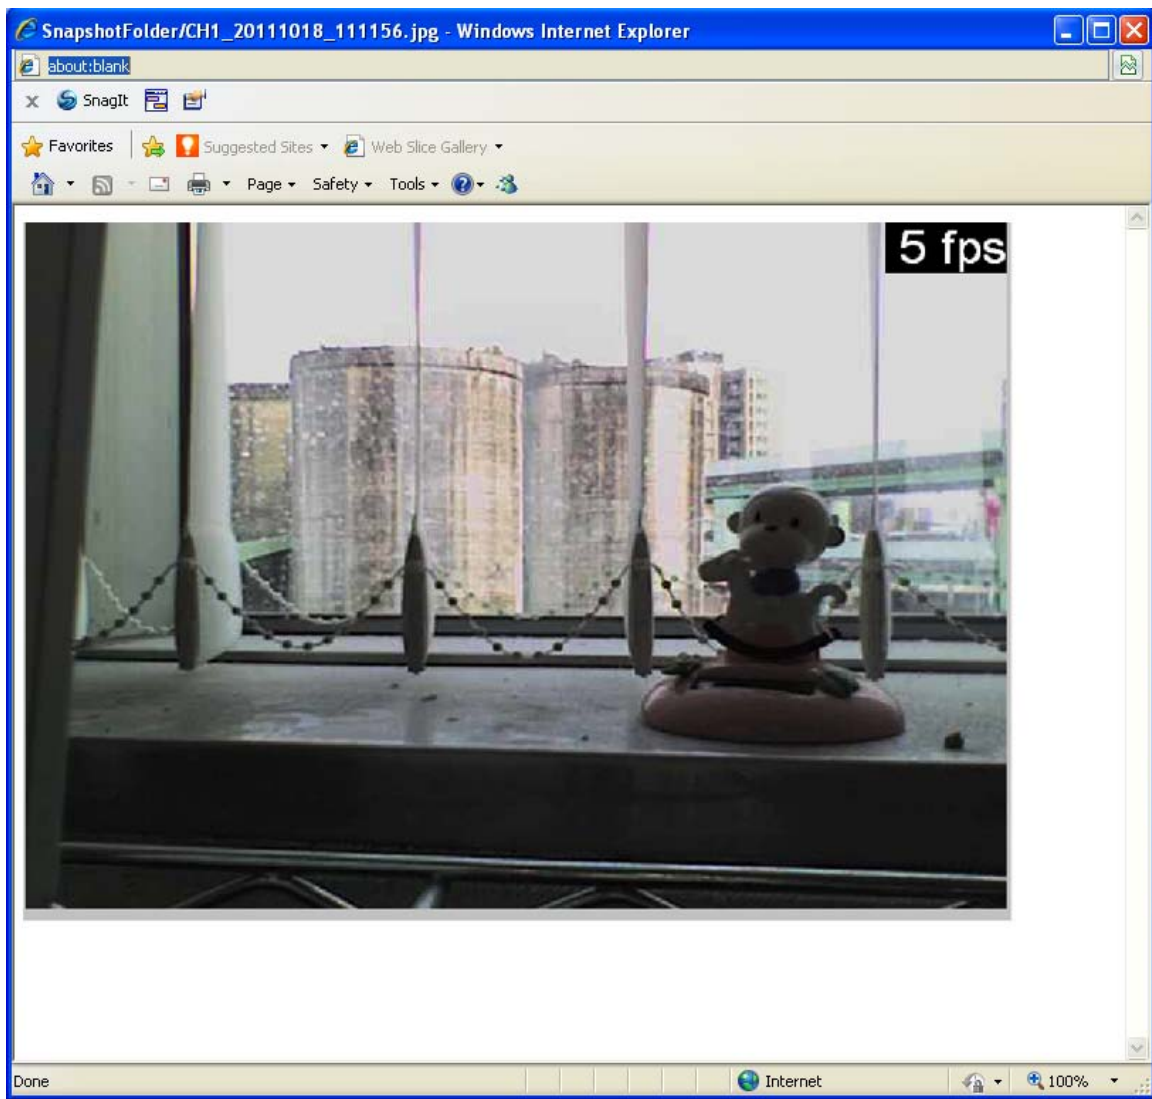


The new window displays the snapshot.

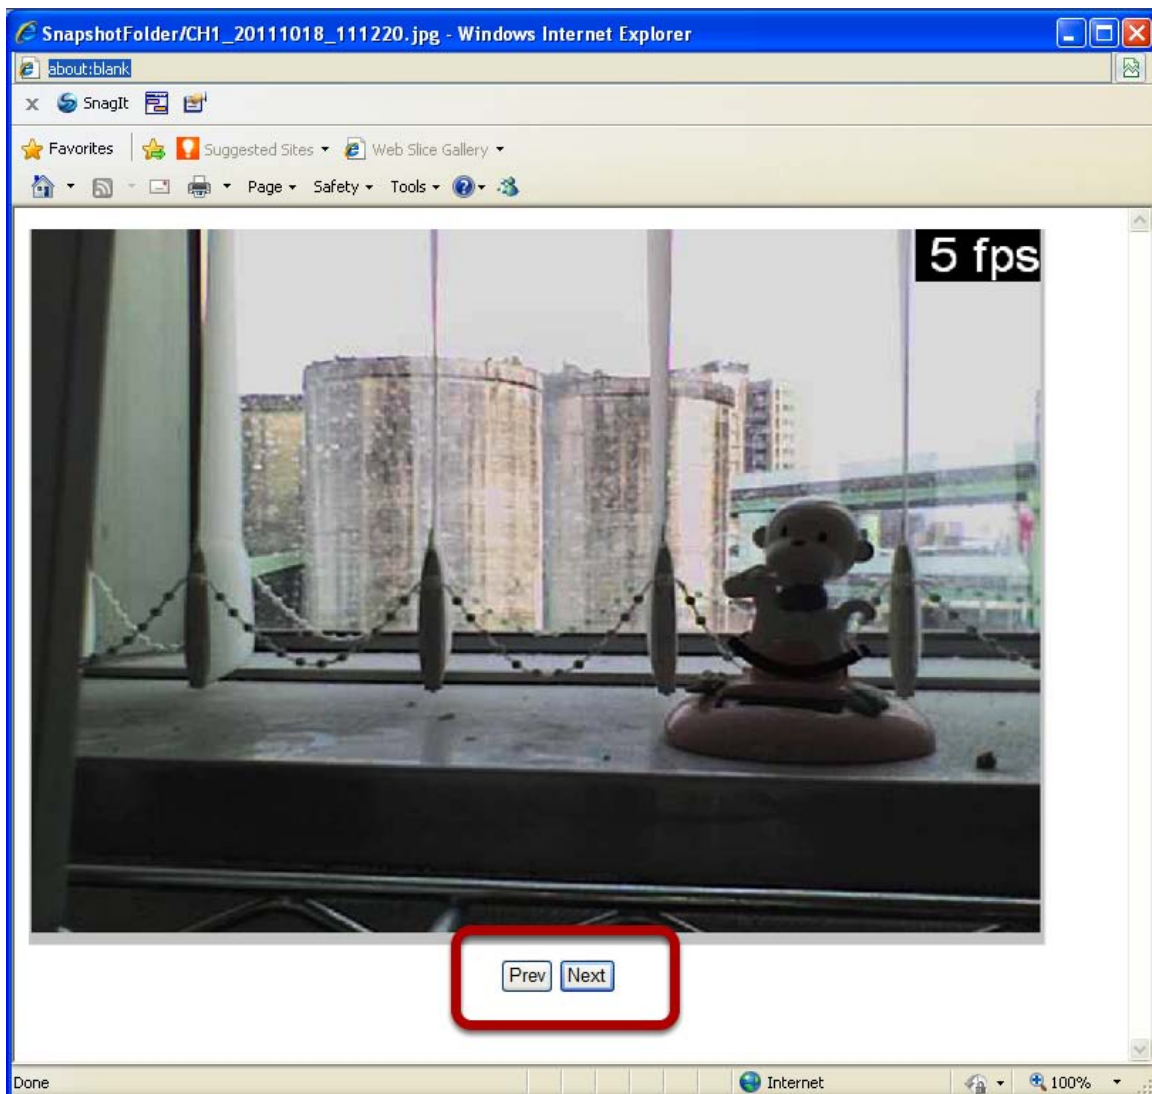

If the "3 continuous snapshots" option is chosen, the new window displays snapshots and lets you view them individually by using the "Prev", "Next" buttons shown above.

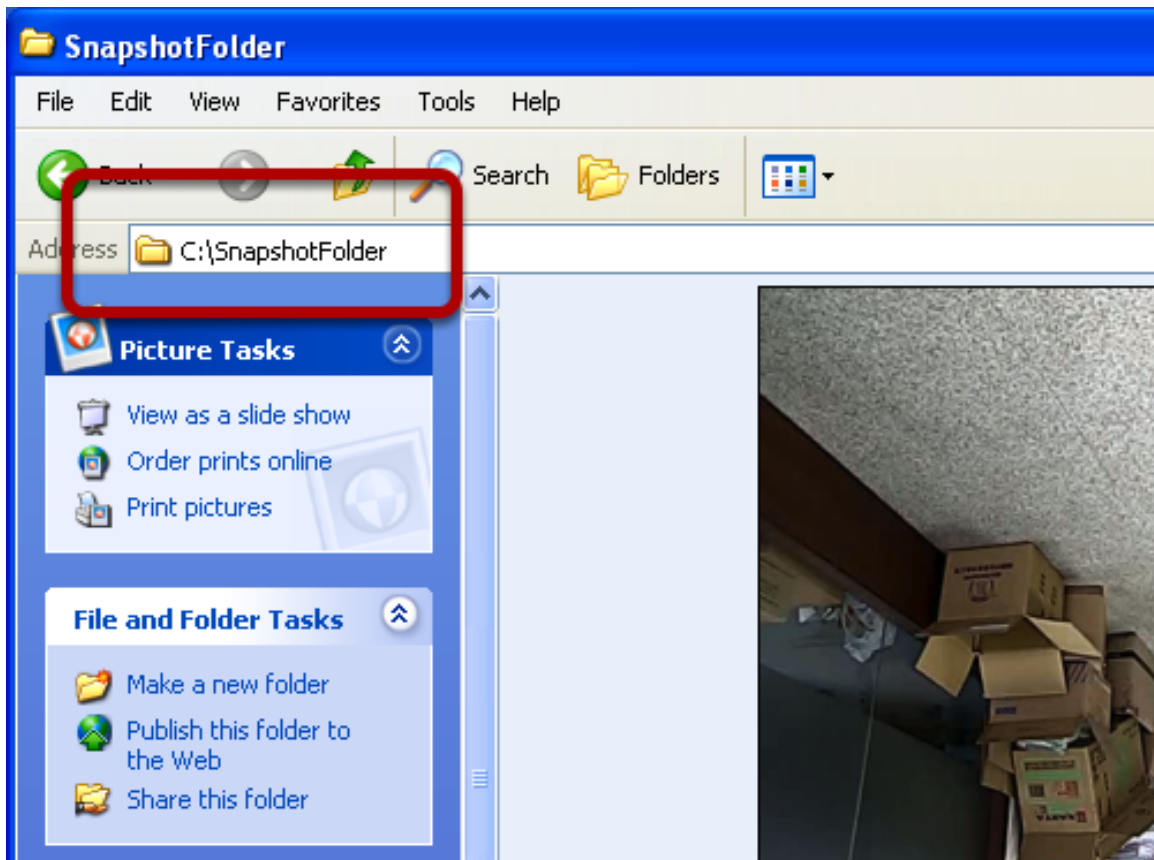


However, as soon as a snapshot selection is made, the snapshots are automatically saved to x:\SnapshotFolder ("x" represents the partition where Windows is installed, e.g.: C:\)

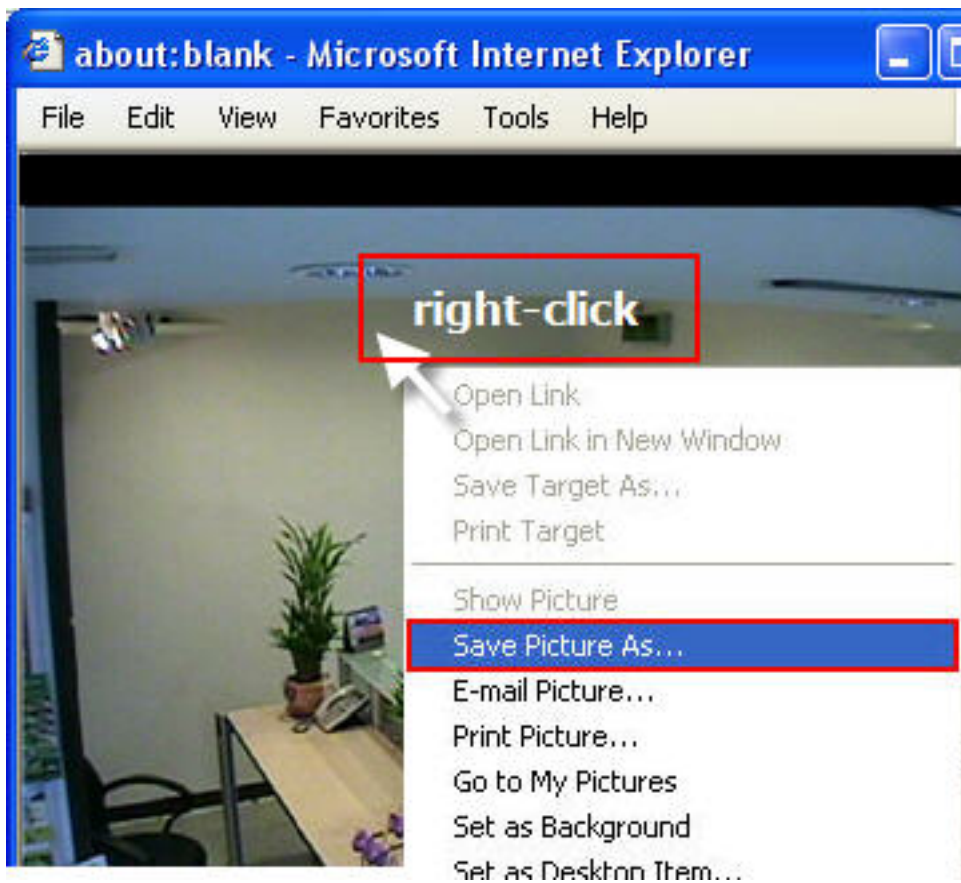


You can right-click anywhere on the image and select "Save Picture As..." to save the images somewhere else if you wish.

Adjust Brightness for Playback Video

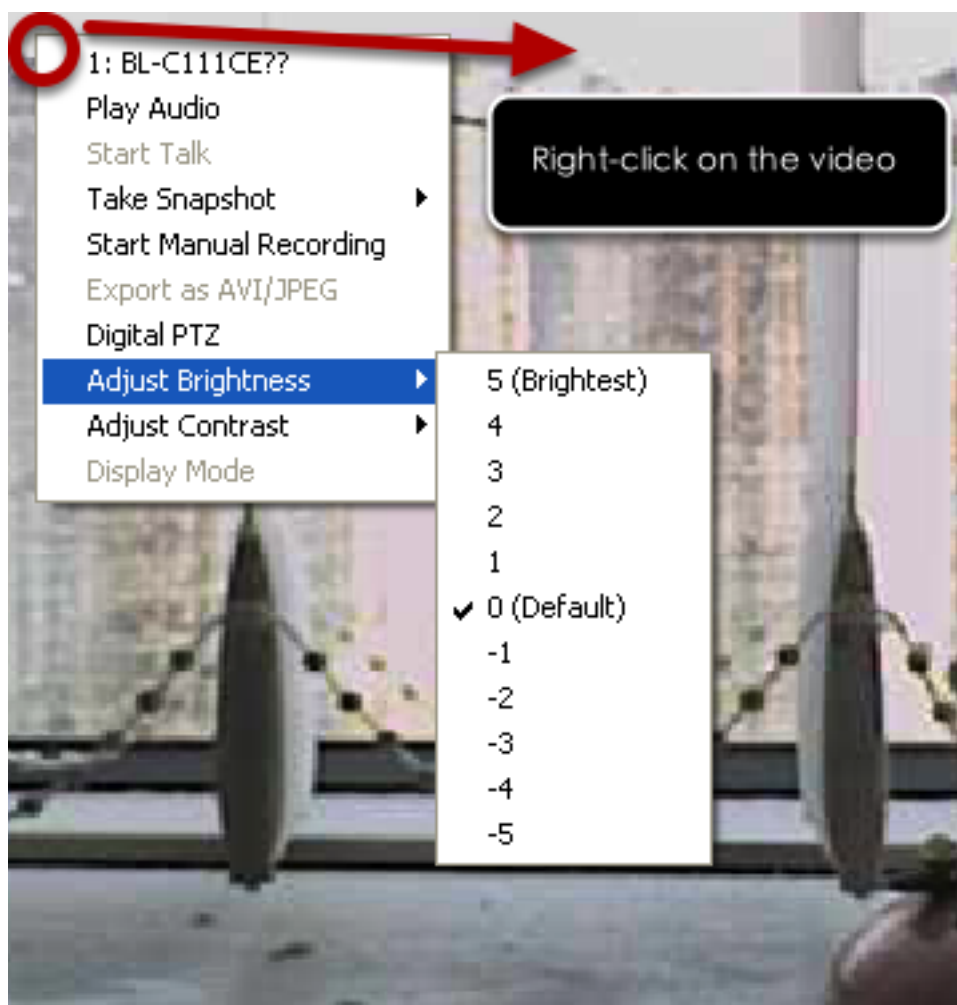

You are able to adjust brightness of the playback video from the right-click menu.

Adjust Contrast For the Playback Video

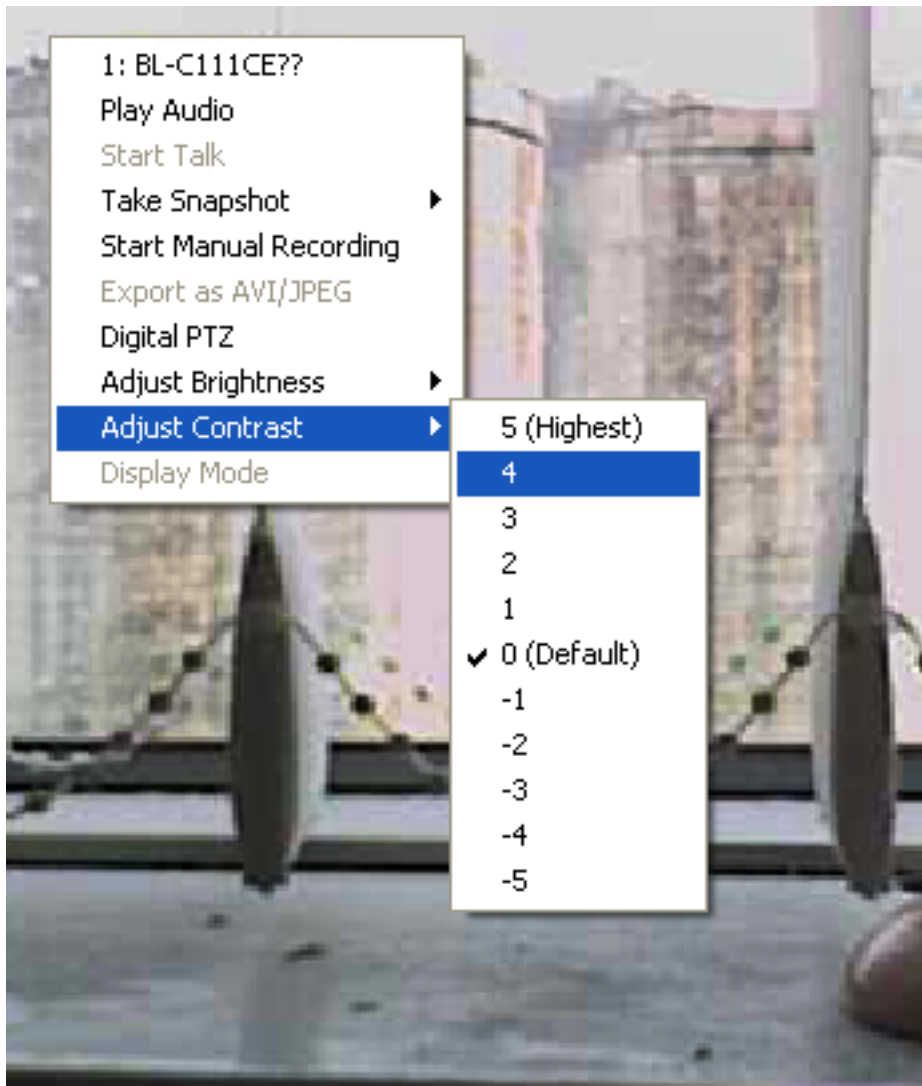


Same thing as the brightness, you can set the contrast for the playback video from the right-click menu as well.

Export Playback Videos to AVI Files




User can export the recorded playback videos stored on the NVR to a local computer and save them in AVI file format. A 3rd party media player such as VLC player or Windows Media player can then play the files on the PC.

Once you locate the recorded videos with steps described in the previous section, select "Export as AVI file"

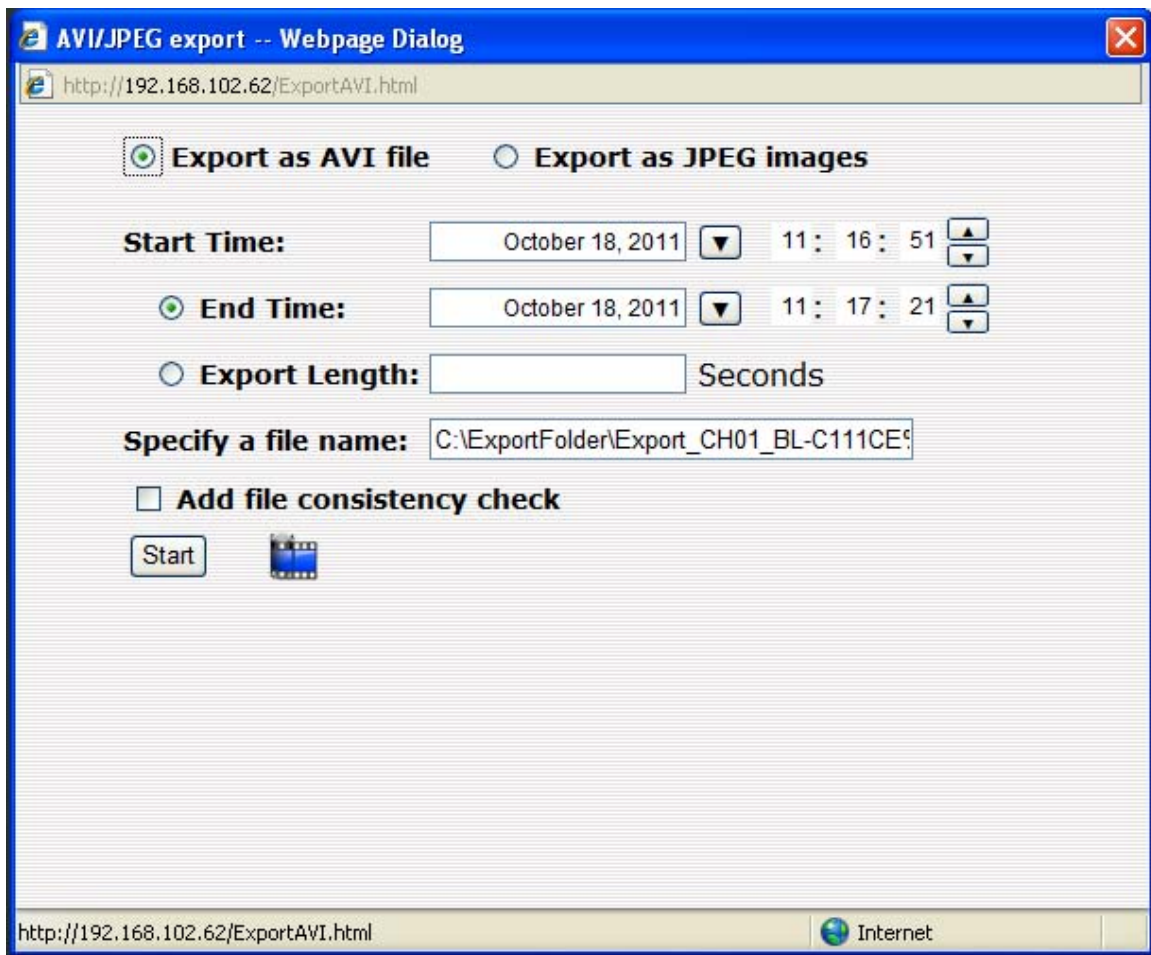


A new dialog will pop up and allows you to specify the time frame (or length) of the video you wish to export

Export Playback Videos to JPEG images

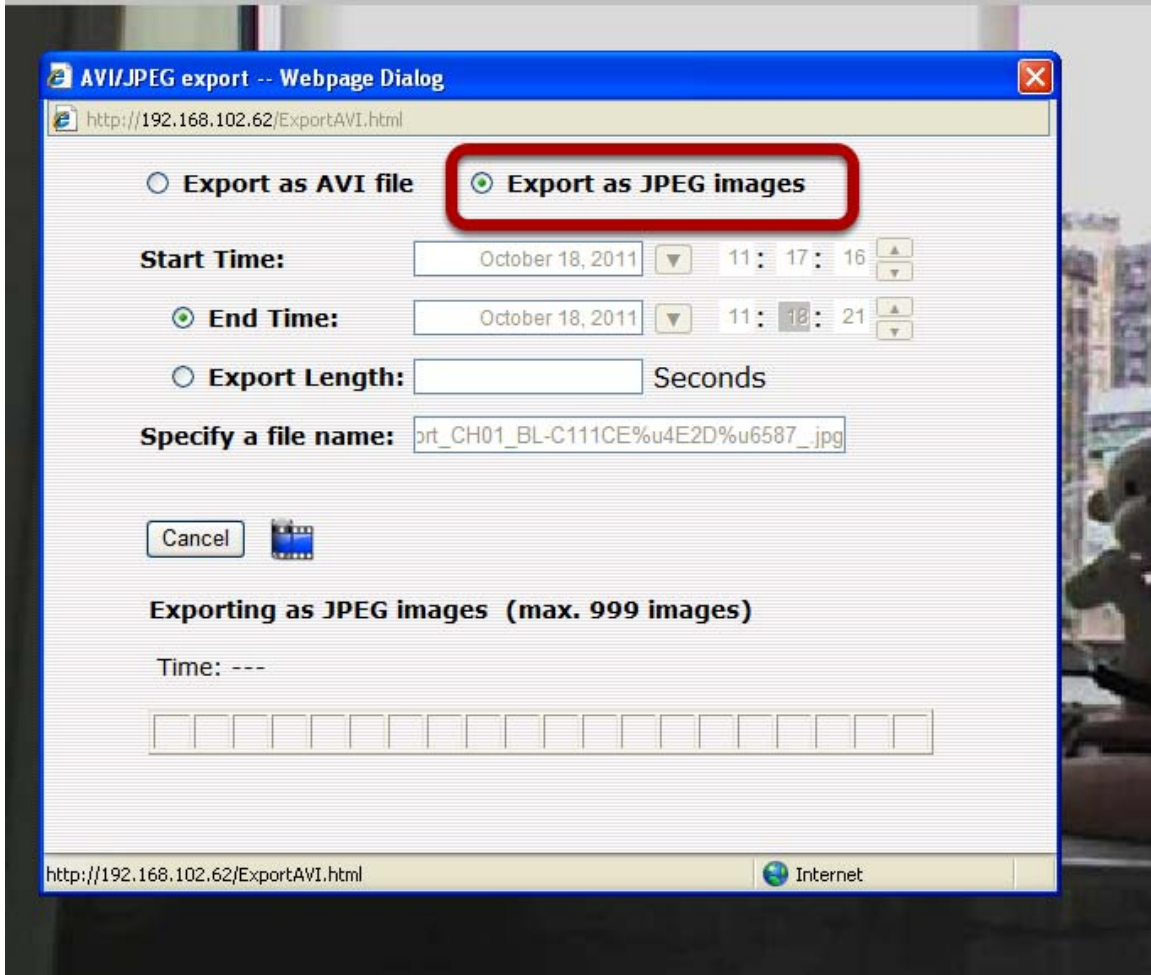


You can alternatively choose to export the recorded video to JPEG images by choosing the "Export as JPEG images" option.

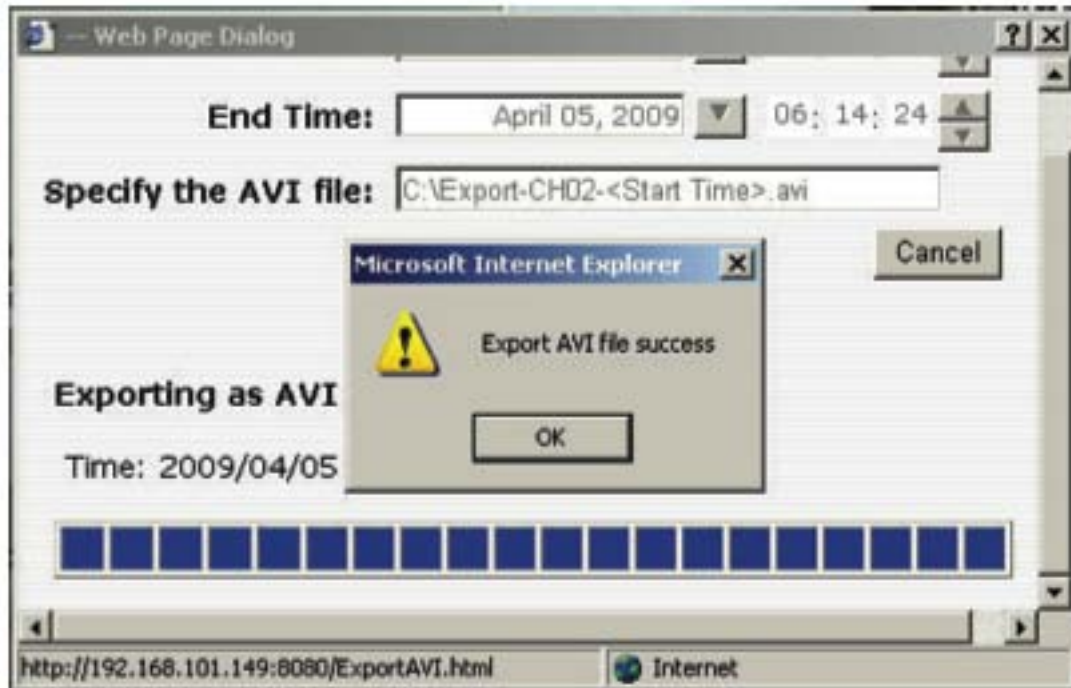

Specify the Start time/End time (or export length) and click "Start" to begin exporting.


You will be notified once the process is completed successfully

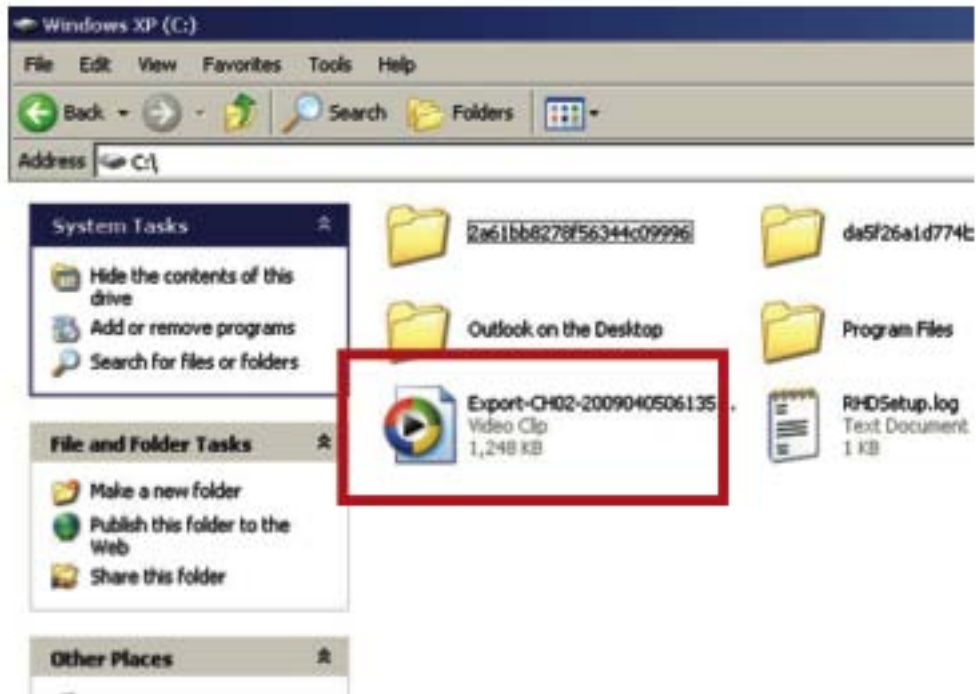

The exported AVI file will be saved under the C partition (or the partition where Windows is installed)

- *ffdshow* is required in order to play the exported AVI file with Windows Media Player. You can get it at <http://sourceforge.net/projects/ffdshow/>

Play Exported Playback Videos with NVR Media Player

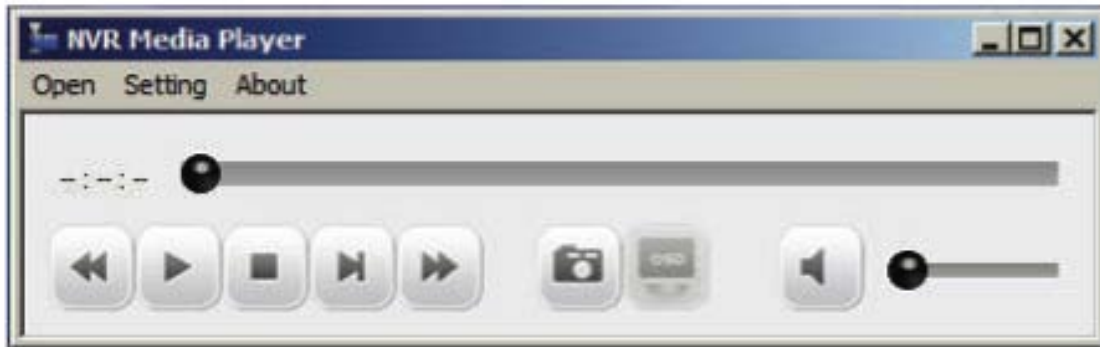


You can also use the NVR Media Player to play the exported AVI files. This can save you the trouble of installing third-party media player or codecs when playing the exported AVI videos.


The NVR Media Player will be automatically installed after the CMS software is installed. You can find it in the Windows Start menu.



Click "Open" >> "AVI File"

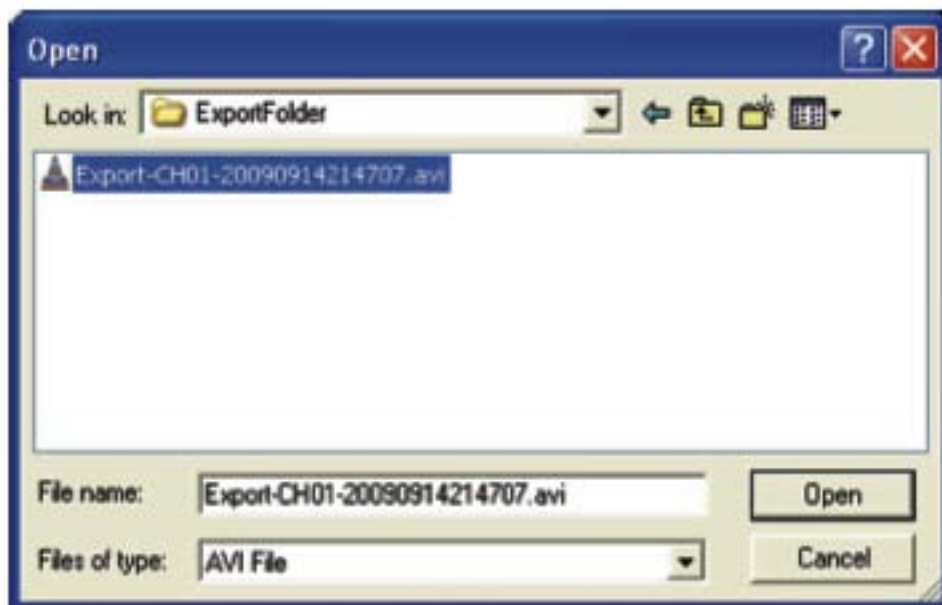


Locate the exported AVI file, and click "open". (Normally under "C:\ExportFolder")

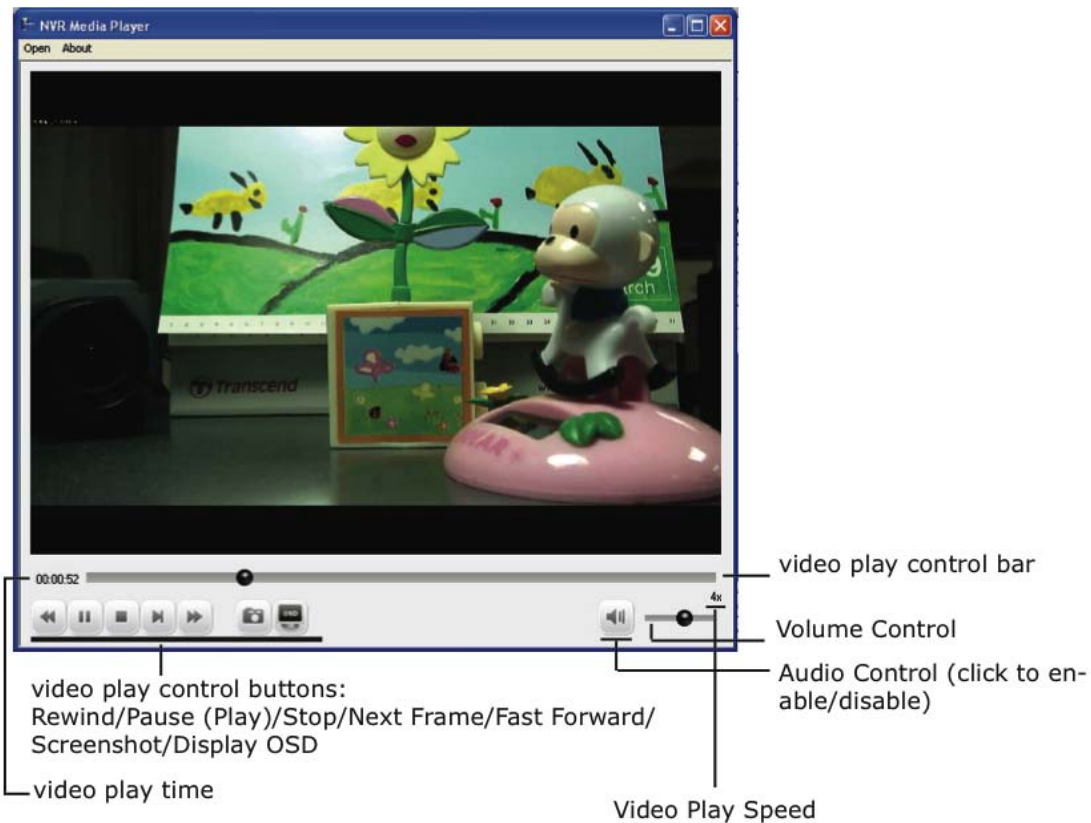

The video will then start playing

Open Event Snapshot images with NVR Media Player

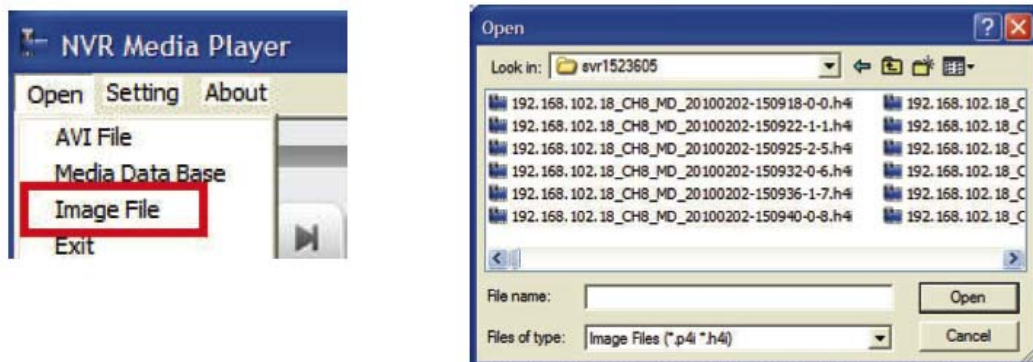

The NVR sends snapshots that are taken when an event occurs to a destined FTP server or mail recipient. These types of snapshot images

are saved in a proprietary image file format, h4i or p4i, and can only be opened by the NVR media player.

To do so, Select "Open" from the top menu then select "Image File". A new dialog should be displayed which lets you locate the image file.

NVR Setup -- System Configurations

Network Setup

The "System Configurations" page provides users options to setup the device quickly and properly. After properly configuring all settings in all the sub-pages, users should expect a fully working network video recorder that is ready to manage cameras on the network. We will start by configuring its network settings to make sure it works correctly in your network. Next, we will help you adjust the system time so videos will be recorder with correct timestamp. To better secure the system for unwanted disturbance, we will guide you on setting up user's account and privileges to prevent settings gets altered by users other than the system administrator. Lastly, we will tell you what you should expect after installing a hard disk and how to prepare the hard disk for the video recording.

Network Settings

NVR Setup

- [-] **System Configuration**
 - [-] Network Setup
 - Device Network Setting
 - DHCP Server
 - DDNS Service
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
- [+] **Channel Configuration**
- [+] **Event Configuration**
- [+] **Recording Configuration**
- [+] **System Options**

Network Setting	
Connection Type:	<input type="text" value="DHCP Client"/>
Status:	IP obtained from DHCP Server
IP Address:	192.168.102.62
Subnet Mask:	255.255.248.0
Gateway:	192.168.101.1
DNS 1:	192.168.101.1
DNS 2:	192.168.101.11
HTTP Port:	<input type="text" value="80"/>
Streaming Port:	<input type="text" value="9877"/>
UPnP Port Forwarding:	<input type="checkbox"/> External Port: <input type="text" value="6000"/> <input type="button" value="Test"/>

Optional Setting	
Device Name:	<input type="text"/>
<input type="button" value="Apply"/>	

You need to adjust settings in this page for the device to work properly in your network. It is critical that settings here are configured correctly based on your network configurations so that the recorder can be administered through the local area network and cameras can be connected from it.

By default, the recorder is set to "Auto Mode" which if there's a DHCP server in the same local network, the NVR can obtain IP address from

DHCP server, and you can locate the NVR by using the NVR search utility.

If there's no DHCP server in the network, and the NVR is set to use "Auto Mode", it will use its own default static IP 192.168.101.50.

Network Setting

Connection Type: DHCP Client ▼

Status: Auto Mode

IP Address: DHCP Client

Static IP

The NVR supports three connection types that can be configured depends on how the network is setup.

Network Setting

Connection Type: Static IP ▼

IP Address: 192 . 168 . 101 . 143

Subnet Mask: 255 . 255 . 252 . 0

Gateway: 192 . 168 . 101 . 1

DNS1: 192 . 168 . 11 . 11

DNS2: 192 . 168 . 11 . 13

HTTP Port: 80

Streaming Port: 9877

UPnP Port Forwarding: ☐ External Port: 6000 Test Force Change

Optional Setting

Device Name: tst

If you wish to set the recorder to use a static IP address in your local area network,

1. Choose "Static IP" from the "Connection Type" drop-down menu

2. Enter the IP address, subnet mask, default gateway address and DNS server address for the recorder

* *The recorder can detect the presence of a DHCP server upon startup. It sets itself to use static IP address if there is no DHCP server currently presented in the network. Its DHCP server function is also turned on at the same time to assign IP addresses to cameras that are later connected to the network or you can manually turn off the DHCP server function from "System Configurations" > > "Network Setup" > > "DHCP Server" if you wish to use a separate DHCP server.*

DHCP Server

NVR Setup

- System Configuration
 - Network Setup
 - Device Network Setting
 - DHCP Server**
 - DDNS Service
 - Time and Date
 - Users Account
 - Camera Privilege

DHCP Server

DHCP Server: ☐ ON ☒ OFF

Max. DHCP Client: (Max. 30 clients)

The built-in DHCP Server function is NOT always configurable and is greatly dependant to the connection type that is set to use in "Device Network Setting":

1. If the connection type is "Auto Mode", the DHCP server function is NOT configurable. It will be ON if the NVR doesn't obtain an IP from a DHCP server in the local network and uses its own default static IP 192.168.101.50
2. If the connection type is "Auto Mode", the DHCP server function is NOT configurable. It will be OFF if the NVR obtains an IP from a DHCP server in the local network.
3. If the connection type is "DHCP Client", the DHCP server function is NOT configurable. It will be OFF if the NVR obtains an IP from a DHCP server in the local network.
4. If the connection type is "DHCP Client", the DHCP server function is NOT configurable. It will be ON if the NVR doesn't obtain an IP from a DHCP server in the local network and uses its own default static IP 192.168.101.50
5. If the connection type is "Static IP", the DHCP server function is configurable and can be turn on/off manually.

DDNS Service

Dynamic DNS Service

☐ Enable DDNS Service

Server Address:

Domain Name:

User Name:

Password:

Connection Status: Disconnected

DDNS, which stands for "Dynamic DNS", is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system (in this case, the NVR) using the Internet Protocol Suite, to notify a domain name server to change, in real time, the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.

A popular application of dynamic DNS is to provide a residential user's Internet gateway that has a variable, often changing, IP address with a well-known hostname resolvable through standard DNS queries. This is useful if the NVR is placed on the Internet with a dynamic public IP, which once the DDNS is properly setup, users can access the NVR remotely with the DDNS domain name without worrying if the IP has changed or not.

**Please make sure a valid DNS server has been configured under the "Network Setting" page in order for this function to work properly.*

**The NVR currently only works with free DDNS service provided by "DynDNS". For more information, please go to www.dyndns.com*

If the NVR is placed behind a router or Internet gateway, please make sure port forwarding for port 80 is configured on the router or the gateway in order for the DDNS function to properly register with the service. **It's often suggested to use the DDNS function in the router/ gateway for such case instead.*

**Once you have the DDNS function successfully up and running, please DO NOT forget to configure port forwarding for the NVR web port (default 80) and the streaming port (default 9877) in the router/gateway for remote viewing. You can then type in <http://yourddnsdomain> in the browser to access the NVR remotely for live view.*

The screenshot shows the DynDNS Free website. At the top, there's a navigation bar with the Dyn logo, links for DNS, EMAIL, and LABS, and a search bar. Below this, a large banner reads "DynDNS Free Free DNS for 10 years and counting." with a yellow "GET IT NOW" button. A sidebar on the left lists various DNS services, with "DynDNS Free" highlighted. The main content area is divided into sections: "Free DNS When You Need It" (describing the service and its benefits), "Query volume" (stating up to 648,000 queries per month), "Free service" (stating two domains in 18 available hostnames), and "Uptime when you're down" (stating forward web requests or mark your host servers offline). At the bottom, there's a "GET IT NOW" button highlighted with a red box.

In order to properly configure the DDNS service function, please register a free DDNS domain name and account from DynDNS first. Go to <http://dyn.com/dns/dyndns-free/> from the browser to do so.

Add New Hostname [↑ Host Services](#)

Note: You currently don't have any active [Dynamic DNS Pro](#) in your account. You cannot use some of our Host Service features. Paying for an Dynamic DNS Pro will make this form fully functional and will add several other features.

Hostname: .

Wildcard Status: Disabled [\[Want Wildcard support?\]](#)

Service Type: ☒ Host with IP address [\[?\]](#)
☐ WebHop Redirect [\[?\]](#)
☐ Offline Hostname [\[?\]](#)

IP Address:
[Your current location's IP address is 60.250.139.170](#)
[TTL](#) value is 60 seconds. [Edit TTL.](#)

Mail Routing: ☐ Yes, let me configure Email routing. [\[?\]](#)

What do you want to use this host for?
 Select services and devices you would like to use with this hostname.

Work From Home Office or VPN:

Hosting and Design For Web Sites and Blogs:

Remote Access For Devices:

Enter a desired hostname here

Select a desired sub-domain from the drop-down menu

Click here to automatically fill in the current public IP in the "IP Address field"

Pick one or more options here (any is fine)

Click to go to the next step

Fill in the necessary fields as illustrated above

Hostname: .

This hostname already exists. It may be in use by another customer.

The page will check whether or not another user has used the hostname you entered as soon as you click the "Add to Cart" button. If

you see below message, simply enter a different and click "Add to Cart" again

Shopping Cart

Host seenergy88.dyndns.org added to cart. **Finish FREE checkout to activate.**

Your cart contains **free services only**. You will not be asked for credit card information.

Upgrade Options

Free accounts allow only five Dynamic DNS hosts.

- To add more and enjoy [additional benefits](#) for only \$15.00 per year, [purchase Dynamic DNS Pro](#).
- To get Dynamic DNS for **your own domain**, use [Custom DNS](#).

Dynamic DNS Hosts

seenergy88.dyndns.org	-	remove	\$0.00
--	---	------------------------	--------

Have a coupon? [Log in.](#)

Sub - Total:	\$0.00
Order Total:	\$0.00

Create account or log in to continue

Create an username and a password here. This will be used in the NVR's configuration. Enter a valid email address as well.

Username:

Password:

Confirm password:

Email:

Confirm email:

Subscribe to:

☐ DynDNS.com newsletter (1 or 2 per month)

☐ Dyn Inc. press releases

☐ Remove HTML formatting from email


Already Registered?

Username

Password

[Log in](#)

[Forgot your password?](#)



Enter the numbers from the above image:


Enter the security code

☒ I agree with the [acceptable use policy \(AUP\)](#) and [privacy policy](#).

Check to agree the license

[Create Account](#)

Click to finish creating the account



Once you get to the next page, fill in the necessary fields as illustrated above

Dynamic DNS Service☒ Enable DDNS ServiceServer Address: Domain Name: User Name: Password:

Connection Status: Disconnected

Go back to the NVR's DDNS service configuration page under "Setup" >> "System Configuration" >> "DDNS Service". Fill in the domain name you picked during the registration in the "Domain Name" field and the username/password you created in the "User ID" and "Password" field and click "Apply" to finish

Dynamic DNS Service

☒ Enable DDNS Service

Server Address:


Domain Name:

User ID:

Password:

Connection Status: Disconnected

Message from webpage

 Connect DDNS successful

You can click the "Check DDNS Status" button to check the DynDNS service status. If you are getting a "Disconnected" message, it means that DDNS service server is down or the NVR is not connected to the Internet. If everything is ok normally, you should be prompted with a success message

Time and Date

Set the time and date by selecting the time zone according to your location. It is imperative that you set the recorder's time correctly to avoid the following errors:

- Incorrect display time for playback videos
 - Inconsistent display time of event logs and when they actually occur
- After selecting the time zone, choose an option below to set the recorder time

- **Manual** – Use the drop-down list and configure the time manually
- **Sync with NTP server** – enter the hostname or IP address of a valid NTP server and set how often the recorder should synchronize the time with it by using the "Update interval" drop-down menu
- **Sync with PC** – Check this option to synchronize the recorder time with the PC that you are currently using to access the recorder

User Account

Setup

System Configuration

Network Setup
Time and Date
Users Account
Group Privilege
Disk Setup

Channel Configuration

Event Configuration

Recording Configuration

System Options

Recording Configuration

System Options

User Account Setting

User Name	Group	Description
admin	admin	
guest	guest	sc
joser	supervisor	eng
hunt	opera	tc
view1	VIEWER	japan

[Edit](#)[Remove](#)

Add User

User Name: Only A-Z, a-z, 0-9 and _,@ are allowedPassword: Confirm Password: Company: (Optional)Department: (Optional)Telephone: (Optional)Mobile: (Optional)E-Mail: (Optional)Group: Language: EnglishDescription: (Optional)[Add](#)

Multiple users can access the recorder simultaneously. You can add, remove, and edit users by using options provided in this page to keep user information organized. Each recorder comes with a built-in "admin" account with password "admin". It's highly recommended to change the password upon your initial login.

Add a new user

Web Management System

Add User

User Name: Only **1** a-z, 0-9 and _.@ are allowed

Password:

Confirm Password:

Company: (Optional)

Department: (Optional)

Telephone: (Optional)

Mobile: (Optional)

E-Mail: (Optional)

Group: **2**

Language: English

Description: (Optional)

3

- Enter a username and password in "User Account Information". All other fields are optional for your own reference.
- Select a group from the "Group" drop-down menu to assign the new user to a particular group
- Enter a short description for the account if you wish
- Click "Add" to finish configuration

Change the password of the "admin" account

The screenshot shows a table with three columns: Username, Group, and Description. The first row contains 'admin', 'admin', and 'This is the admin account'. A red box highlights the first row, and a red arrow points from it to the 'Edit' button below. The 'Edit' button is also highlighted with a red box. Below the table, there is a section titled 'User Account Information' containing several input fields: Username (admin), Password (*****), Confirm Password, Company (optional), and Department (optional). The Password field is highlighted with a red box.

Username	Group	Description
admin	admin	This is the admin account

1.

2.

Edit Remove

User Account Information

Username: admin

Password: *****

Confirm Password:

Company: (optional)

Department: (optional)

1. Click and highlight the "admin" account in the account list and click "Edit"
2. Its information should be displayed in "User Account Information"
3. Enter a new password in the "Password" field and enter it again in "Confirm Password"

Group Privilege

NVR Setup

- System Configuration
 - Network Setup
 - Time and Date
 - Users Account
 - Group Privilege**
 - Disk Setup
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options

Group Privilege Setting

Group:

Account Type:

Live:

<input checked="" type="checkbox"/> CH1 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH2 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH3 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH4 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH5 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH6 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH7 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH8 <input type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH10 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH11 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH12 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH13 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH14 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH15 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH16 <input type="checkbox"/> Audio

Playback:

<input checked="" type="checkbox"/> CH1 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH2 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH3 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH4 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH5 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH6 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH7 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH8 <input type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH10 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH11 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH12 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH13 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH14 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH15 <input type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH16 <input type="checkbox"/> Audio

Allow use of PTZ:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16

System Configuration:

<input checked="" type="checkbox"/> System Configuration	<input checked="" type="checkbox"/> Channel Configuration	<input checked="" type="checkbox"/> Event Configuration
<input checked="" type="checkbox"/> Recording Configuration	<input type="checkbox"/> System Options	

Group Privilege is where you can create multiple customized access policies for situations if you need the recorder to be accessed by users other than the administrator. You can do so by creating a group, and then remove access privileges for certain configuration pages or cameras. Users that are created and assigned to this group will have limited access instead of full administration rights.

The recorder comes with seven built-in groups and five built-in privilege profiles, except the "admin" and the "guest" accounts; the other five groups are fully customizable or you can simply assign a group with one of the default privilege profiles. You can, however, assign more than one users to the "admin" account if you wish to do so. The guest account comes with a "view-only" privilege in the "Live View" page, and users in this group do not have the power to make any changes in the "Live View" page or have access to pages other than the "Live View" page.

Group:

Account Type:

To create a group, select a group from the "Group" drop-down

Group:

Privilege Type:

You can change the group name by clicking the “Change Group Name” button. A text box will be displayed for you to enter the new group.

Group:

Privilege Type:

Choose what type of privilege you would like this group to have from the “Privilege Type” drop-down menu.

Live:

<input checked="" type="checkbox"/> CH1 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH2 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH3 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH4 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH5 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH6 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH7 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH8 <input checked="" type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH10 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH11 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH12 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH13 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH14 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH15 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH16 <input checked="" type="checkbox"/> Audio

Playback:

<input checked="" type="checkbox"/> CH1 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH2 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH3 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH4 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH5 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH6 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH7 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH8 <input checked="" type="checkbox"/> Audio
<input checked="" type="checkbox"/> CH9 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH10 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH11 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH12 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH13 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH14 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH15 <input checked="" type="checkbox"/> Audio	<input checked="" type="checkbox"/> CH16 <input checked="" type="checkbox"/> Audio

Allow use of PTZ:

<input checked="" type="checkbox"/> CH1	<input checked="" type="checkbox"/> CH2	<input checked="" type="checkbox"/> CH3	<input checked="" type="checkbox"/> CH4	<input checked="" type="checkbox"/> CH5	<input checked="" type="checkbox"/> CH6	<input checked="" type="checkbox"/> CH7	<input checked="" type="checkbox"/> CH8
<input checked="" type="checkbox"/> CH9	<input checked="" type="checkbox"/> CH10	<input checked="" type="checkbox"/> CH11	<input checked="" type="checkbox"/> CH12	<input checked="" type="checkbox"/> CH13	<input checked="" type="checkbox"/> CH14	<input checked="" type="checkbox"/> CH15	<input checked="" type="checkbox"/> CH16

System Configuration:

<input checked="" type="checkbox"/> System Configuration	<input checked="" type="checkbox"/> Channel Configuration	<input checked="" type="checkbox"/> Event Configuration
<input checked="" type="checkbox"/> Recording Configuration	<input type="checkbox"/> System Options	

Its access privilege will then be displayed. You can alter its settings by allowing or denying access to other cameras using the checkboxes instead of accepting the defaults

Disk Setup

NVR Setup

- System Configuration
 - Network Setup
 - DDNS Service
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options

Hard Disk Setting

Hard Disk List RAID Volume

Disk ID	Disk Type	Capacity	Disk Status	Format
1	Internal	459GB	Online	Format
2	Internal	2000GB	Offline	Format
3	Internal	500GB	Offline	Format

Once you install a hard disk to the recorder, you would need to initialize it so that it can be ready for recording. You can obtain basic information about the disk you installed in this page.

To initialize it, simply click the "Format" button.

**This page will list the Internal disks (or RAID volumes), and the E-SATA disk only. The HDD will be formatted in EXT3 file system.*

**Due to the chipset limitation, "Hotswap" is NOT supported for E-SATA HDD. Please make sure to power on the E-SATA external HDD and plug it in to the NVR before the NVR is turned on.*

NOTE: Maximum capacity of each E-SATA HDD is 2TB.

**The USB HDDs will only be listed in the "USB Backup" and "Hard Disk Status" pages in "System Options". The USB HDDs have to be formatted in advance in FAT16/FAT32 or EXT3 file system. (FAT32 is recommended)*

* Please plug in the USB HDD only after the NVR is fully started. The internal HDDs will NOT be properly detected if the NVR is powered on with USB HDD plugged in

Build RAID Volume

NVR Setup

- System Configuration
 - Network Setup
 - DDNS Service
 - Time and Date
 - Users Account
 - Group Privilege
 - Disk Setup
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options

Hard Disk Setting

Hard Disk List **RAID Volume** ①

RAID Volume

Disk ID	Disk Type	Capacity	Disk Status	
--	1	Internal	459GB	Normal
--	2	Internal	2000GB	Fail
--	3	Internal	500GB	Fail

Internal Hard Disk List

RAID ID	Disk ID	Disk Type	Capacity	Disk Status
--	1	Internal	459GB	Normal
--	2	Internal	2000GB	Fail
--	3	Internal	500GB	Fail

Disk Actions: Create RAID 0 ②

It is required to format the RAID volume after creating a new volume. The format option can be found under the "Hard Disk List" tab.

Apply ③

The internal HDDs can be used for RAID. To do so, go to "RAID Volume" in Disk Setup and choose the available disk action.

RAID Type	HDD #	Allow Failed HDD	Capacity
RAID 0	2-4	0	(HDD#) x (Smallest HDD size)
RAID 1	2-4	(HDD #) - 1	Smallest HDD Size
RAID 5	>=3	1	(HDD# -1) x (Smallest HDD size)
RAID 10	>=4	1 HDD within each RAID 1 group	(HDD# / 2) x (Smallest HDD size)

The "Disk Actions" drop-down menu displays available actions based on how many HDDs are installed in the NVR. For detail, please refer to the table above.

RAID Volume

Disk ID	Disk Type	Capacity	Disk Status
---------	-----------	----------	-------------

Internal Hard Disk List

RAID ID	Disk ID	Disk Type	Capacity	Disk Status
--	1	Internal	459GB	Normal
--	2	Internal	2000GB	Fail
--	3	Internal	500GB	Fail

Disk Actions:

Create RAID 0

Message from webpage

?

Creating new RAID volume will result in ALL DATA LOSS. Do you want to continue?


OK

Cancel


It is required to format the RAID volume after creating a new volume. The format option can be found under the "Hard Disk List" tab.

Apply

Select a disk action and click "Apply" to proceed. A warning dialog will be displayed as creating RAID volume will erase all existing data on the HDDs. Click "OK" to continue.

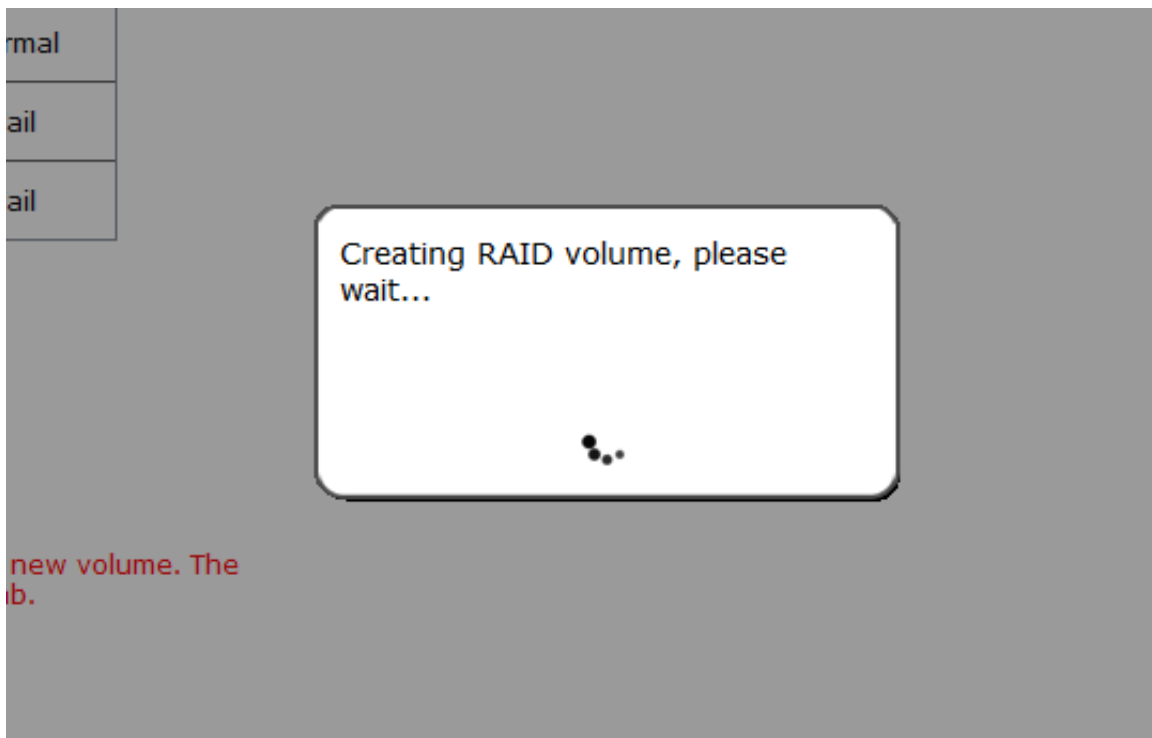

Please wait for a few moments while the NVR is creating the RAID volume.

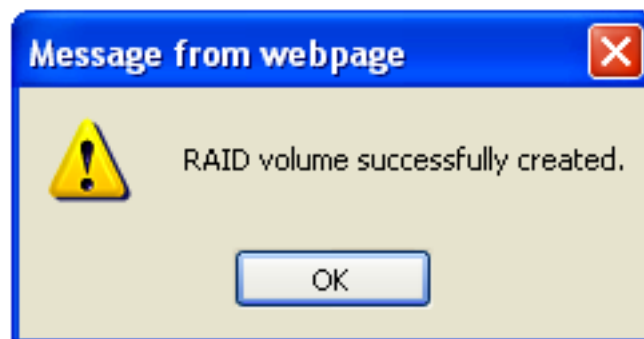

You will be prompted once the action is completed successfully.


Hard Disk List RAID Volume

RAID Volume

Disk ID	Disk Type	Capacity	Disk Status
1	RAID-0	3001GB	Offline

Internal Hard Disk List

RAID ID	Disk ID	Disk Type	Capacity	Disk Status
1	1	Internal	500GB	Normal
1	2	Internal	2000GB	Normal
1	3	Internal	500GB	Normal

Disk Actions: Delete RAID 

It is required to format the RAID volume after creating a new volume. The format option can be found under the "Hard Disk List" tab.

Apply

Once the RAID volume is created, it will be listed in the "RAID volume list with the status of "Offline"

Hard Disk List RAID Volume

Disk ID	Disk Type	Capacity	Disk Status	Format
1	RAID-0	3001GB	Offline	<input type="button" value="Format"/>

Go back to the "Hard Disk List" page and the RAID volume should be in the list. Click "Format" to bring the RAID volume online.

Hard Disk List RAID Volume

Disk ID	Disk Type	Capacity	Disk Status	Format
1	Internal	500GB	Offline	Formatting...0%
2	Internal	2000GB	Offline	<input type="button" value="Format"/>
3	Internal	500GB	Offline	<input type="button" value="Format"/>

The status will be displayed just as if you were formatting any internal HDDs


Deleting RAID

RAID Volume

Disk ID	Disk Type	Capacity	Disk Status
1	RAID-0	3001GB	Offline

Internal Hard Disk List

RAID ID	Disk ID	Disk Type	Capacity	Disk Status
1	1	Internal	500GB	Normal
1	2	Internal	2000GB	Normal
1	3	Internal	500GB	Normal

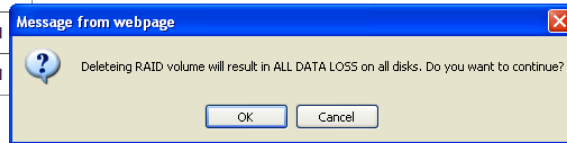Disk Actions: Delete RAID ▾

It is required to format the RAID volume after creating a new volume. The format option can be found under the "Hard Disk List" tab.

Once a RAID volume is created, it can be deleted at anytime by choosing the "Delete RAID" action in the RAID volume page. All existing data will be removed after the RAID volume is deleted.

All internal disks that were originally used for RAID volume will have to be formatted again after the RAID volume is deleted.

Notes for RAID function

- * Once a RAID volume is created, the "Delete RAID" option should be presented in the "Disk Action" drop-down menu. (Regardless the RAID volume has been formatted or not)
- * Only RAID1 and RAID 5 have repair function
- * The recording should continue even when RAID 1 or RAID 5 volume fails or is rebuilding.
- * The replacement hard drive size must be larger or equal to the size of the smallest disk in the volume.
- * The internal disks do not need to be formatted prior to creating RAID volume.
- * Create RAID with an existing RAID volume is not allowed.

* Once a RAID volume is deleted, all internal disks within that RAID should become offline and need to be formatted again before they can be used individually.

* All internal disks (or RAID volumes) need to be formatted before they can be used.

NVR Setup -- Channel Configurations

Add a camera

Add New Channel:

Channel ID:

Channel Name:

IP Address:

User Name:

Password:

HTTP Port:

The NVR provides two options for adding a new camera. Users have the option to let the recorder automatically find the cameras or it is possible to enter camera's information and add it manually.

Automatic Search

[Click here to search camera](#)

* You may skip this step and add a new camera manually by entering camera's setting in the "Camera Information" section

Add New Channel:

Channel ID:

Channel Name:

IP Address:

User Name:


Password:

HTTP Port:

Click the "Search" button to perform the camera search.



You should be prompted to install Active Control component the first time you visit the page in order for the search to function properly. Go ahead and click "Install"

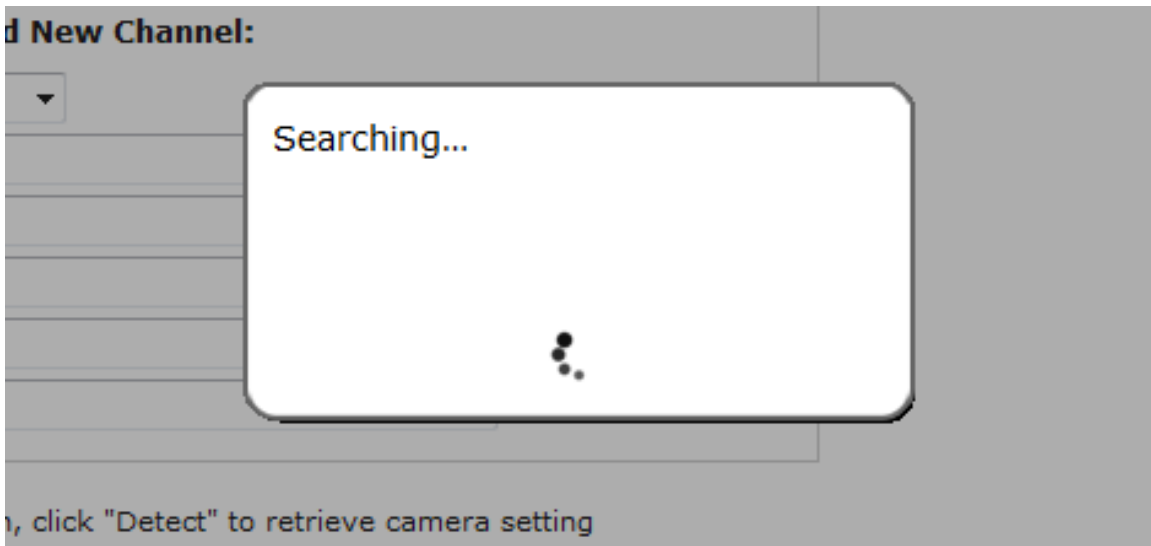

Once you have the ActiveX component installed, the search status should be displayed after clicking "Search"

AXIS	P3301	192.168.101.86	80
------	-------	----------------	----

Configure *Select a camera from search result and click "Configure" to configure setting below.

Found cameras should be listed and simply select a camera from the list and press "Configure"

Add New Channel:

Channel ID:

Channel Name:

IP Address:

User Name:

Password:

HTTP Port:

Its corresponding information should be displayed in the "Camera Information" section. Enter its username and password and select the channel ID and name the camera.

Additional Camera Information

Video Port:

Format: ▼


Resolution: ▼

Frame Rate: ▼

Bitrate: ▼

Record: ☒ Continuous

Record Audio: ☒ Record audio




Click on "Detect" to establish connection between the recorder and the camera. If connection establishes successfully, camera's detailed information should be polled and displayed as below.

Adjust its video format, frame rate, resolution or bitrate...etc. if you wish. You can also click on the "Preview" to preview the live video of the camera.

Click "Add" to finish adding the camera

l a new camera by manually entering camera's setting in the "Came

	IP Address	HTTP Port	Installed
	192.168.101.40	80	
	192.168.101.42	80	
	192.168.101.41	80	
	192.168.101.47	80	
	192.168.101.43	80	
	192.168.101.23	80	*
	192.168.101.46	80	



**If cameras are marked with "*" in the search result, it means those cameras are already configured and connected to the NVR.*

HTTP Port: 80

Once you change the camera's IP, User Name, Password or HTTP Port, click "Detect" to retrieve the camera's settings

Additional Camera Information

Settings for live video

Video Port: 554

Format: jpeg

Resolution: 1920x1080

Frame Rate: Full

Quality: 2

Settings for continuous recording

Record: ☒ Continuous Full

Format: h264

Resolution: 1920x1080

Frame Rate: Full

Bitrate Mode: CBR

Bitrate: Full

Record Audio: ☒ Record audio

Once the camera's settings are polled and displayed, you can also enable "continuous" recording and adjust its recording quality settings before adding the camera.

Some cameras are capable of multiple streaming profiles, in which different video codecs are used for different purposes.

You will be able to use different video format for continuous recording if it's a multi-stream capable camera.

Quality: 2

Record: ☒ Continuous

Format: t

Resolution: 1

Frame Rate: Full

Bitrate: 1

Bitrate: 1

Record Audio: ☒ Record audio

recording fps

live fps

There are two types of fps settings here, one is the fps that NVR sets back to the camera, and this is the fps NVR will be receiving from the camera. The other is recording fps, which will be limited by the live fps. (Ex. if the live fps is set to 10, choosing "Full" in the recording fps meaning it will only record at 10fps maximum).

For MPEG/H.264, only I frame or full (I+P frame) can be selected for recording fps.

Detect Once you change the camera's IP, User Name, Password or HTTP Port, click "Detect" to retrieve the camera's settings

Additional Camera Information

Video Port: 554

Format: jpeg

Resolution: 4CIF

Frame Rate: 20

Quality: 1


Record: ☒ Continuous 1FPS

Record Audio: ☒ Record audio

For single stream camera, only the recording fps can be adjusted.

Add a camera manually

Add New Channel:

Channel ID: 

Channel Name: **1. enter manually**

2. click "Detect" IP Address:

User Name:

Password:

HTTP Port:

Detect Once you fill out above information, click "Detect" to retrieve camera setting

Simply follow the instruction described above but instead of using the "Search" function, enter the camera's IP address and credential in the "Camera Information" manually.

OSD Settings

The OSD (On Screen Display) allows users to add informational text message and embed it onto the video. By default, this function is turned off. To add texts to one or more videos:




OSD Settings

Camera: Camera 1

☐ Do Not Display OSD

☒ Display OSD

Select a camera you would like to add text to and choose “Display OSD”

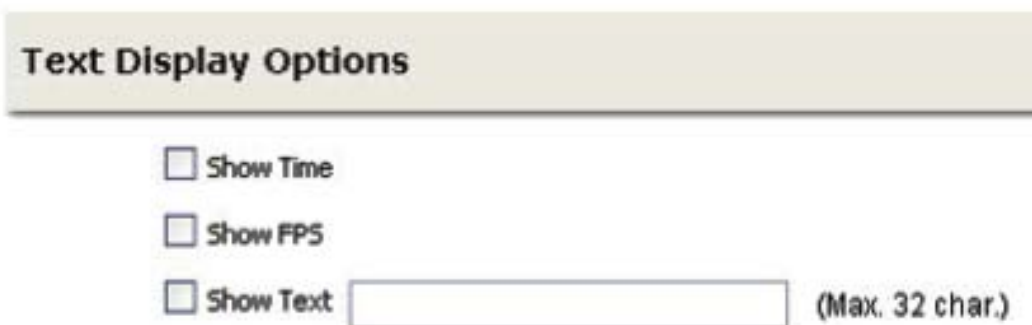

Text Display Options

☐ Show Time

☐ Show FPS

☒ Show Text (Max. 32 char.)

Choose one or more display options if you would also like the recorder to automatically embed the system time or the frame rate for you. Or simply choose to display a custom message of your own.

OSD Position

☐ Use relative position X: % Y: %

☒ Display at ▼

Next, define where the text will be displayed by either entering an X/Y value based on percentage or use the system pre-defined position from the drop-down menu.



Preview

* Click this button to see a preview of your OSD settings

Click on the "Preview" button to see the preview of your setting and click "Apply" to save the configuration.

Customize OSD text & background

Text Size: ☒ Auto

☐ Customized 8 ▼

Text Color:

Font: ▼

Text Background Color: ☐ Transparent

☒ Customized

The texts can be further adjusted with changes to different size, color or font so they can be more visible on the video.

PTZ Setting

PTZ Preset Settings

The screenshot shows the 'PTZ Preset' configuration window. On the left is a sidebar menu for 'NVR Setup' with options like System Configuration, Channel Configuration, PTZ Setting, PTZ Preset, PTZ Sequence, E-Map Setting, Event Configuration, Recording Configuration, and System Options. The main window is titled 'PTZ Preset' and shows a channel selection dropdown set to '1 BB-HCM527CE'. Below this is a table with columns: 'Set as Home', 'Move Here When Event Trigger', 'Position No', 'Position Name', and 'Description'. The table contains two rows: Position 1 named 'p1' and Position 2 named 'p2'. Below the table are buttons for 'Add', 'Edit', 'Remove', and 'Sync with Camera'. Further down, there are input fields for 'Position No' (set to 3) and 'Position Name'. A live video feed from the camera is shown, with 'Pan' and 'Tilt' controls below it. To the right of the video feed are controls for 'PTZ Speed' (set to 1), 'Zoom' (Zoom In, Zoom Out), and 'Focus' (Near, Auto, Far). A 'Description' text area is also present. At the bottom right is an 'Apply' button.

Set as Home	Move Here When Event Trigger	Position No	Position Name	Description
<input type="radio"/>	<input type="radio"/>	1	p1	
<input type="radio"/>	<input type="radio"/>	2	p2	

The recorder supports PTZ cameras and can set multiple preset points or retrieve and manage preset points that are set in the camera. This is helpful if you need to monitor multiple spots in one area from a particular camera.


PTZ Preset

Channel: 1.BB-HCM527CE

Set as Home	Move Here When Event Trigger	P	n No	Position Name	Description
<input type="radio"/>	<input type="radio"/>	1	1	p1	
<input type="radio"/>	<input type="radio"/>	2	2	p2	

Position No: 3

Position Name:



Pan

PTZ Speed: 1

Zoom:

Focus:

Description:

To set up PTZ preset points:

1. Select a camera from the "Camera" drop-down menu and click "Add".
2. Select a position number for the preset point from the "Position Number" drop-down menu and fill in a name in the "Position Name" field for easier identification.
3. Use the PTZ control provided in the configuration page to set the preset point

NVR Setup

- System Configuration
- Channel Configuration
 - Channel Setting
 - OSD Setting
 - PTZ Setting
 - PTZ Preset**
 - PTZ Sequence
 - E-Map Setting
- Event Configuration
- Recording Configuration

PTZ Preset

Channel: 1. BB-HCM527CE

Set as Home	Move Here When Event Trigger	Position No	Position Name	Description
<input type="radio"/>	<input type="radio"/>	1	p1	
<input type="radio"/>	<input type="radio"/>	2	p2	

Add Edit Remove Sync with Camera

Ultimately, you can choose to make this preset point a “Home” point among all other preset points, as well as making the camera to move to this particular point when an event is triggered.

* “Move Here when Event Trigger”: In order for this function to work properly, please also complete configuration in “Event Configuration” >> “Event Trigger”

PTZ Preset Sequence

NVR Setup

- System Configuration
- Channel Configuration
 - Channel Setting
 - OSD Setting
 - PTZ Setting
 - PTZ Preset
 - PTZ Sequence**
 - E-Map Setting
- Event Configuration
- Recording Configuration
- System Options

PTZ Sequence

Channel: 1: cam1

Preset Positions:

- 1:p1
- 2:p2

Preset Sequence:

Dwell Time: 20s

Apply Cancel

Once you have multiple preset points defined for a camera, it is convenient for monitoring to set up the sequencing viewing among those preset point and let the recorder automatically switch between them for you.

Channel: 1: cam1 1

Preset Positions:

1:p1	→ ←
2:p2	

2

Preset Sequence:

3 ↑ ↓

Dwell Time: 20s 4


Apply Cancel

To configure preset sequence for a camera,


1. Select a channel from the "Channel" drop-down menu. The available preset points should be listed in "Camera Presets" section.
2. Pick the ones you like for sequence viewing and press the "->" button to move them to the "Preset Sequence" section, then
3. Use the up and down buttons to adjust their sequencing positions.
4. Finally, select a dwell time from the drop-down menu and click "Apply" to save the configuration

E-Map Setting

Local E-Map Setting

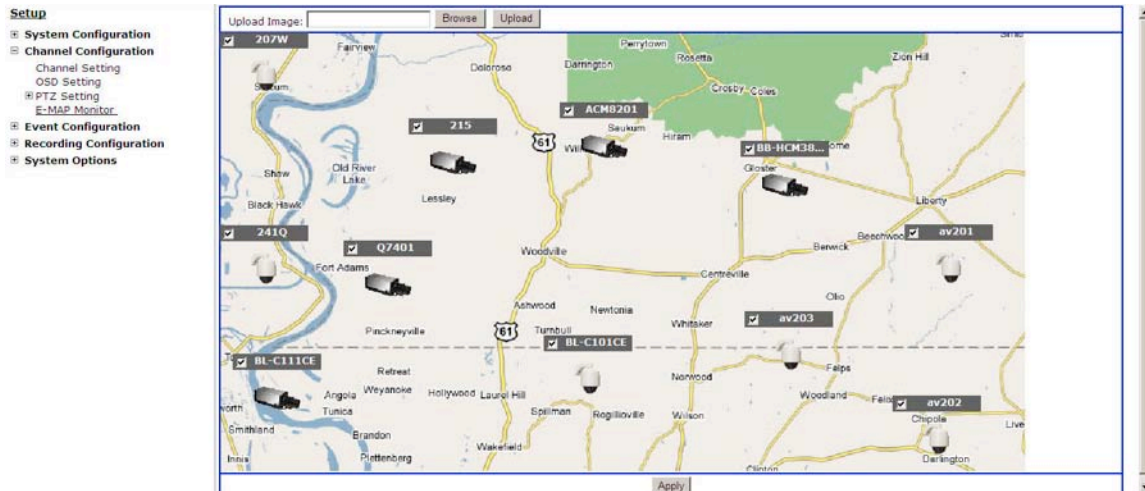

E-Map monitor is a function that alerts users whenever there is an event triggered (e.g. motion detected) from a camera with a geographical perspective. With this function, users can quickly identify which camera has detected an unusual event and where this event is happening. This function works by incorporating the event detection function as well as the recording function, which, as a result, helps users take all the necessary actions when an unusual event occurs.

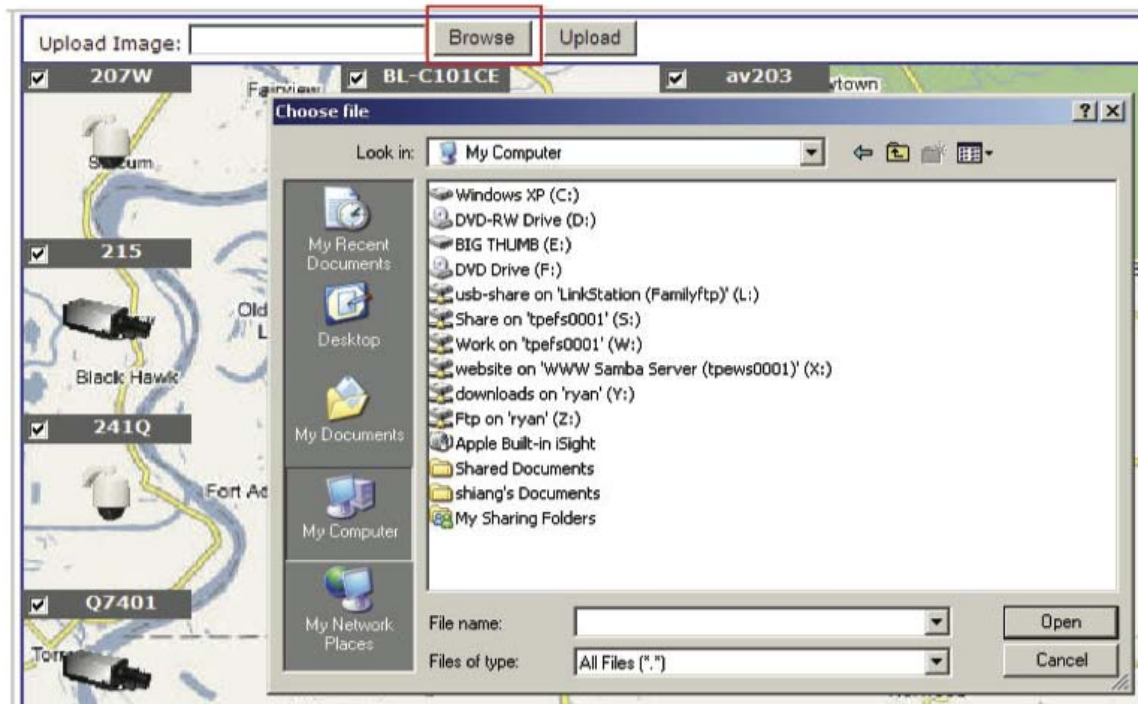


To replace the map, click "Browse" button to locate the new map image file from the local PC and then click "Upload".


** Only JPG, PNG, and GIF file formats are supported with file size under 100KB.*



Then click and drag the camera icon to move the camera to define its location.

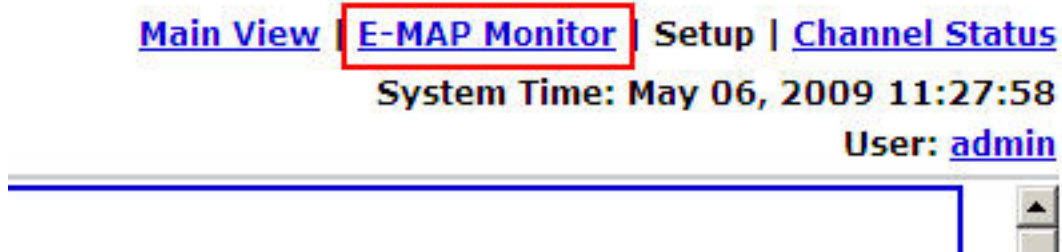

Access the E-Map Monitor page from the upper-right hand corner menu.

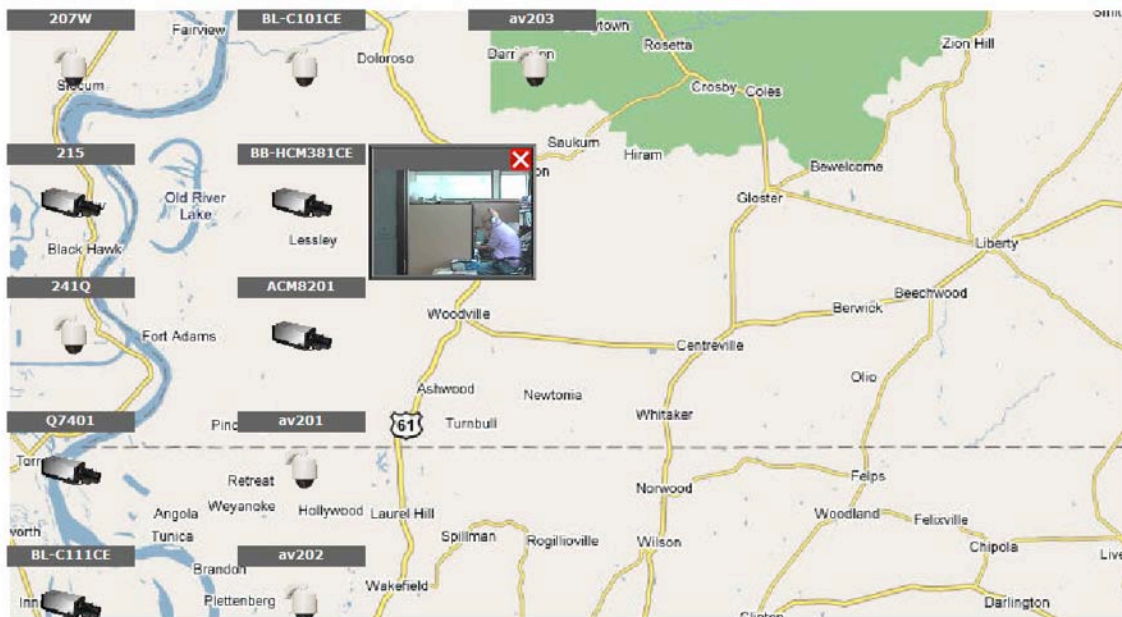

When the NVR receives an event triggered from any of the cameras, their videos will be displayed on the E-Map and you can double-click on the video to enlarge it.

Google Map Setting



The Google Map monitor is a similar function to the aforementioned E-Map monitor. It is useful if you are managing multiple cameras from different locations.




To configure locations of each camera, first determine the location you'd like to place the camera to on the map. You can do so by:

1. Zoom in to a smaller area by using the zoom control bar on the map
2. Zoom in to a smaller area by using the mouse scroll button



You can also go to a specific place on the map by entering its address or the name of the place in the "Address or places of interest" field

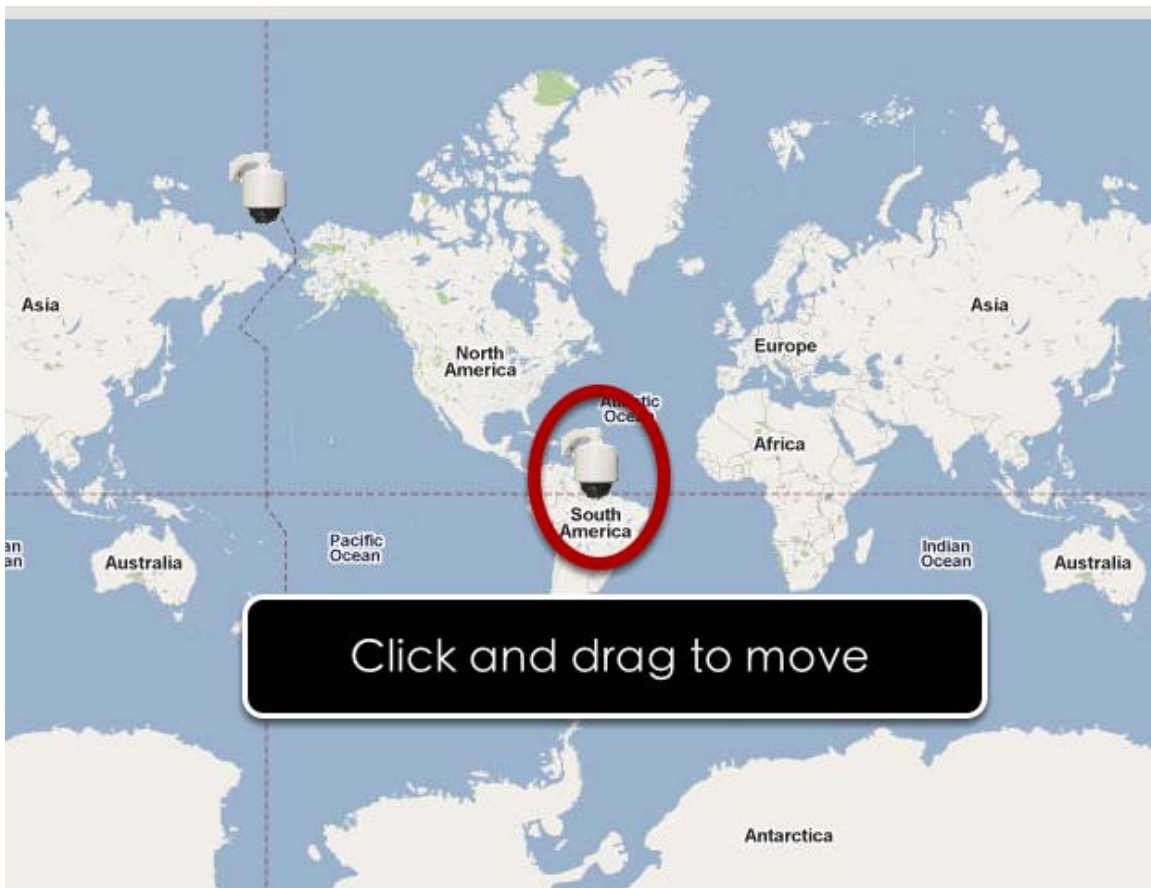

Once the location has been determined, click and drag the camera icon to move it to the desired location

** The Google Map Monitor requires active Internet connection and cannot be used in conjunction with the regular E-Map monitor function.*

NVR Setup -- Event Configurations

Event Configuration

The “Event Configurations” section allows users to define conditions that constitute an event, its corresponding trigger action and when it will be triggered. Such setting can reduce the management overhead and notify the administrator only when it's necessary.

General Settings

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
 - General Setting**
 - DI/DO Setting
 - Event Servers
 - Event Trigger
- Recording Configuration
- System Options

General Setting

Event Trigger Duration

☒ Always

☐ Only during: ☐ Sun ☐ Mon ☐ Tues ☐ Wed ☐ Thur ☐ Fri ☐ Sat

Start Time: 00 : 00 End Time: 00 : 00

Event Trigger Interval

Interval: 5 Seconds. (5~86400)

Trigger Actions

Subject: <TIME> : <CH> <TRIGGER> from <IP>

☐ Send Message

Text:

FTP File Name:

<IP> _ <CH> _ <TRIGGER> _ <TIME>

☐ Send Image

1 Frames,

File Name:

Apply Cancel

The general settings section can help you quickly configure when an event is triggered, how often events are triggered and the corresponding actions when events are triggered.

Start the event configuration by defining the general settings:

Define when an event will be triggered

- Choose “Always” or “Only during...” under “Event Trigger Duration”
- For the “Only during...” option, choose the days by using the check-box and then define the time range in those days in the “Start Time” and “End Time” fields that you would like the event trigger function to be enabled.

How often an event is triggered

- Set a time interval under "Event Trigger Interval" to define how often events are triggered

Trigger action

Now that you have the event trigger duration and interval defined, choose what action to be taken during an event trigger:

- You can choose to have the recorder send out the first few frames of the video recorder upon an event is triggered
- You can also choose to have the recorder send out a warning message in e-mail or in txt file format and upload it to an destined FTP server

DI/DO Settings

Concept of DI/DO event

The NVR has built-in DI port x 8, and DO port x 4 which can be used for event trigger. Some cameras also come with DI port built-in as a source of event. The NVR can detect such capability from the camera after it's being added. User can then configured event trigger by either from camera's or NVR's DI port.

In summary, DI/DO event can basically be configured for three purposes:

- (1) Configure devices connected on NVR's DO port to be triggered by camera's or NVR's DI port.
- (2) Configure devices connected on NVR's DO port to be triggered by NVR's system events.
- (3) Configure devices connected on NVR's DO port to be triggered by NVR's system event.

Steps required to properly DI/DO events

To properly set up a DI/DO event, the following steps are required:

- (1) Defined DI/DO ports trigger conditions (from camera's or NVR's)
- (2) Enable NVR to trigger event when receiving DI trigger signal from the camera
- (3) Enable desired system events

(4) Enabled the NVR to trigger the DO ports for the configured DI conditions/system events

Define DI/DO ports trigger conditions (System events)

Noticing in the section highlighted below, users don't get to configure the DI ports but the NVR's DO port. This is for configuring chosen DO port in the NVR to be triggered to the desired "State" by the NVR's system events.

DI/DO Setting						
	Trigger Event When				Trigger DO	
	IP Camera		ESV32U		ESV32U	
	Port	Condition	Port	Condition	Port	State
ESV32U	-----	-----	-----	-----	Disable	Disable
CH 1	Disable	Disable	Disable	Disable	Disable	Disable
CH 2	Disable	Disable	Disable	Disable	Disable	Disable

5 Seconds (0:unlimited or 5~86400 sec)

Apply Cancel

Define DI/DO ports trigger conditions (camera's or NVR's DI events)

The section highlighted below which users can defined events to be triggered by camera's or/and NVR's DI port(s) for each channel. Then the chosen DO ports to be triggered to desired states by the corresponding DI ports defined.

DI/DO Setting						
	Trigger Event When				Trigger DO	
	IP Camera		ESV32U		ESV32U	
	Port	Condition	Port	Condition	Port	State
ESV32U	-----	-----	-----	-----	Disable	Disable
CH 1	Disable	Disable	Disable	Disable	Disable	Disable
CH 2	Disable	Disable	Disable	Disable	Disable	Disable

5 Seconds (0:unlimited or 5~86400 sec)

Apply Cancel

Define DI /DO ports trigger conditions (camera's DI port conditions)

The section highlighted below is to defined the trigger condition from the **camera's DI port**. Users can select the desired port from the desired channel and configure event trigger when the DI port condition is in "Open", "Ground", or "Change".

DI/DO Setting											
		Camera's DI port				Trigger Event When			Trigger DO		
		IP Camera		ESV32U					ESV32U		
		Port	Condition	Port	Condition	Port	State	Duration			
ESV32U		-----	-----	-----	-----	Disable	Disable	5	Seconds (0:unlimited or 5~86400 sec)		
CH 1		Disable	Disable	Disable	Disable	Disable	Disable	5	Seconds (0:unlimited or 5~86400 sec)		
CH 2		Disable	Disable	Disable	Disable	Disable	Disable	5	Seconds (0:unlimited or 5~86400 sec)		

Define DI /DO ports trigger conditions (NVR's DI port conditions)

The section highlighted below is to defined the trigger condition from the **NVR's DI port**. Users can select the desired channel to use the desired DI port from the NVR, and configure event trigger when the DI port condition is in "Open", "Ground", or "Change".

DI/DO Setting											
		NVR's DI port				Trigger Event When			Trigger DO		
		IP Camera		ESV32U					ESV32U		
		Port	Condition	Port	Condition	Port	State	Duration			
ESV32U		-----	-----	-----	-----	Disable	Disable	5	Seconds (0:unlimited or 5~86400 sec)		
CH 1		Disable	Disable	Disable	Disable	Disable	Disable	5	Seconds (0:unlimited or 5~86400 sec)		
CH 2		Disable	Disable	Disable	Disable	Disable	Disable	5	Seconds (0:unlimited or 5~86400 sec)		

Define DI /DO ports trigger conditions (NVR's DO port conditions)

Once you have the DI ports conditions properly defined, configure the section highlighted below for the corresponding DO ports to be triggered by the conditions defined on the left for each channel. Users can choose which DO port to be triggered and changes the DO port to be either "Open" or "Ground" state by the defined DI condition and how long the trigger lasts before user interrupts it.

DI/DO Setting

	Trigger Event When				Trigger DO		
	IP Camera		ESV32U		ESV32U		
	Port	Condition	Port	Condition	Port	State	Duration
ESV32U	-----	-----	-----	-----	Disable ▾	Disable ▾	5 Seconds (0:unlimited or 5~86400 sec)
CH 1	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	5 Seconds (0:unlimited or 5~86400 sec)
CH 2	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	Disable ▾	5 Seconds (0:unlimited or 5~86400 sec)

Apply

Cancel

Enable NVR to trigger event when receiving DI trigger signal from the camera

If you have defined camera's DI ports as source of event in the DO/DO setting page, when done, head over to the Event Trigger page under "Event Configuration" and enable the NVR to trigger event when receiving DI signals from the camera by ticking the checkboxes highlighted below.

Event Handling Setting

When Channel is triggered by

Reminder:

*Please make sure you have properly enabled and configured motion detection region in the camera's web configuration UI before enabling motion detection in the NVR. The NVR detection, and only the first region will be used even if you set multiple motion detection regions in the camera.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
I/O Input	<input type="checkbox"/>	<input type="checkbox"/>														
Motion Detection	<input type="checkbox"/>	<input type="checkbox"/>														
Custom Event	<input type="checkbox"/>	<input type="checkbox"/>														

	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
I/O Input																
Motion Detection																
Custom Event																

When NVR is triggered by


- ☐ Disk fail
 ☐ Recycled
- ☐ When NVR start up
 ☐ When NVR system configuration changed
- ☒ When channel's configuration changed
 ☐ When camera connection status changed
- ☐ When remaining HDD space is lower than GB (min. 2GB when HDD recycle function is disabled)
- ☐ When system temperature is too high

Trigger Actions

- ☐ E-Mail: E-Mail Addresses: *use "," to separate e-mails
- ☐ FTP: Upload Path:
- ☐ Trigger I/O Output
- ☐ Warning Sound

Enable desired system events

If you have define corresponding DO port to be triggered by NVR's system event, section highlighted below is where you define what system events will trigger the DO port.

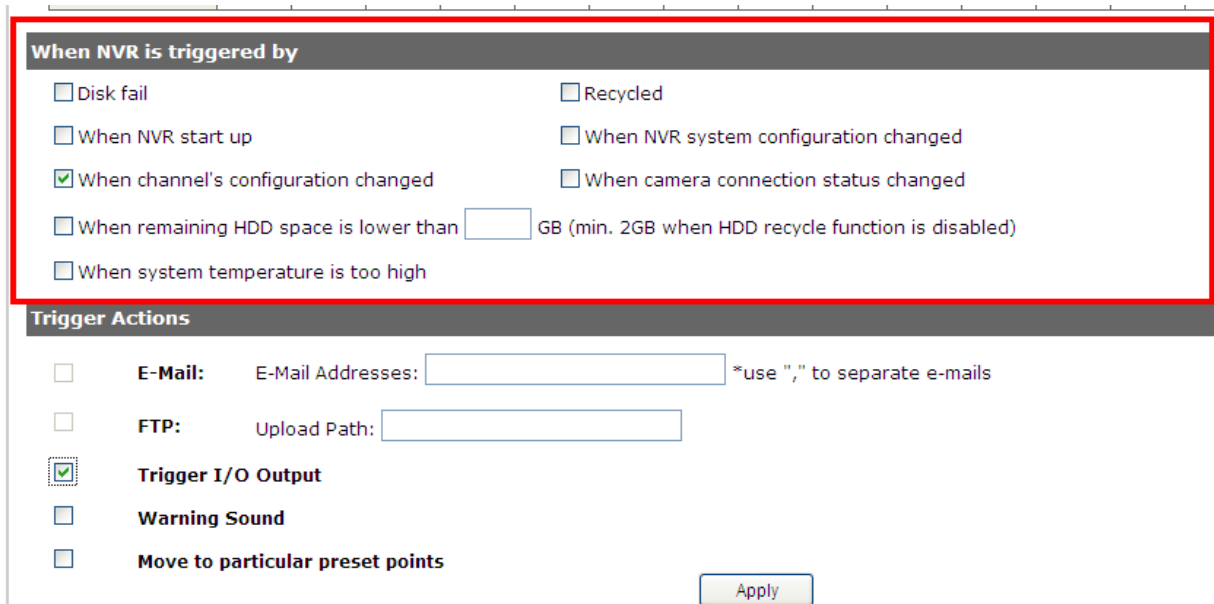

When NVR is triggered by

- ☐ Disk fail
- ☐ Recycled
- ☐ When NVR start up
- ☐ When NVR system configuration changed
- ☒ When channel's configuration changed
- ☐ When camera connection status changed
- ☐ When remaining HDD space is lower than GB (min. 2GB when HDD recycle function is disabled)
- ☐ When system temperature is too high

Trigger Actions

- ☐ **E-Mail:** E-Mail Addresses: *use ", " to separate e-mails
- ☐ **FTP:** Upload Path:
- ☒ **Trigger I/O Output**
- ☐ **Warning Sound**
- ☐ **Move to particular preset points**

Enabled the NVR to trigger the DO ports for the configured DI conditions/system events

Lastly, check and enable the option highlighted below in the Trigger Actions section in the Event Trigger setting page to enable the NVR to trigger the DO ports for the configured DI/system events.

When NVR is triggered by	
<input type="checkbox"/> Disk fail	<input type="checkbox"/> Recycled
<input type="checkbox"/> When NVR start up	<input type="checkbox"/> When NVR system configuration changed
<input checked="" type="checkbox"/> When channel's configuration changed	<input type="checkbox"/> When camera connection status changed
<input type="checkbox"/> When remaining HDD space is lower than <input type="text"/> GB (min. 2GB when HDD recycle function is disabled)	
<input type="checkbox"/> When system temperature is too high	

Trigger Actions	
<input type="checkbox"/> E-Mail:	E-Mail Addresses: <input type="text"/> *use "," to separate e-mails
<input type="checkbox"/> FTP:	Upload Path: <input type="text"/>
<input checked="" type="checkbox"/> Trigger I/O Output	
<input type="checkbox"/> Warning Sound	
<input type="checkbox"/> Move to particular preset points	

**The recorder does not control camera's input or output ports in a way to let you pair recorder itself with a camera's input or output port for event receiving or triggering.*

**The recorder only acts as a medium for pairing up input/output ports between cameras and the recorder.*

**Only connected cameras will be displayed in the list.*

**Some cameras only allow one trigger source be configured at a time, e.g.:*

If the camera has the motion detection function turned on, its digital input will be disabled and vice versa. Under such circumstance, if you set to use camera's digital input port as the event trigger source, you will not be able to select motion detection as the trigger source for this camera under "Event Configurations" >> "Event Trigger" setup page.

- The image(s) that are uploaded to the destined FTP server or emailed to a destined mail recipient are in their own proprietary image file format (.h4i or .p4i), which can only be opened by the NVR media player.*
- (.h4i) when event was recorded in H.264*
- (.p4i) when event was recorded in MPEG4*
- (.jpg) when event was recorded in MJPEG*

Event Servers

Configuring an FTP server

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
 - General Setting
 - DI/DO Setting
 - Event Servers
 - FTP Servers**
 - HTTP Servers
 - SMTP Servers
 - Event Trigger
- Recording Configuration
- System Options

FTP Servers Setting

Name	Network Address	Port	Passive Mode	Enabled
<input type="button" value="Edit"/>	<input type="button" value="Remove"/>			

FTP Server

Name:

Network Address: *Enter host name or IP address

Port:

Login Information

User Name:

Password:

Passive Mode

☐ Use Passive Mode

Test

*Click "Test" to test the connection to the FTP server:

Event servers are to be used with event trigger actions. In case of unusual motion detected by the camera or a disk failure, the recorder can send notification with the acceptable format (image/txt) to a destined event server according to the configuration.

NVR Setup

- ⊕ System Configuration
- ⊕ Channel Configuration
- ⊕ Event Configuration
 - General Setting
 - DI/DO Setting
 - ⊕ Event Servers
 - FTP Servers
 - HTTP Servers
 - SMTP Servers
 - Event Trigger
- ⊕ Recording Configuration
- ⊕ System Options

FTP Servers Setting

Name	Network Address	Port	Passive Mode	Enabled
<div>Edit</div> <div>Remove</div>				

FTP Server

Name: ①

Network Address: ② per host name or IP address

Port: ③

Login Information

User Name: ④

Password: ④

Passive Mode

☐ Use Passive Mode ⑤

Test

Test ⑥

 Click "Test" to test the connection to the FTP server:

Add ⑦

To add an FTP server,

1. Start by giving a name to the server that you are adding to the recorder
2. Enter the hostname or the IP address of the FTP server
3. Enter the communication port of the FTP server (usually port 21)
4. Enter the username and password of the FTP server if it's required
5. Check "Use Passive Mode" if it's required or leaves it unchecked to use active mode
6. Click "Test" to verify if all information is entered correctly and the connection to the FTP server can be established successfully
7. Click "Add" for the settings to take effect

Configuring an SMTP server

SMTP Servers Setting

SMTP Server 1

Network Address: *Enter host name or IP address
Port:
Sender's Name:
Sender's E-mail:
☐ Enable Authentication:
User Name:
Password:

Test

Send Test Email To:

SMTP Server 2

Network Address: *Enter host name or IP address
Port:
Sender's Name:
Sender's E-mail:
☐ Enable Authentication:
User Name:
Password:

Test

Send Test Email To:

1. Enter the hostname or the IP address of the SMTP server
 2. Enter the port of the SMTP server
 3. Specify the sender's name in the "Sender's name" field
 4. Enter the sender's e-mail address
 5. Check "Enable Authentication" and enter the username and password of the SMTP server if it requires authentication
 6. Click "Apply" to save the configuration
- The NVR supports SMTP servers that use base64 or MD5 authentication methods.
 - 3rd party free E-mail services such as Gmail, Hotmail, or Yahoo mail are not supported.

Event Triggers

When Channel is triggered by

Reminder:

*Please make sure you have properly enabled and configured motion detection region in the camera's web configuration UI before enabling motion detection in the NVR. The NVR only supports single region detection, and only the first region will be used even if you set multiple motion detection regions in the camera.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
I/O Input	<input type="checkbox"/>	<input type="checkbox"/>														
Motion Detection	<input type="checkbox"/>	<input type="checkbox"/>														
Custom Event	<input type="checkbox"/>	<input type="checkbox"/>														

	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
I/O Input																
Motion Detection																
Custom Event																

When NVR is triggered by

- ☐ Disk fail
 ☐ Recycled
- ☐ When NVR start up
 ☐ When NVR system configuration changed
- ☐ When channel's configuration changed
 ☐ When camera connection status changed
- ☐ When remaining HDD space is lower than GB (min. 2GB when HDD recycle function is disabled)
- ☐ When system temperature is too high

Trigger Actions

- ☐ **E-Mail:** E-Mail Addresses: *use "," to separate e-mails
- ☐ **FTP:** Upload Path:
- ☐ **Trigger I/O Output**
- ☐ **Warning Sound**
- ☐ **Move to particular preset points**

Apply

We have finished defining how an event will be triggered and which servers will be receiving notifications in the previous two sections, now we can finish up the event configuration by setting:

- Which channels will have event trigger function enabled
- What is considered to be an event
- Where the warnings will be sent to and how they will be sent

Event Handling Setting

When Channel is triggered by

*Please make sure you have properly enabled and configured motion detection region in the camera's web configuration UI before enabling motion detection in the NVR. The NVR only supports single region detection, and only the first region will be used even if you set multiple motion detection regions in the camera.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
I/O Input	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								
Motion Detection	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								
Custom Event	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>								

Use the checkbox to enable event trigger on the desired channels.

**Once motion detection is enabled in this page, please configure the motion area and enable motion detection in the corresponding channels (cameras) from camera's own web UI. The NVR only detects the first motion area set in the camera. The NVR recognizes the first motion area by its ID number set in the camera.*

** Enabling the "custom event" option allows the NVR to receive events from the CMS software and start recording; events such as the intelligent video detection in the CMS.*

motion detection regions in the camera.

When NVR is triggered by

- ☐ Disk Fail ☐ Recycled
- ☐ When NVR Start Up ☐ When NVR System Configuration Changed
- ☐ When Channel's Configuration Changed

Trigger Actions

Define which system events should trigger the recorder to send out notifications.

Trigger Actions

- ☐ **E-Mail:** E-Mail Addresses: *use "," to separate e-mails
- ☐ **FTP** Upload Path:
- ☐ **Warning Sound**
- ☐ **Move to particular preset points**

Save

Define how the notifications will be sent and where they will be sent.

- *Event trigger may not work for cameras that are placed outside of your local network or on the Internet until the "UPnP Port Forwarding" is enabled in both the NVR and the router.*

NVR Setup -- Recording Configurations

General Settings

The “recording configurations” gives users the overall control of how and when a recording is performed and the quality of different types of recordings performed on each channels. It can help the recorder to operate with sufficient system resource by performing recording only when it's necessary with adjustable recording frame rate.

Recording General Settings

Recording Buffer

Pre-Alarm Buffer: Seconds

Post-Alarm Buffer: Seconds

Recording Frame Rate

Channel:

	1	2	3	4	5	6	7	8
Format	Same as Live	Same as Live	Same as Live	Same as Live	Same as Live	Same as Live	Same as Live	Same as Live
Continuous	Full	Full	Full	Full	Full	Full	Full	Full
Schedule	Full	Full	Full	Full	Full	Full	Full	Full
Event	Full	Full	Full	Full	Full	Full	Full	Full
Manual	Full	Full	Full	Full	Full	Full	Full	Full

Keep Video

☐ Keep the previous days of recorded videos

Camera Recording Setting

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Continuous	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Schedule	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Event	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Continuous	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Schedule	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Event	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Record Audio

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Record audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Record audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

You can define the following in “General Settings”:

- Pre-Alarm/Post-Alarm recording length
- Recording frame rate
- Define to always keep a number of days of previously recorded data
- Enable/disable different recording types on different cameras
- Enable/disable audio recording

Recording Buffer

Pre-Alarm Buffer: Seconds (0~10)

Post-Alarm Buffer: Seconds (5~60)

Recording Frame Rate

Channel:

The "recording buffer" allows user to define "pre-alarm" and "post-alarm" time for event recordings. The "pre-alarm" time sets the NVR to record in advance when an event is triggered. The "post-alarm" time sets the NVR to continue recording for a period of time after an event trigger is finished.

* The "Pre-alarm" function only works when the "Continuous" recording is also activated.


Recording Frame Rate

Channel:

	1	2	3	4
Format	Same as Live <input type="text"/>	Same as Live <input type="text"/>	Same as Live <input type="text"/>	Same as Live <input type="text"/>
Continuous	Full <input type="text"/>	Full <input type="text"/>	Full <input type="text"/>	Full <input type="text"/>
Schedule	Full <input type="text"/>	Full <input type="text"/>	Full <input type="text"/>	Full <input type="text"/>
Event	Full <input type="text"/>	Full <input type="text"/>	Full <input type="text"/>	Full <input type="text"/>
Manual	Full <input type="text"/>	Full <input type="text"/>	Full <input type="text"/>	Full <input type="text"/>

Keep Video

Recording frame rate allows you to set different frame rate for different types of recording instead of recording at one frame rate only. Use the drop-down menu and select one of the pre-defined frame rates for a particular recording type

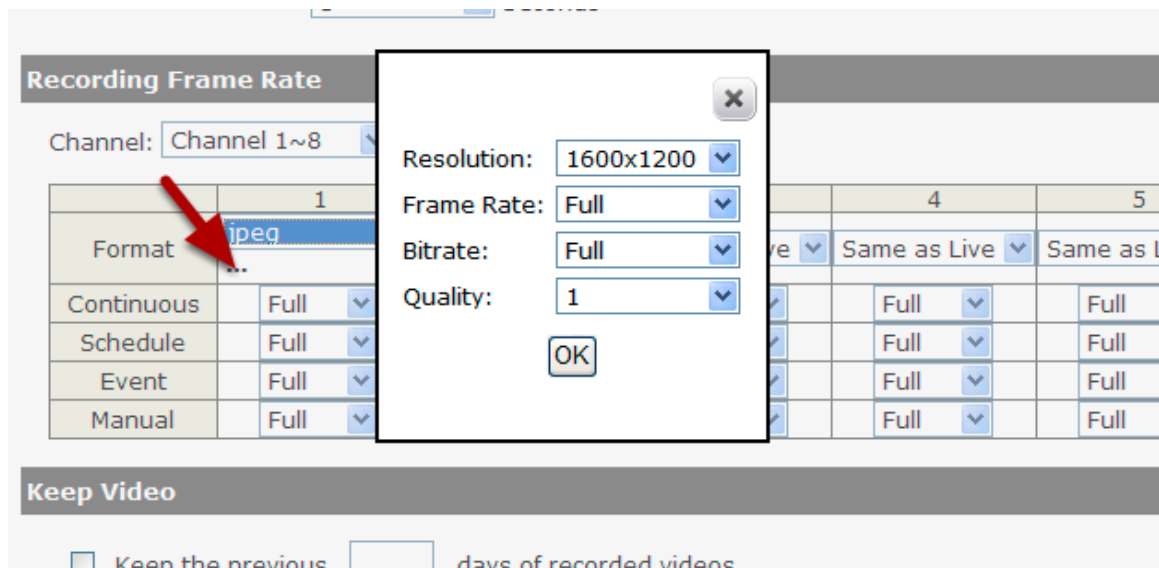

You are able to use the same video format for recordings or you can choose other formats for different recording purposes if it's a multi-stream capable camera.

If you chose to use a different video format for recording, you are able to adjust its detail settings by clicking on the "...".

A new dialog will pop out for further detail configurations. Noticing the "Frame rate" in this dialog represents the live fps that will be set back to the camera for this particular video format. You can configure the recording fps for different types of recordings individually.

Keep Video

☐ Keep the previous days of recorded videos

Camera Recording Setting

Users can also set to keep a previous number of days of recording data by enabling the option below. This is quite often used in application such as banking which certain countries requires to always keeping a minimum previous number of days of recording data.

** If this option is enabled, once the hard drive is full, the recycle function will then start but it will ensure that the number of days of recording data defined here will stay in hard drive instead of wiping out 20GB of data at a time.*

* If the hard drive is not full, the NVR re-calculates twice a day (each at 2:30am and 2:30pm) to keep the defined number of days of recording data from these two particular points of time backward.

Camera Recording Setting

[illegible]

Record Audio

	1	2	3	4	5	6	7	8	9	1
Record audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	

	17	18	19	20	21	22	23	24	25	2
Record audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	

The section at the bottom of the page allows you to disable audio recording (record video only) of particular channels.

Schedule Recording**Schedule Recording Settings**

Channel: 1.215 PTZ

Schedule Table

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sunday																								
Monday																								
Tuesday																								
Wednesday																								
Thursday																								
Friday																								
Saturday																								

Clear

Quick Configuration

Days:

☐ Sun
☐ Mon
☐ Tues
☐ Wed
☐ Thur
☐ Fri
☐ Sat
☐ All

Duration:

☐ All day

☒ During

Start Time: 00 : 00

End Time: 00 : 00

Add

Copy Schedule To Channel:

Copy Schedule To All Channels

Apply

Cancel

You can define the time range of the schedule recording for all channels in this page.

To configure a schedule recording

Schedule Recording Settings

Channel: 

Use the "Channel" drop-down menu and select a camera first.

Schedule Table																								
	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sunday																								
Monday																								
Tuesday																								
Wednesday																								
Thursday																								
Friday																								
Saturday																								

Clear

You can use the schedule table to set the time range. Click the cell boxes then move horizontally lets you set what hours to perform recording during a day. Click and move vertically lets you set what days to perform recording at a specific time.

** Each cell box represents 15 minutes of time. Click one or more boxes to omit consecutive recording.*

Quick Configuration

 
Days:

☐ Sun
☐ Mon
☐ Tues
☐ Wed
☐ Thur
☐ Fri
☐ Sat
☐ All

Duration:


☐ All day
☒ During

Start Time: :
End Time: :




You can also use the "Quick Configuration" to define recording time range instead of clicking cell boxes one by one on the timetable. Simply check what days you would like to perform recording and

specify the recording duration by either choosing "All Day" or enter a start and end time for specific recording duration.

Copy Schedule To Channel: 

Select the "Copy Schedule to Channel:" option if you would like to set the same recording schedule to another camera.

Copy Schedule To Channel: 

Alternatively, you can click on "Copy Schedule to All Channels" and apply schedule setting to all channels at once.

NVR Setup -- System Options

Device Information

System Options gives users a glance of the overall system status and allows users to perform maintenance tasks such as upgrading firm-ware, restore/backup device settings or reboot deviceetc.

NVR Setup	General Information
⊕ System Configuration	Device Name:
⊕ Channel Configuration	Model Name: SVR-632
⊕ Event Configuration	Firmware Version: 1.0.0.39090
⊕ Recording Configuration	Device Time: July 18, 2011 17:51:10
⊖ System Options	Network Information
<u>Device Information</u>	Network Type: DHCP
System Logs	Device IP: 192.168.102.48
Maintenance	HTTP Port: 80
Disk Status	Streaming Port: 9877
USB Backup	MAC Address: 00:19:0f:07:39:5a
	UPnP Port Forwarding: Disabled

The "Device Information" provides the general information of the device such as firmware version and system time. It also provides information of the current network settings and status.

Logs and Reports

System Logs

ID	Time	Type	Sub-type	CH	AP	IP	User
1	July 19, 2011 10:15:07	User	User login		Web		admin
2	July 19, 2011 09:47:20	User	User login		Web		admin
3	July 19, 2011 08:56:19	Recording	Stop recycling HDD space				
4	July 19, 2011 08:55:23	Recording	Start recycling HDD space				
5	July 18, 2011 20:21:40	User	User logout		TestClient	192.168.102.21	admin
6	July 18, 2011 20:20:38	User	User logout		TestClient	192.168.101.178	admin
7	July 18, 2011 19:54:46	User	User login		Web		admin
8	July 18, 2011 19:50:35	User	User login		Web		admin
9	July 18, 2011 19:45:14	Linux	Format hard disk				
10	July 18, 2011 19:44:55	Linux	Format hard disk				
11	July 18, 2011 19:44:33	Linux	Format hard disk				
12	July 18, 2011 19:44:15	Linux	Format hard disk				
13	July 18, 2011 19:43:59	Linux	Format hard disk				
14	July 18, 2011 19:43:38	Linux	Format hard disk				
15	July 18, 2011 19:41:06	Channel	Camera connected	31			
16	July 18, 2011 19:41:06	Channel	Camera connected	21			
17	July 18, 2011 19:41:05	Channel	Camera connected	18			
18	July 18, 2011 19:41:05	Channel	Camera connected	19			
19	July 18, 2011 19:41:05	Channel	Camera connected	17			
20	July 18, 2011 19:41:05	Channel	Camera connected	16			
21	July 18, 2011 19:41:05	Channel	Camera connected	15			
22	July 18, 2011 19:41:05	Channel	Camera connected	13			
23	July 18, 2011 19:41:05	Channel	Camera connected	14			
24	July 18, 2011 19:41:05	Channel	Camera connected	12			
25	July 18, 2011 19:40:46	Channel	Camera connected	22			

“Logs and Reports” keeps a record of what’s been happening to the device and provides basic information for troubleshooting.

Maintenance

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
 - Device Information
 - System Logs
 - Maintenance**
 - DO Status
 - Disk Status
 - USB Backup
 - UPS Configuration

Maintenance

Restart NVR

Click "Restart" button to restart NVR

[Restart](#)

Restart NVR Automatically

Select one of the options below:

☒ Restart: ☒ Every week
 ☐ Every month

[Apply](#)

Restart Camera

Select a camera below to perform a restart

[Restart](#)

Upgrade NVR Firmware

Locate the new firmware and perform the upgrade (**Current Firmware Version: 1.6.0A.30028874**)

Specify the firmware file: [Browse](#) and click [Upgrade](#)

***** Note ***:** Please DO NOT power off the system during the firmware upgrade process. You will be notified once the upgrade process is complete

Backup NVR's Setting

Backup the configuration to a local hard disk

[Backup](#)

Restore NVR's Setting

Restore configuration from a previously saved configuration file

Specify the configuration file: [Browse](#) and click [Restore](#)

***** Note ***:** Please DO NOT power off the system during the restore process. You will be notified once the process is completed.

Reset NVR to Factory Default

This will restore all configurations to their factory default values

[Restore Factory Default](#) When the DHCP server function is disabled, the default IP of the system is:192.168.101.50

***** Note ***:** Please DO NOT power off the system during the reset process. You will be notified once the process is complete.

"Maintenance" provides functions for users to:

- Reboot the NVR when necessary
- Reboot cameras directly from the NVR
- Perform Firmware Upgrade
- Backup the NVR's settings to a local hard drive
- Restore the NVR's settings from a previously saved configuration file
- Reset the NVR's settings to their factory default values

Reboot the NVR at a specific time automatically

Restart NVR Automatically

Select one of the options below:

☒ Restart: Every week ▾ Monday ▾ 00:00 ▾ Apply

Restart NVR Automatically

Select one of the options below:

☒ Restart: Every month ▾ 4 ▾ 03:00 ▾ Apply

You can configure the NVR to restart automatically by using the options given in the web UI. You can set the NVR to restart at a particular hour of a specific day during a week or a month.

Firmware Upgrade

The firmware can be upgraded through web UI or USB. Before upgrading firmware, please backup configuration in advance.

***** the firmware file comes with a ".tar.gz" file extension, please use the file as is, DO NOT unzip it. It's normal that you may only see ".tar" as the file extension in Windows as the OS hide the known file extension by default.***

Through the web interface

⊕ **Recording Configuration**

⊖ **System Options**

Device Information


System Logs

Maintenance


DO Status

Disk Status

Login into NVR's web management UI, and go to "NVR Setup" > > "System Options"->"Maintenance"

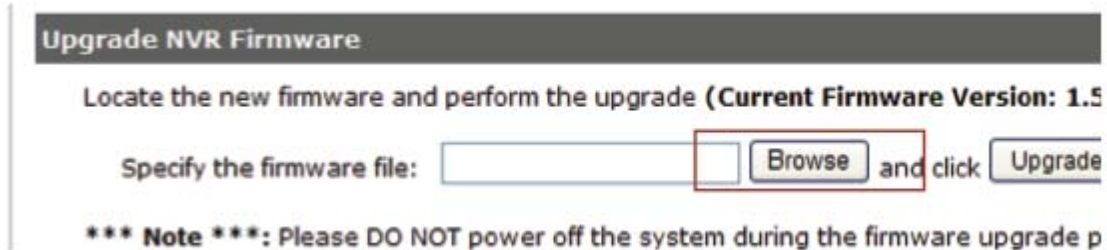


On "Upgrade NVR's Firmware" section, click "Browse" and select new firmware file

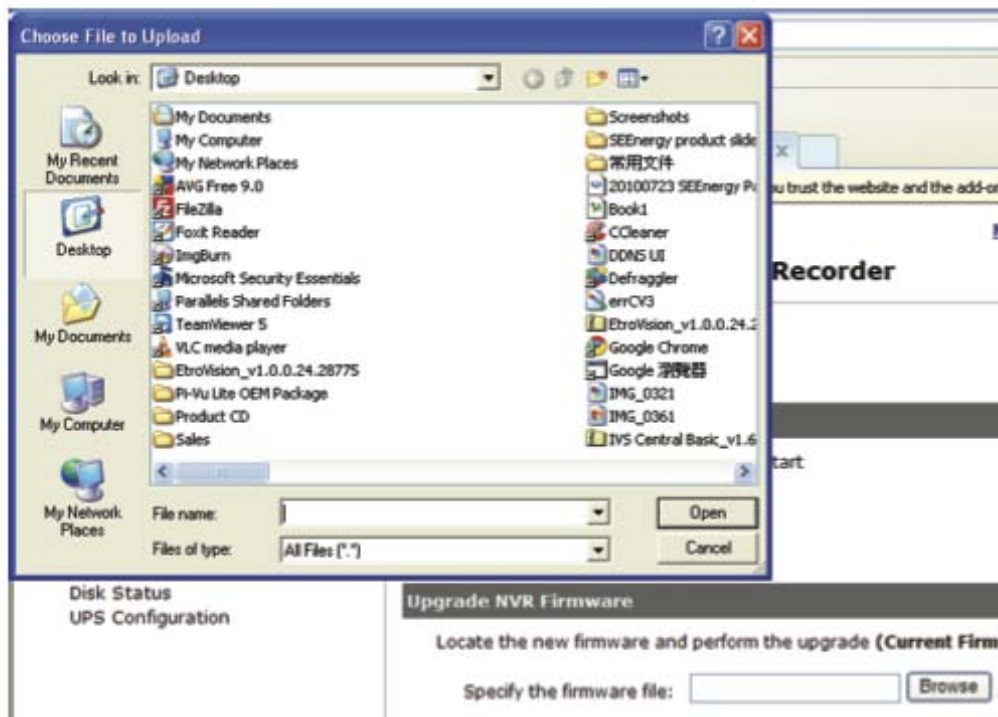

A new dialog should display and let you choose the location of the firmware file.



When done, click "Upgrade".

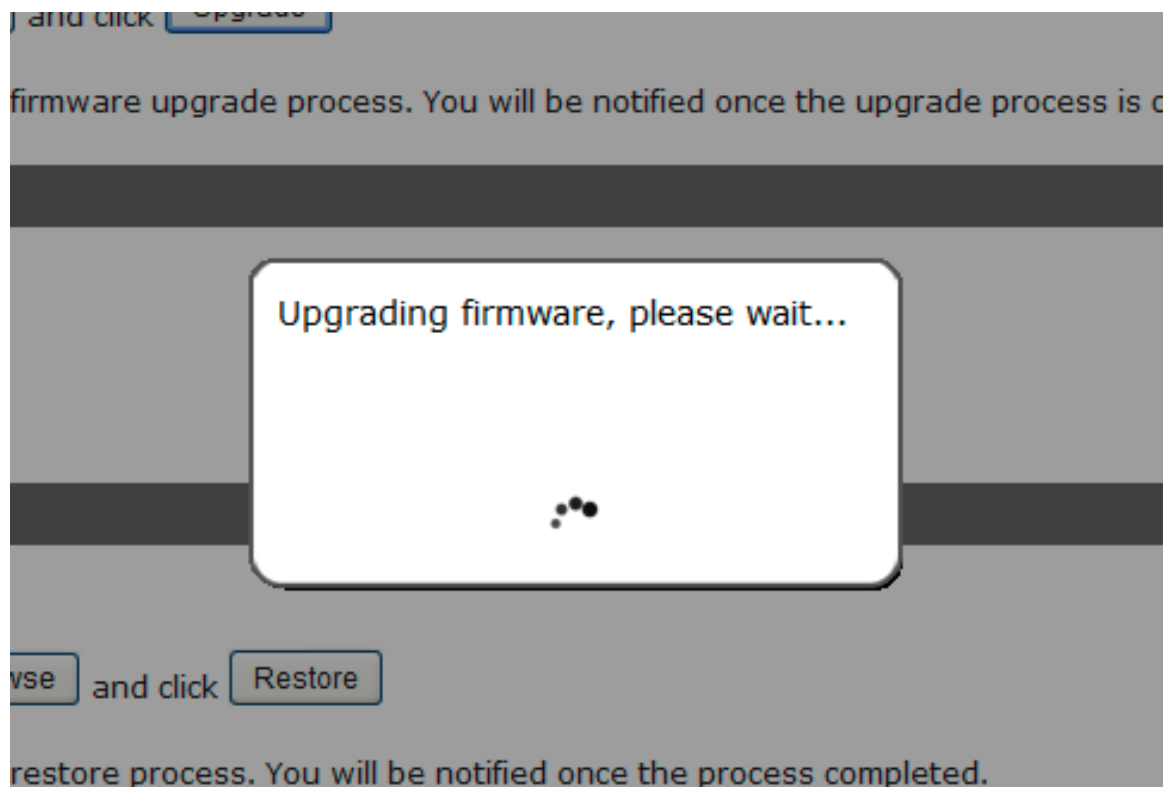

Follow the on screen instruction and wait for the process to finish (After upgrade, the system will reboot automatically.)

Upgrade through USB thumb drive

1. Prepare a USB flash disk and format with FAT or FAT32 format
2. Place the firmware in the USB flash disk and make sure it's placed at the top-level directory. Please do not place the file in a folder.
(Make sure to change the firmware file name to "firmware" and leave its file extension ".tar.gz" as is before placing the file to the USB disk)
3. Plug USB flash disk into USB port on the NVR
4. The System LED on the NVR will start to flash in amber. This indicates firmware upgrade is in process
5. *** Warning *** Please wait until upgrade process finished, interrupt the upgrade process may cause system not work anymore
6. Wait until System LED remains solid in amber. This indicates firmware upgrade is finished
7. Power off the NVR and remove the USB disk the power the unit back on again
8. Restore configuration file back if needed

Reset the NVR to Factory Default

Reset NVR to Factory Default


This will restore all configurations to their factory default values

[Restore Factory Default](#)

When the DHCP server function is disabled, the default IP of the system is:192.168.101.50

*** **Note** ***: Please DO NOT power off the system during the reset process. You will be notified once the process is complete.

To reset the recorder back to its factory default, click "Restore Factory Default" button and begin the process.

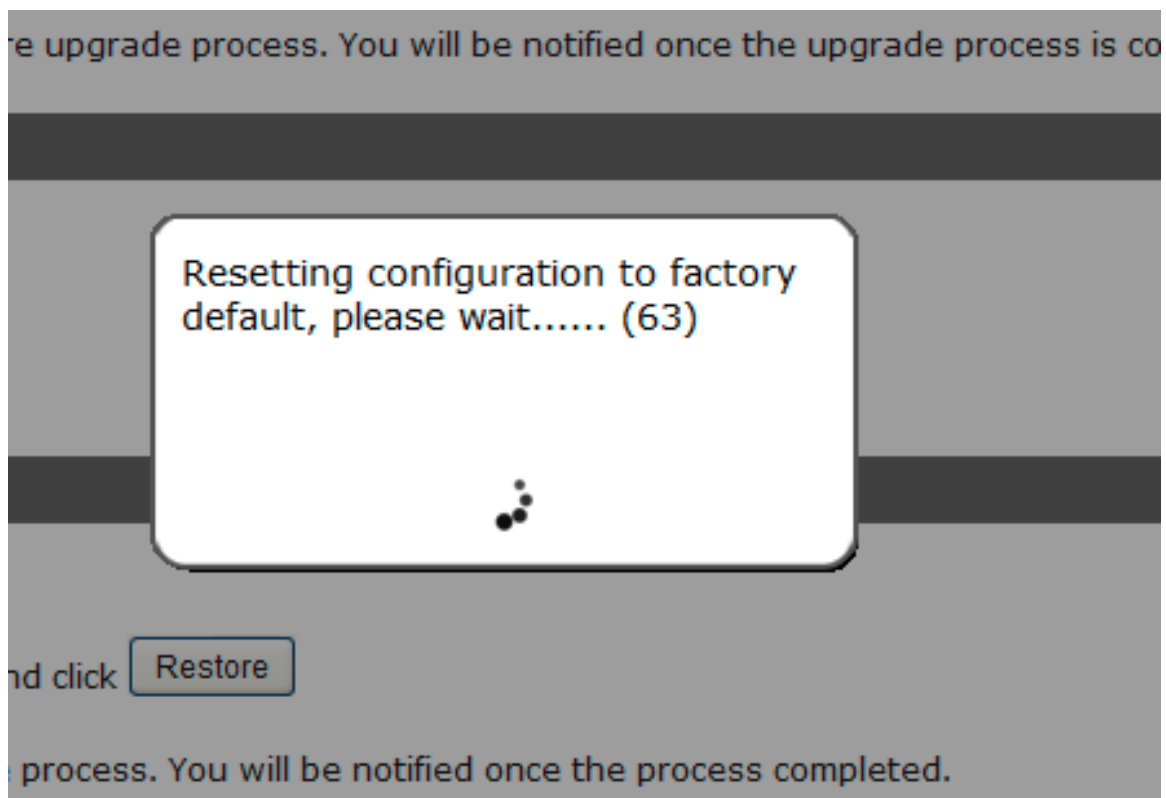

The process should be displayed and you should be prompted back to the "Live View" page after it is complete.

Disk Status

Disk Status							
Disk ID	Status	Capacity	Remaining Disk Space	Remaining	Online Time	Recording Period	Est. Remaining Time
Internal_1	Normal	469GB	441GB	93%	Dec 29 2011 20:23:24	Dec 29 2011 17:18:15 - Dec 30 2011 10:08:18	11 day(s) 1 hour(s)

"Disk Status" gives you more detailed information of the hard drive that is currently installed in the NVR.

USB Backup

NVR Setup

- System Configuration
- Channel Configuration
- Event Configuration
- Recording Configuration
- System Options
 - Device Information
 - System Logs
 - Maintenance
 - DO Status
 - Disk Status
 - USB Backup**
 - UPS Configuration

USB Backup

USB HDD: * Please format the HDD to FAT32 on a Windows PC before using it for backup

☐ LN24001

☐ Channel 5

☐ Channel 9

☐ Channel 13

☐ LNE3003

☐ v1.0.0.5-2

☐ Channel 10

☐ Channel 14

☐ LNE1001

☐ Channel 7

☐ Channel 11

☐ Channel 15

☐ cam4

☐ Channel 8

☐ Channel 12

☐ Channel 16

Start Time: August 12, 2010 14:46:33

End Time: August 12, 2010 14:46:33

Backup

It's a function that allows users to backup the recording data in its database file format (not AVI) to the externally connected USB hard disk.

Disk Status							
Disk ID	Status	Capacity	Remaining Disk Space	Remaining	Online Time	Recording Period	Est. Remaining Time
HDD 1	Online	222GB	216GB	97%	Aug 12 2010 11:21:12	May 21 2010 16:52:02 - Aug 12 2010 12:07:12	2980 day(s) 21 hour (s)
USB HDD 1	Online	1935MB	553MB	28%		--	--

You can check the "Disk Status" page under "System Options" to see if the USB disk has been detected by the NVR. If it's available, it will also be in the USB HDD drop-down menu in the USB backup page.

* It needs a USB disk containing free space larger than 100MB.

USB Backup

USB HDD: USB HDD 1, 553MB available ▼ * Please format the HDD

Channel:

<input checked="" type="checkbox"/> LNZ4001	<input checked="" type="checkbox"/> LNE3003
<input type="checkbox"/> Channel 5	<input type="checkbox"/> v1.0.0.5-2
<input type="checkbox"/> Channel 9	<input type="checkbox"/> Channel 10
<input type="checkbox"/> Channel 13	<input type="checkbox"/> Channel 14

Start Time: May 21, 2010 ▼ 16 : 52 : 02 ▲ ▼

End Time: May 21, 2010 ▼ 16 : 52 : 02 ▲ ▼

Backup

Once it's detected, go back to the "USB Backup" page and it should be available for further configuration

USB Backup

USB HDD: USB HDD 1, 553MB available ▼ * Please format the HDD

☒ LNZ4001 ☒ LNE3003

☐ Channel 5 ☐ v1.0.0.5-2

The USB hard disk(s) will be listed in the drop-down menu displaying the remaining disk space. Make your selection from the drop-down menu if you have more than one disks connected to the NVR.

USB HDD: USB HDD 1, 553MB available ▼ * Please format the HDD

Channel:

<input checked="" type="checkbox"/> LNZ4001	<input checked="" type="checkbox"/> LNE3003
<input type="checkbox"/> Channel 5	<input type="checkbox"/> v1.0.0.5-2
<input type="checkbox"/> Channel 9	<input type="checkbox"/> Channel 10
<input type="checkbox"/> Channel 13	<input type="checkbox"/> Channel 14

Next, select channels which you would like to backup the recording data from. Maximum 4 channels can be selected at once

Start Time: May 21, 2010 ▼ 16 : 52 : 02 ▲ ▼

End Time: May 21, 2010 ▼ 16 : 52 : 02 ▲ ▼

Backup

Configure the start and end time of the recording data you would like to backup and click the "Backup" button to begin.

Things to pay attention to the USB Backup function

Limitation:


- It does not support USB Hub extend the number of HDD connected to the NVR
- Only one backup process can be performed at a time
- Maximum 4 channels can be selected for backup
- Only FAT32 USB hard disk is supported for backup
- The USB hard disk needs to have more than 100MB remaining space
- If multiple partitions are presented in one disk, only the first partition will be detected and used for backup

Process:


- Progress will be displayed on the UI
- If the backup process gets interrupted, which the process stops at a point of time that is before the "END Time" user defined, such time will be displayed on the UI
- A folder will be automatically created in the USB hard disk with a name format like 0028687831_20100610151515_20100605110010_20100606110010 (MAC_backupbuttonclicktime_starttime_endtime)

Note:


- Please plug in the USB HDD only after the NVR is fully started, or the HDDs will be incorrectly mounted.

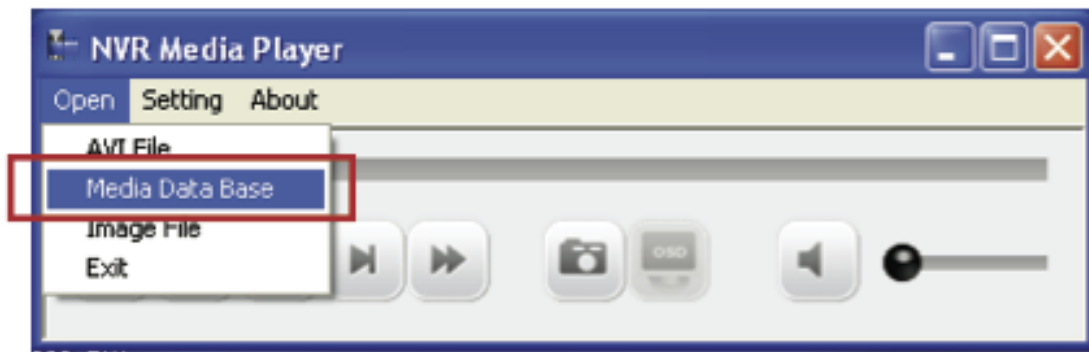Play the backup file with the NVR Media Player


The backup files can be played with the NVR media player. To do, open the player and select "Open" >> "Media Database"

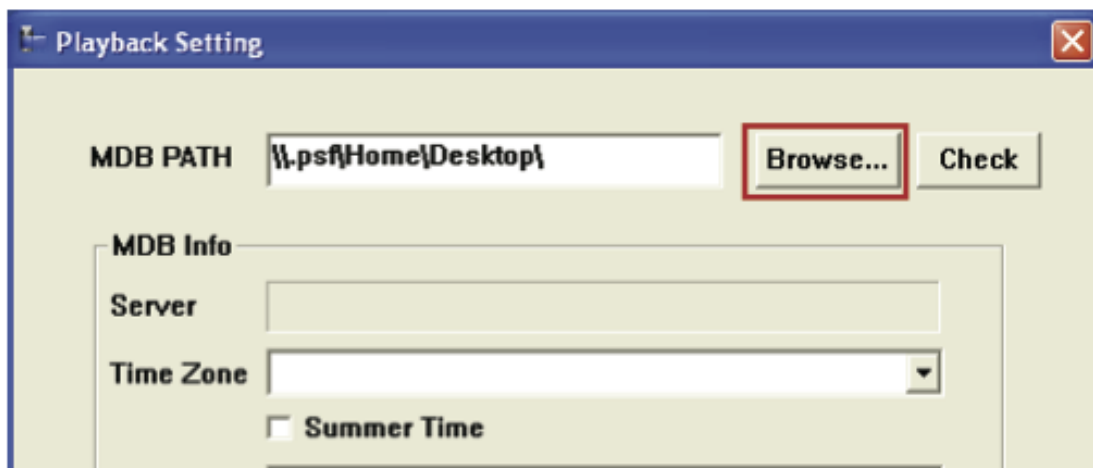


Click "Browse..." to select the file from the USB disk.

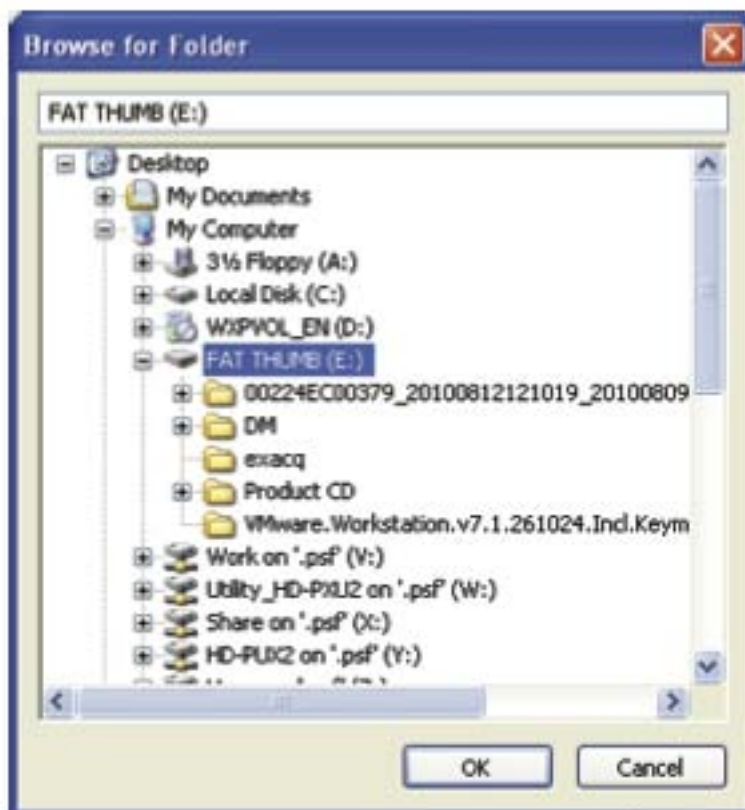

A new dialog should be prompted for you to select the file location.

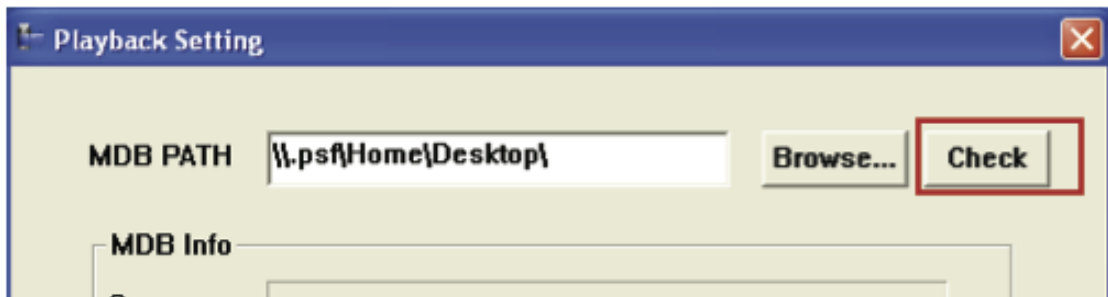

When done, click “Check” to validate the file.

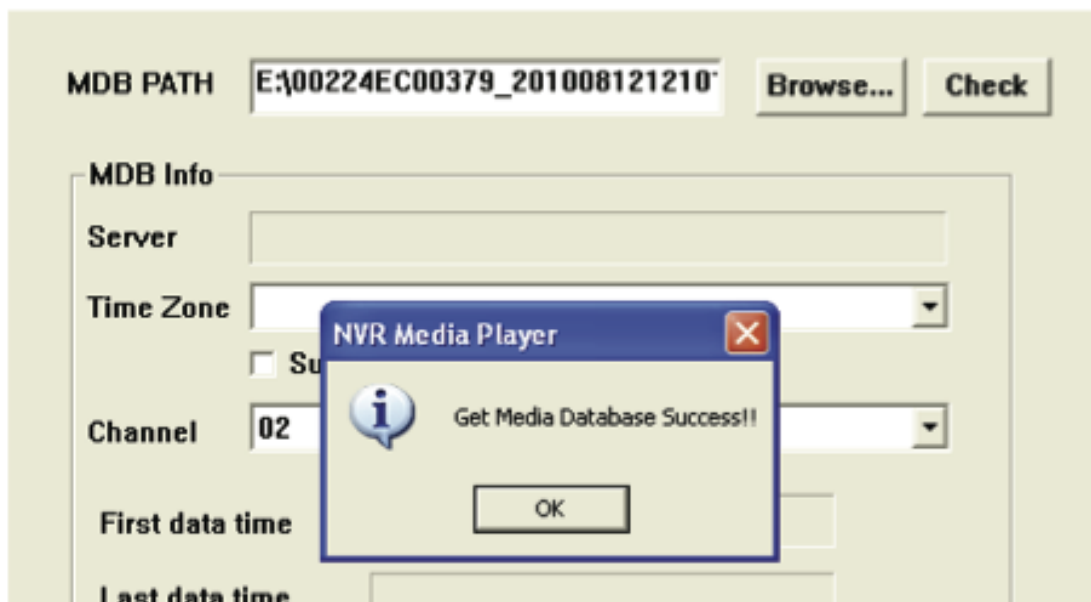

Once the file has been successfully verified, you should be prompted with the message shown below.



Select the time zone according to your current location.



Finally, click "OK" to begin playing. The player should now play the backed up file.

UPS Configuration

Connect the UPS to the NVR's USB port for sending and receiving signals between the UPS and the NVR. The NVR can receive signal from the UPS when there is a power failure and shut down itself automatically within a period of time. You can enable UPS support to prevent data loss when an unexpected power failure occurs.

The screenshot shows the NVR Setup interface. On the left is a sidebar menu with the following items: System Configuration, Channel Configuration, Event Configuration, Recording Configuration, and System Options. Under System Options, there is a list: Device Information, System Logs, Maintenance, DO Status, Disk Status, USB Backup, and UPS Configuration (which is highlighted). The main content area is titled 'UPS Settings'. It contains the following text: 'Connecting to a compatible USB UPS device can prevent data loss during a power failure. You are able to set a time period to properly shut down the NVR as soon as a power failure occurs.' Below this is a 'Reminder:' section with a note: 'Please make sure you have plugged in NVR's power cord to one of the outlets on the UPS device. It is normal that the UPS battery information is not presented as not all UPS can provide it. In this case, it is suggested to set the shutdown time as short as possible to prevent from unexpected power failure.' There is a checkbox labeled 'Enabled UPS Support' which is checked. Below the checkbox is a dropdown menu labeled 'Time before UPS shuts down after a power failure:' with '30 seconds' selected. Further down, it says 'UPS Device Information: UPS is connected' followed by a table of device details: Manufacturer: American Power Conversion, Model: Smart-UPS 750, Status: On line, Battery: 100%, and Estimated battery time: 16200 seconds. An 'Apply' button is at the bottom right of the settings area.

To enable local UPS support (NVR acting as UPS server):

1. Connect the compatible USB UPS to the NVR.
2. Turn on the NVR.
3. Go to "NVR Setup" >> "System Options" >> "UPS Configurations", and check "Enable UPS Support" option.

You can adjust how long the UPS stays on to provide backup electricity to the NVR after a power failure by choosing one of the options from the drop-down shown below:

This is a close-up of the 'UPS Settings' section from the previous screenshot. It shows the 'Enabled UPS Support' checkbox, which is checked. Below it is the label 'Time before UPS shuts down after a power failure:' followed by a dropdown menu currently set to '30 seconds'.

*** Currently only APC Smart-UPS 750 is supported (05282012)**

The UPS information should be obtained and displayed at the bottom of the page after the settings are applied:

time before UPS shuts down after a power failure: 30 seconds

UPS Device Information: **UPS is connected**

Manufacturer:	American Power Conversion
Model:	Smart-UPS 750
Status:	On line
Battery:	100%
Estimated battery time:	16200 seconds

Apply

To enable network UPS support (NVR acting as UPS slave):

1. Go to "NVR Setup" >> "System Options" >> "UPS Configurations", and check "Enable UPS Support" option.
2. Enter the IP address of the **NVR running as UPS server. (The NVR with USB UPS physically attached to)**

You are able to set a time period to properly shut down the NVR as soon as a power failure occurs.

Reminder:

Please make sure you have plugged in NVR's power cord to one of the outlets on the back of the NVR.

You will see "No UPS server is connected" if the connection to the UPS server is lost.

☒ Enabled UPS Support


UPS Server IP: 192.168.102.103

* Please make sure both NVRs (UPS server and slave) are on the same local network to ensure the communication between the two.


* Please make sure both NVRs are plugged into the outlets that connect to the UPS.

Live View (VGA output Interface)


Live View

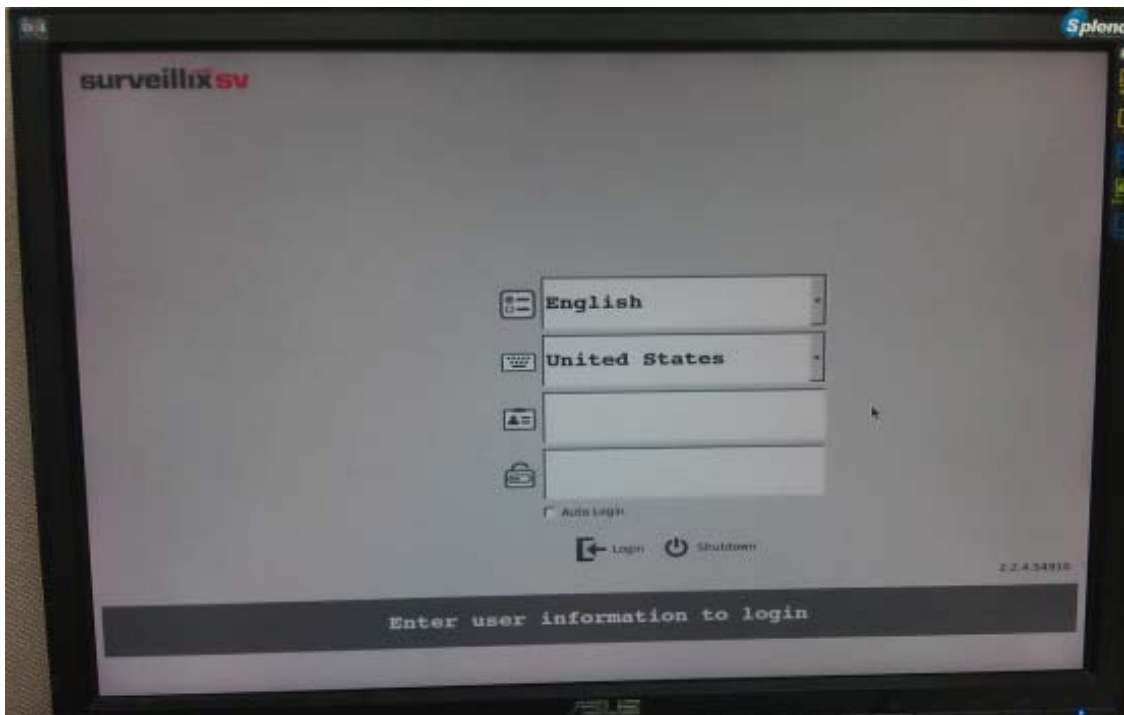

The NVR can be operated directly by attaching a USB keyboard and mouse and a monitor with VGA input. Once the NVR is fully started, you should be prompted with the login screen as shown above.

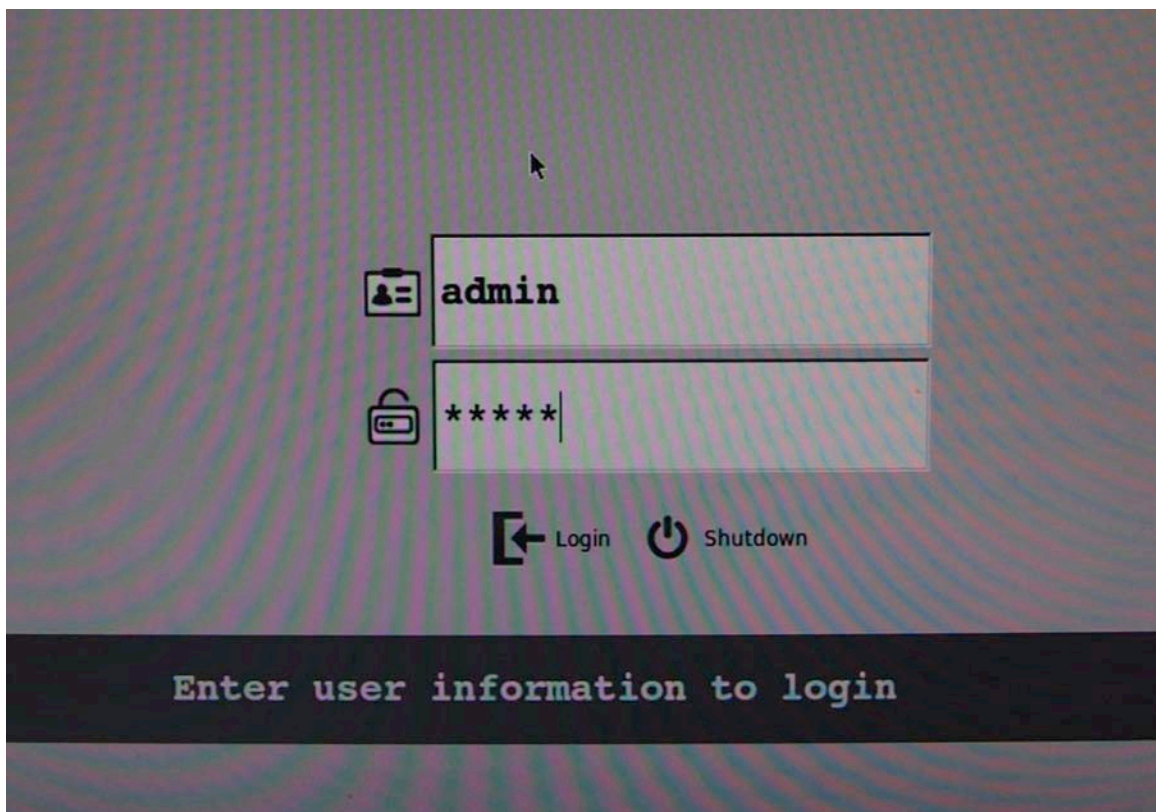

Type in the default username: **admin**, and password: **admin** to log in.

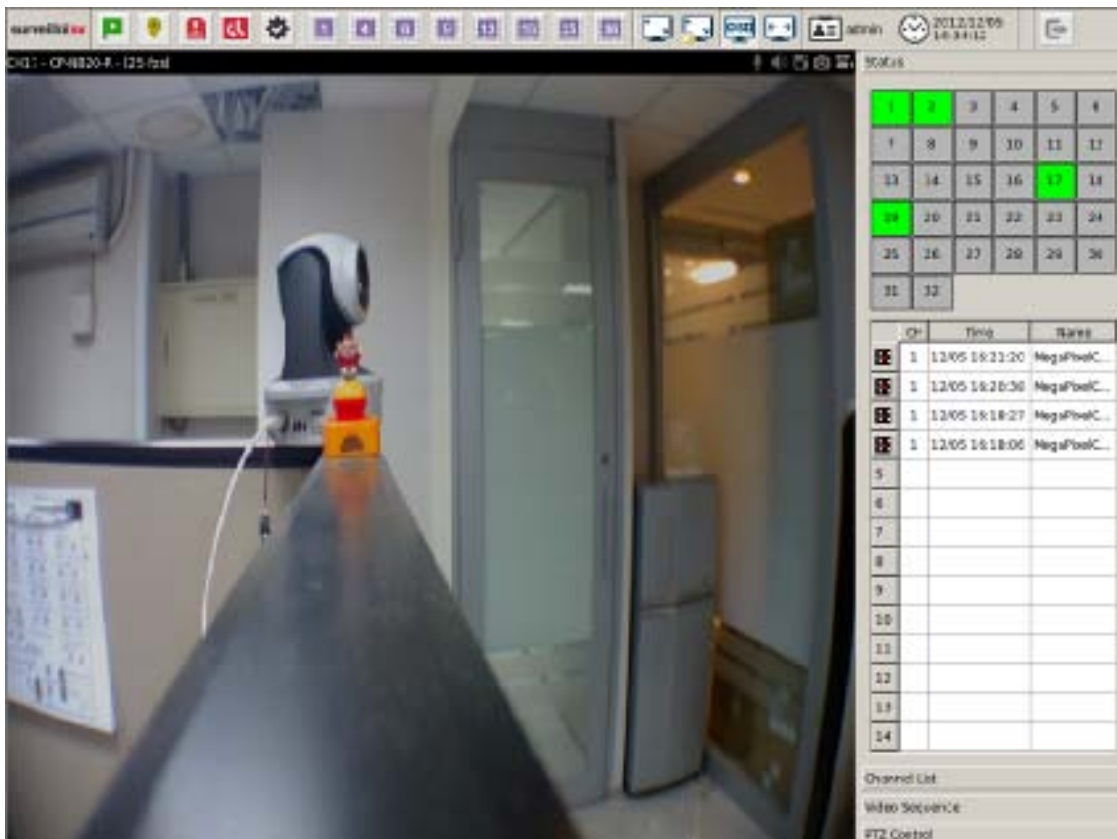

You will see the Live View interface once logged in. And it's essentially divided into three sections:


1. Main menus
2. Video area
3. Side menus



The main menu on the top provides functions described below: (from left to right)


1. Playback
2. E-Map Monitor
3. Live Event Monitor
4. History Event Monitor
5. Configuration
6. Screen layout selections
7. Full screen
8. Full screen with lock
9. Display OSD

10. Display video in its original aspect ratio
11. Current logged in user
12. Logout

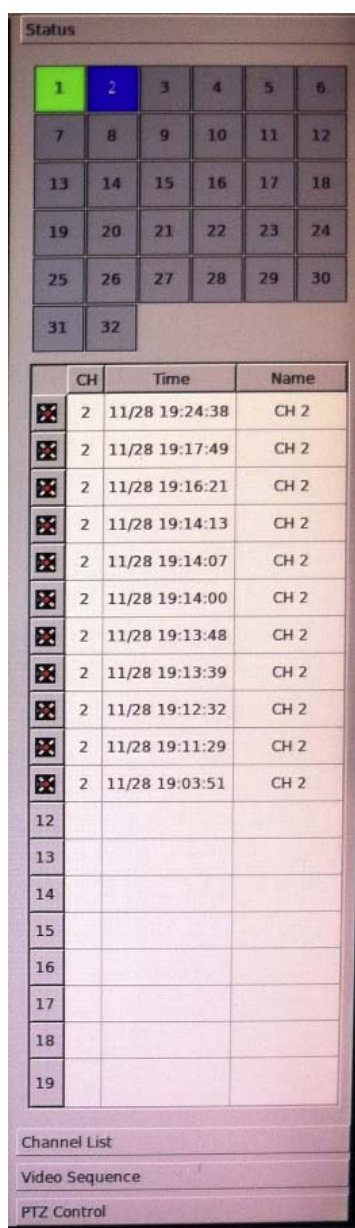

The side menu provides the following information and functions:

1. Display channel status
2. Live events in list view
3. Cameras added to the NVR in list view
4. Sequence view control
5. PTZ control

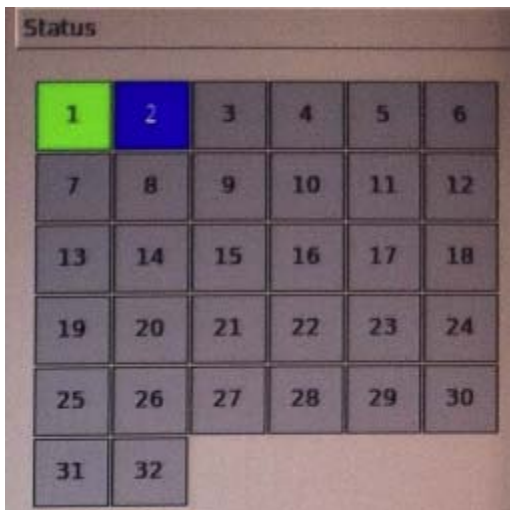

The screenshot shows a window titled "Status" containing a grid of 32 numbered channels. The channels are arranged in a 6x6 grid, with the last row containing only two channels (31 and 32). Channel 1 is highlighted in green, channel 2 is highlighted in blue, and all other channels (3 through 32) are gray.

1	2	3	4	5	6
7	8	9	10	11	12
13	14	15	16	17	18
19	20	21	22	23	24
25	26	27	28	29	30
31	32				

The channel status is shown in different color:







 

 


Green: Recording

Blue: Connected but not recording


Gray: no camera is configured

White: Disconnected


Red: Event triggered and recording

	CH	Time	Name
	2	11/28 19:24:38	CH 2
	2	11/28 19:17:49	CH 2
	2	11/28 19:16:21	CH 2
	2	11/28 19:14:13	CH 2
	2	11/28 19:14:07	CH 2
	2	11/28 19:14:00	CH 2
	2	11/28 19:13:48	CH 2
	2	11/28 19:13:39	CH 2
	2	11/28 19:12:32	CH 2
	2	11/28 19:11:29	CH 2
	2	11/28 19:03:51	CH 2
12			
13			
14			
15			
16			
17			
18			
19			


Live events are listed in the side menu along with the time information.

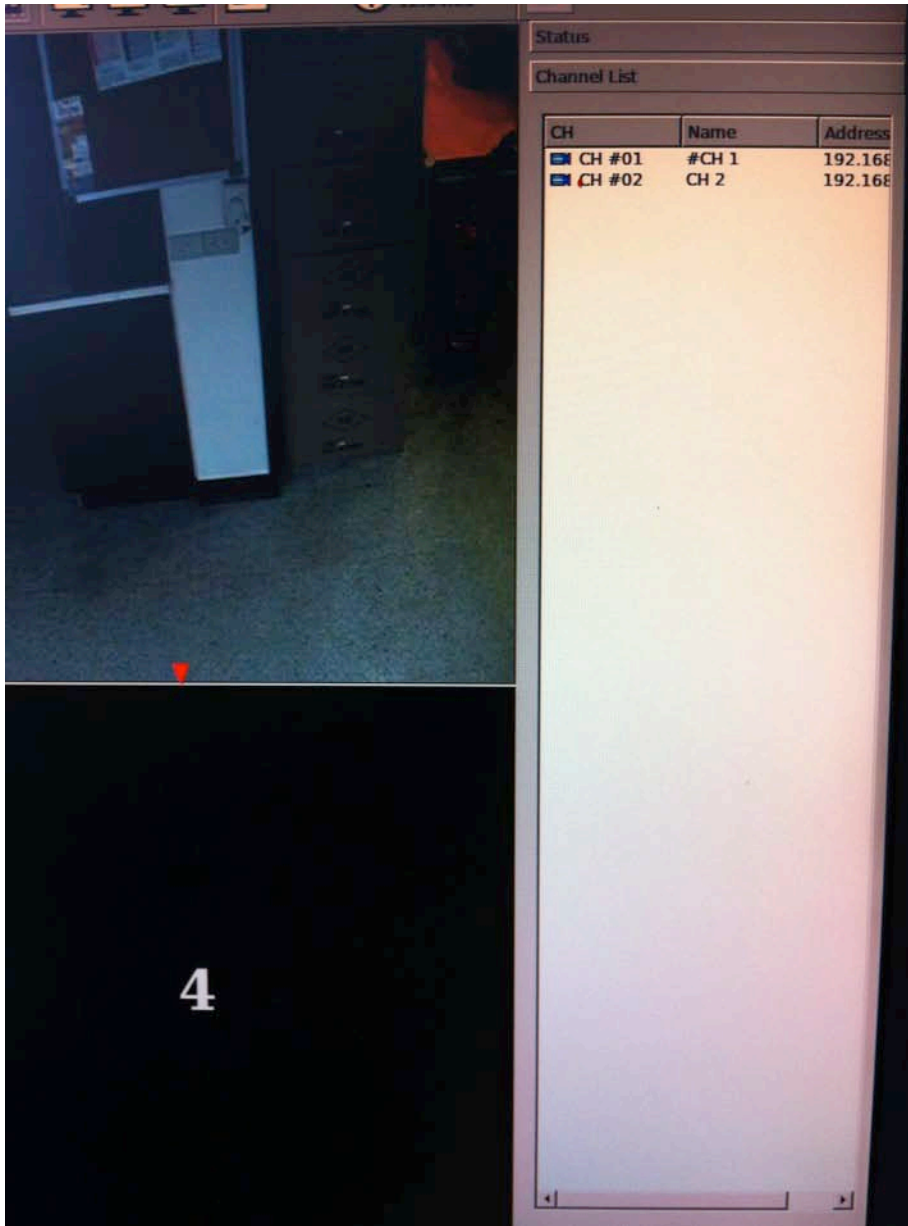


The "Channel List" lists all cameras that are currently added to the NVR. You can drag one from the list and drop it to any video area to display its video.

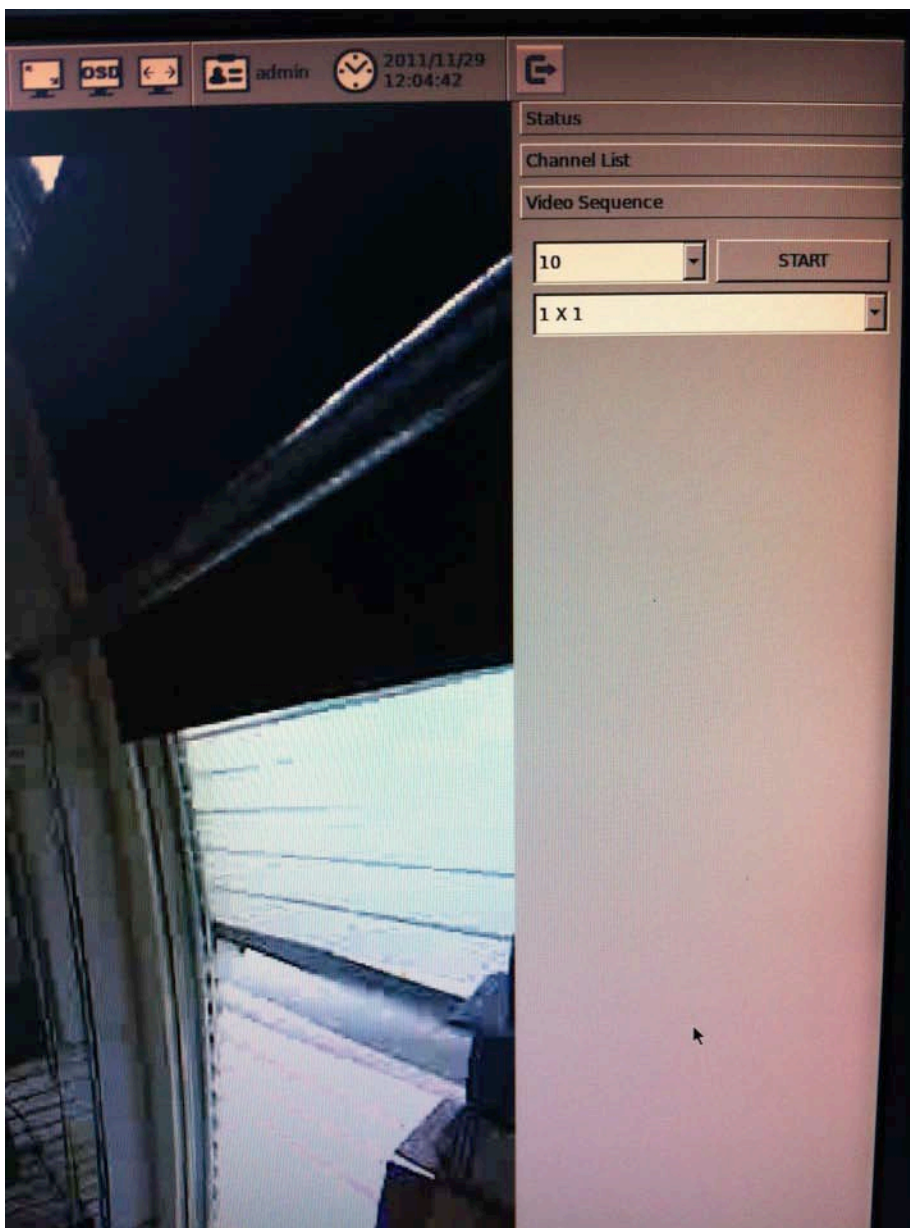

Video Sequence is a function that displays videos of the selected channels (or favorites) and they are switched automatically with definable interval.

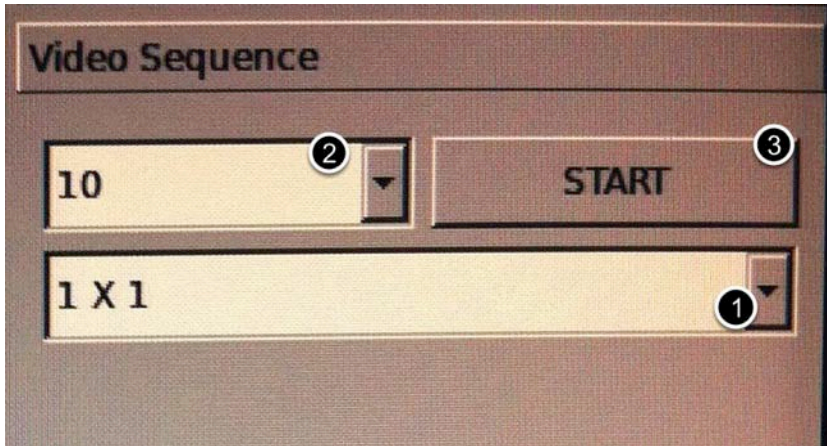


1. Simply choose how many channels you would like to view at once by choosing an option from the drop-down menu.
2. Select a time interval for the sequence viewing
3. Click "Start" to begin

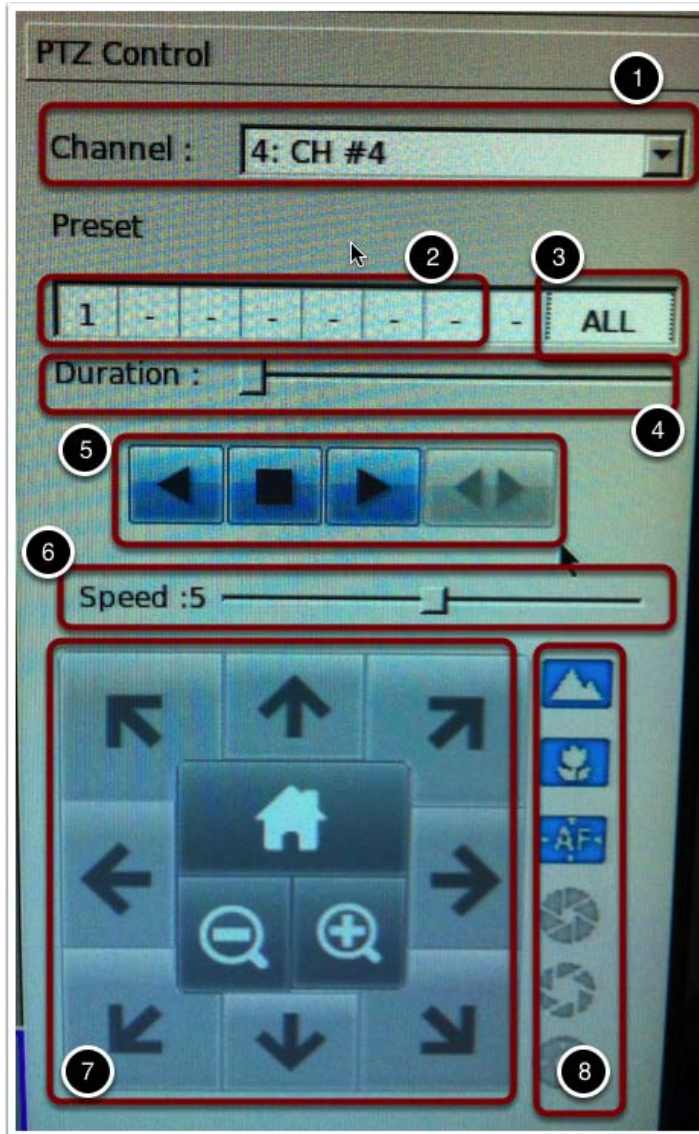

The PTZ Control provides the following functions:


1. List of PTZ-capable cameras currently added to the NVR
2. Preset point selections (You need to add preset points in the configuration page first)
3. Start/stop automatic sequence between preset points
4. Adjust dwell time for preset point sequence viewing
5. Pan left, pan right, stop pan, auto 360-degree pan (from left to right)
6. Adjust PTZ speed
7. PTZ control, move to preset home point, zoom in/out
8. Auto focus, focus far, focus near, auto iris, reduce iris, increase iris (from top down)

Video Area

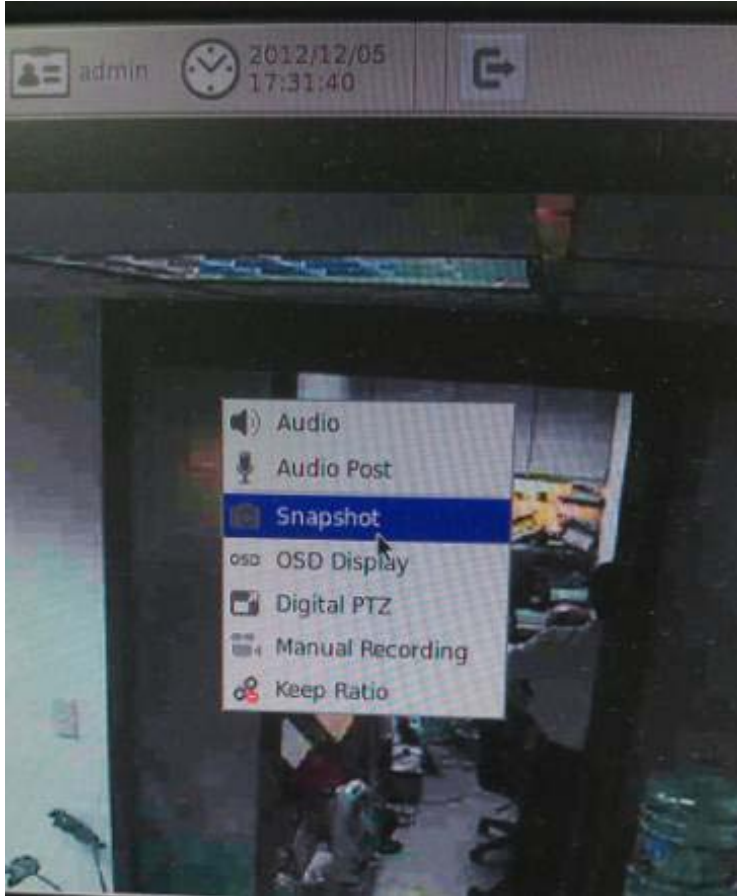


The video area essentially provides viewing purpose for the live video. It also provides certain functions, which you can access quickly that enhance the monitoring experience. Simply right-click anywhere on the video to access these functions:

1. Turn on/off audio (default off)
2. Start/stop transmitting audio (default off)
3. Take a snapshot of the live video
4. Display OSD (default off)
5. Turn on/off digital PTZ (default off)
6. Start/stop manual recording (default off)
7. Display video in its original aspect ratio (video fill up the entire video area by default)

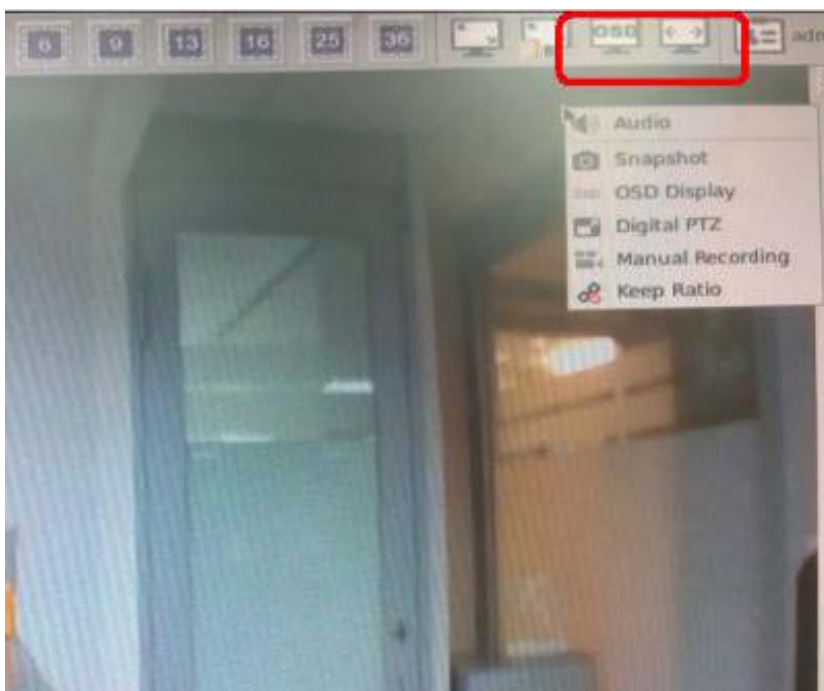

The OSD display and keep ratio can also be turned on/off from the top main menu.

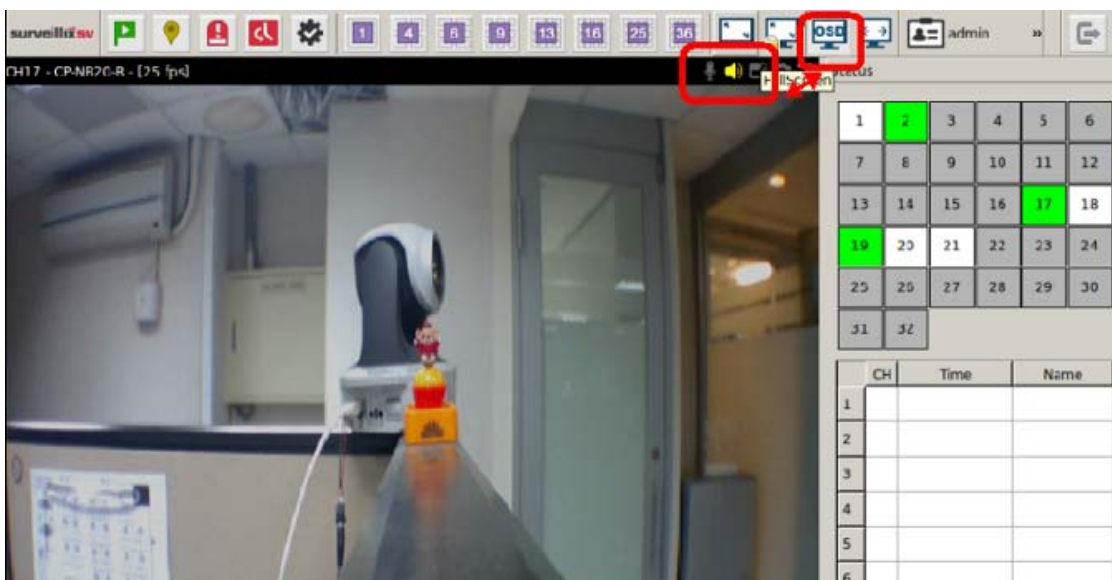

Pressing down the "OSD" button from the top menu not only displays OSD but also displays the functions of those that can be accessed from the right-click menu at the top of the video.



Video window surrounded with blue color means it's currently selected.




A red arrow head is shown when hovering the mouse over to a particular video area representing it's a PTZ-capable camera.




Full screen view can be enabled from the top main menu bar, or by double-clicking anywhere on the video. To exit full screen view, double-click anywhere on the video again.

Snapshot

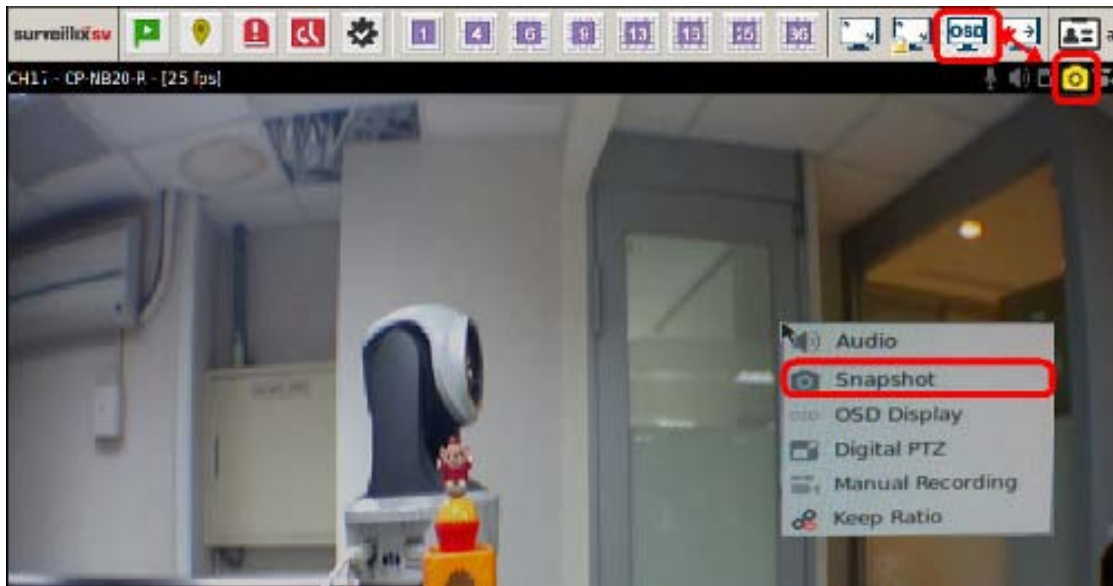


The snapshot function can be accessed from the right-click drop-down menu or the top of the video if OSD display is enabled.

**** Please do connect an USB disk drive formatted in FAT32 in advance before using the snapshot function from the VGA output interface. Please connect the USB disk while the NVR is turned off. The USB disk will not be presented if it's connected while the NVR is on.**

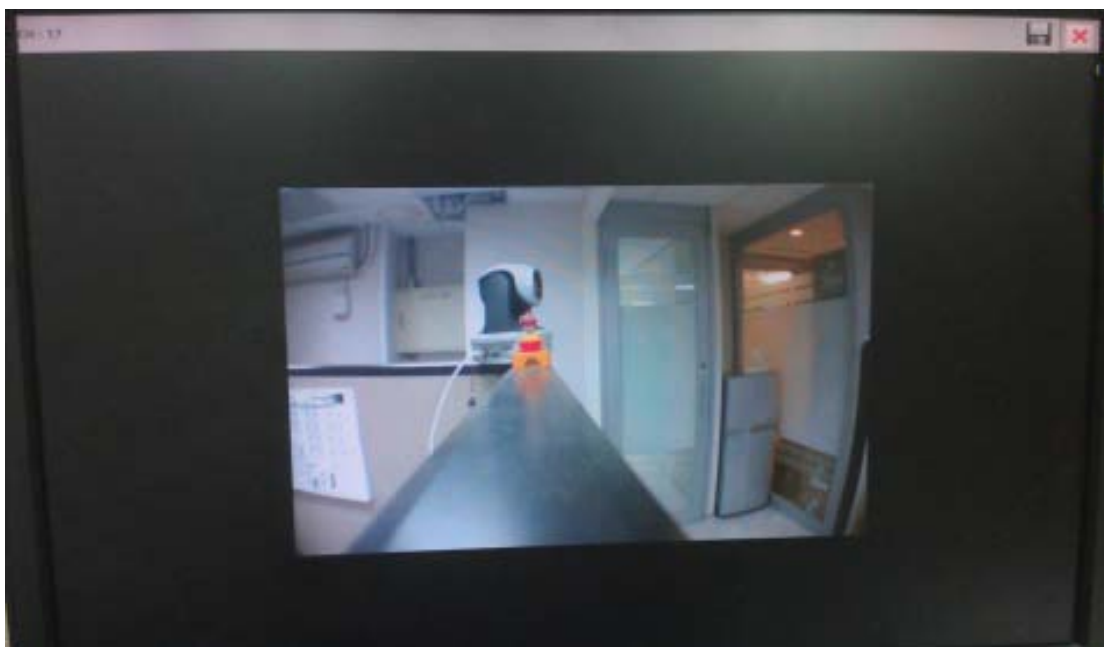


The snapshot of the video will be displayed on a pop-up window.

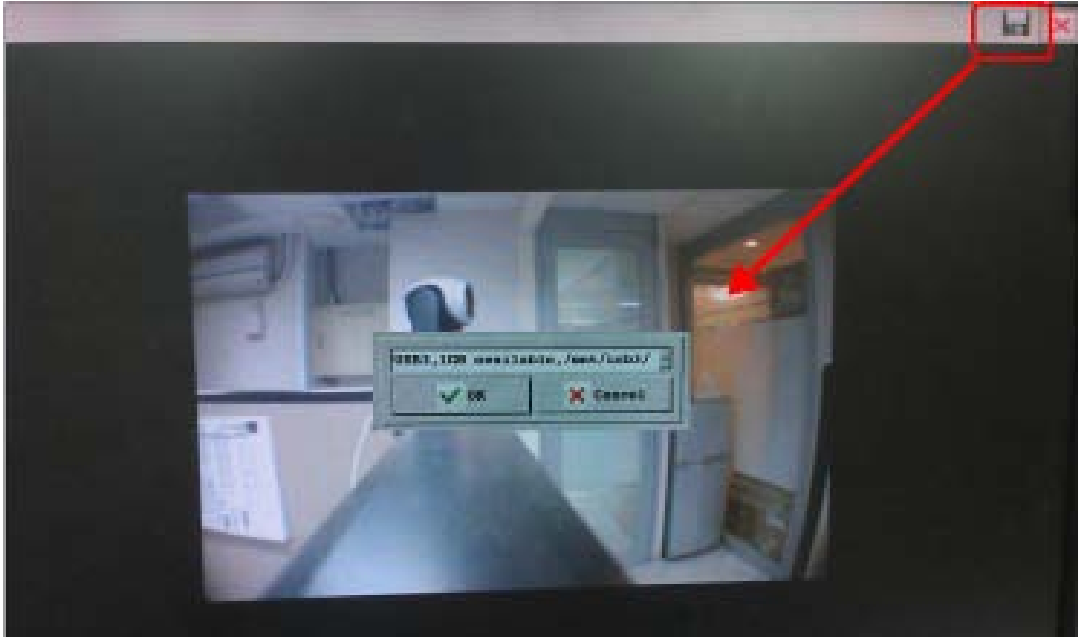

Click the "Save" button, which opens up a new dialog that lets you choose which USB disk to save the snapshot to.

Digital PTZ

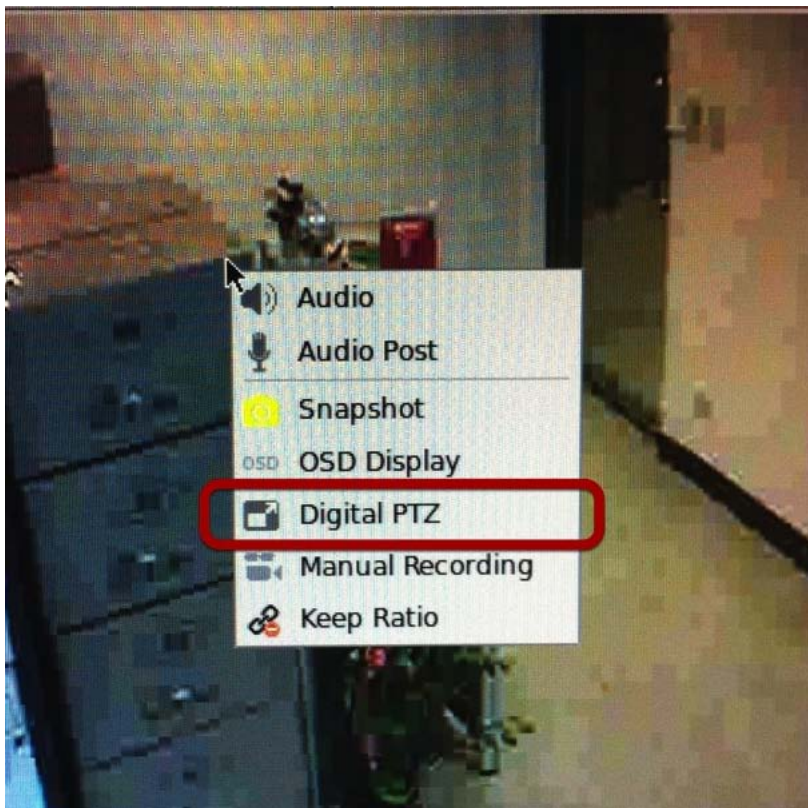

To use digital PTZ, enable the function from the right-click menu, or the top of the video window if OSD is enabled.



Click and drag the mouse diagonally on an area in which you would like to zoom in to.




Once the video is zoomed in, click and drag the video to move within the zoomed area. Use the scroll button on the mouse to zoom in further or zoom out. Right-click on the video to exit the digital PTZ mode.


Keep Ratio



By default, the video fills up the entire video window. You can change this and display the video in its original aspect ratio by using the "Keep ratio" function from the right-click menu, or the top of the video

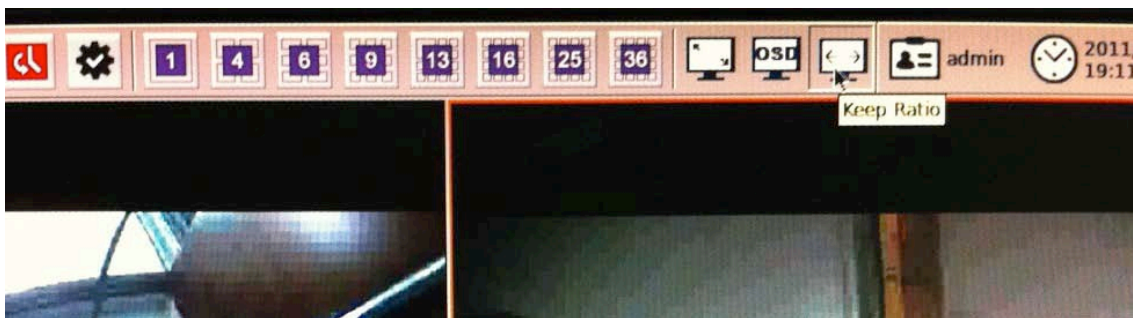

You can change this and display the video in its original aspect ratio by using the "Keep ratio" function from the right-click menu, or the top of the video if OSD is enabled. This will make the video of that particular channel to be displayed in its original aspect ratio.

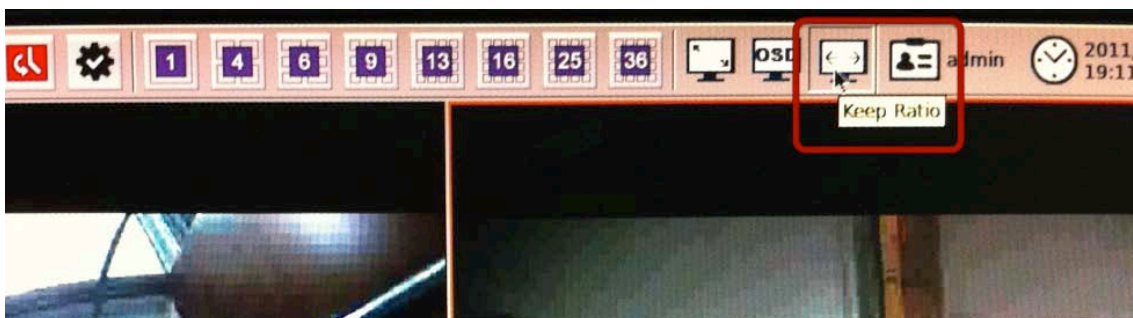

The "Keep Ratio" button on the top main menu allows you to change aspect ratio of all channels at once.

NVR Configuration (VGA output Interface)


System Configuration

Service


The screenshot shows the 'Service' configuration page of an NVR. The left sidebar contains a list of configuration categories: Service, Display, Network, User Account, Disk, Channel, Local Map, Record, Event Handling, System Log, Maintenance, DO Status, USB Backup, and UPS. The main content area is titled 'Service' and is divided into three sections: 'Server', 'Time and Date', and 'DDNS'.
 - The 'Server' section includes a 'Device Name' text input field.
 - The 'Time and Date' section includes a 'Time Zone' dropdown menu (set to 'GMT+08 (Beijing, Taiwan, Hong Kong)'), a 'Summer time' checkbox, a 'Manual' radio button, and a 'Sync With NTP Server' radio button. Below these are fields for 'NTP Server' (ntp.uctd.edu) and 'Update Interval' (24 hr). A status line at the bottom of this section reads 'Last sync: 2012/12/05 14:28:00, Status: Success'.
 - The 'DDNS' section includes an 'Enable DDNS Service' checkbox, a 'Server' dropdown menu (set to 'www.DynDNS.com'), and fields for 'Domain Name', 'User Name', and 'Password'. The 'connection status' is 'disconnected', and there is a 'Check DDNS Status' button.
 At the bottom right of the page are 'Apply' and 'Cancel' buttons.

You will see the "Service" configuration page first when visiting the Configuration page. You are able to set a unique device name, set system time and configure DDNS in this page.

Display

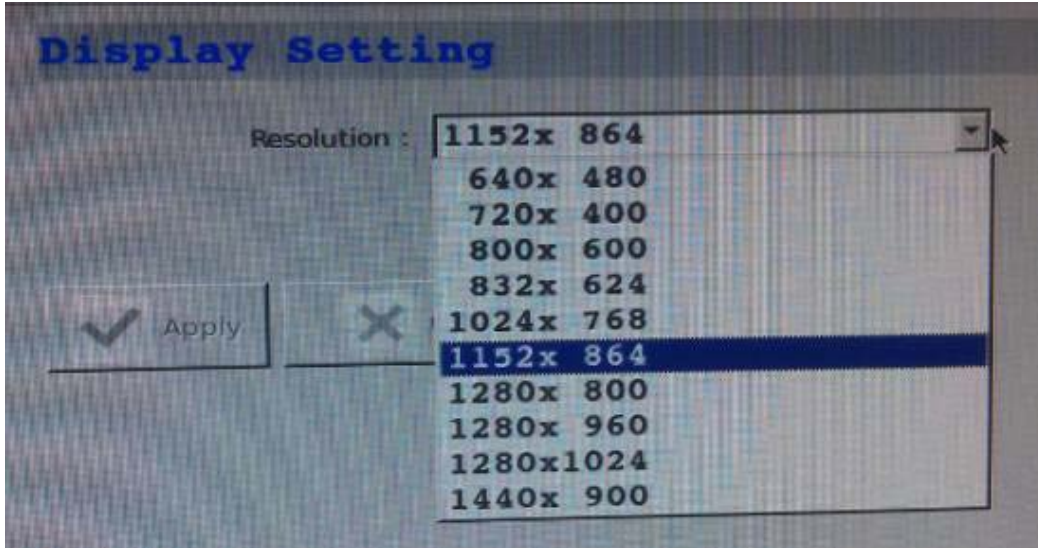

The "Display" configuration page allows you to choose the most optimized display resolution for the monitor that's used with NVR, as there will be circumstances that the incorrect resolution may be used when the system first boots up.

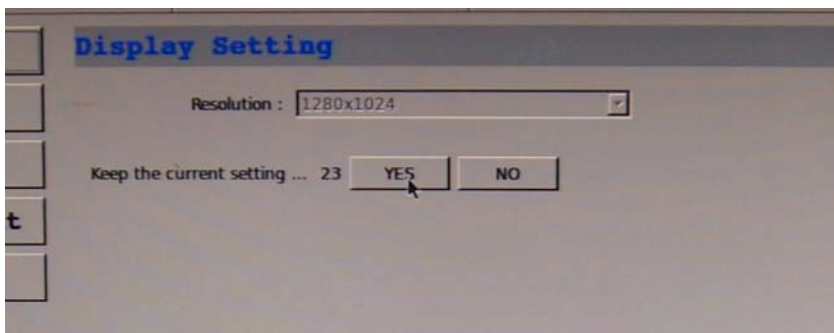

You will be asked to confirm the new setting. Simply click "Yes" to finish.

Network

The screenshot shows a 'Network' configuration window with the following fields and values:

- Connection Type: Auto Mode (dropdown menu)
- IP Address: 192 . 168 . 101 . 50
- Subnet Mask: 255 . 255 . 255 . 0
- Gateway: 192 . 168 . 101 . 1
- DNS 1: 292 . 168 . 101 . 1
- DNS 2: 192 . 168 . 101 . 11
- HTTP Port: 80
- Streaming Port: 9877
- ☐ UPNP Port Forwarding
- External Port: 6000
- ☐ DHCP Server
- Test button

You need to adjust settings in this page for the device to work properly in your network. It is critical that settings here are configured correctly based on your network configurations so that the recorder can be administered through the local area network and cameras can be connected from it.

By default, the recorder is set to "Auto Mode" which if there's a DHCP server in the same local network, the NVR can obtain IP address from the DHCP server. And you can locate the NVR by using the NVR search utility.

If there's no DHCP server in the network, and the NVR is set to use "Auto Mode", it will use its own default static IP **192.168.101.50**.

** The recorder can detect the presence of a DHCP server upon startup. It sets itself to use static IP address if there is no DHCP server currently presented in the network. Its DHCP server function is also turned on at the same time to assign IP addresses to cameras that are later connected to the network or you can manually turn off the DHCP server function at the bottom of this page.*

The screenshot shows a 'Network' configuration window. At the top, 'Connection Type' is set to 'Auto Mode'. Below this, several fields are populated with IP addresses: IP Address (192.168.101.50), Subnet Mask (255.255.255.0), Gateway (192.168.101.1), DNS 1 (192.168.101.1), and DNS 2 (192.168.101.11). Further down, 'HTTP Port' is 80 and 'Streaming Port' is 9877. There is a checkbox for 'UPnP Port Forwarding' which is unchecked. Below that, 'External Port' is 5000. At the bottom, the 'DHCP Server' checkbox is checked and is highlighted with a red rectangle. A 'Test' button is located to the right of the 'External Port' field.

The built-in DHCP Server function is **NOT** always configurable and is greatly dependent to the connection type that is used:

1. If the connection type is "Auto Mode", the DHCP server function is NOT configurable. It will be ON if the NVR doesn't obtain an IP from a DHCP server in the local network and uses its own default static IP 192.168.101.50
2. If the connection type is "Auto Mode", the DHCP server function is NOT configurable. It will be OFF if the NVR obtains an IP from a DHCP server in the local network.
3. If the connection type is "DHCP Client", the DHCP server function is NOT configurable. It will be OFF if the NVR obtains an IP from a DHCP server in the local network.
4. If the connection type is "DHCP Client", the DHCP server function is NOT configurable. It will be ON if the NVR doesn't obtain an IP from a DHCP server in the local network and uses its own default static IP 192.168.101.50
5. If the connection type is "Static IP", the DHCP server function is configurable and can be turned on/off manually.

User Account -- User setting

The screenshot shows the 'User Setting' window with two tabs: 'User Setting' and 'User Group Setting'. The 'User Setting' tab is active, displaying a table with the following data:

	User Name	Group	Description
1	admin	admin	

Below the table is a form for adding or editing users. The form includes the following fields and options:

- User Name: (Only A-Z,a-z,0-9 and _.@ are allowed)
- Password:
- Confirm Password:
- Company: (Optional)
- Department: (Optional)
- Telephone: (Optional)
- Mobile: (Optional)
- E-Mail: (Optional)
- Group: (Optional)
- Description: (Optional)

At the bottom left, there are buttons for 'Add' (with a red plus icon) and 'Remove' (with a red minus icon). At the bottom right, there are buttons for 'Apply' (with a checkmark icon) and 'Cancel' (with an X icon).

Multiple users can access the recorder simultaneously. You can add, remove, and edit users by using options provided in this page to keep user information organized. Each recorder comes with a built-in "admin" account with password "admin". It's highly recommended to change the password upon your initial login.

The screenshot shows a user configuration form with the following fields and controls:

- 1**: A red box highlights the **Add** button, which features a red plus icon.
- 2**: A red box highlights the **User Name**, **Password**, and **Confirm Password** input fields. A note to the right states: "Only A-z, 0-9 and _@ are allowed".
- 3**: A red box highlights the **E-Mail** and **Group** input fields. The **Group** field is a drop-down menu currently showing "group1".
- 4**: A red box highlights the **Apply** button, which features a checkmark icon, and the **Cancel** button, which features an 'X' icon.

Other optional fields include **Company**, **Department**, **Telephone**, **Mobile**, and **Description**, each followed by "(Optional)".

- Click "Add" to add a new user.
- Enter a username and password. All other fields are optional for your own reference.
- Select a group from the "Group" drop-down menu to assign the new user to a particular group. Enter a short description for the account if you wish
- Click "Apply" to finish configuration

User Account -- User group setting

Live

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Video	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
PTZ	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	

Playback


	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Video	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	
Audio	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	

System Configuration


☒ System Configuration
 ☒ Channel Configuration
 ☒ Event Configuration
☒ Recording Configuration
☐ System Options

Group Privilege is where you can create multiple customized access policies for situations if you need the recorder to be accessed by users other than the administrator. You can do so by creating a group, and then remove access privileges for certain configuration pages or cameras. Users that are created and assigned to this group will have limited access instead of full administration rights.


The recorder comes with seven built-in groups and five built-in privilege profiles, except the "admin" and the "guest" accounts; the other five groups are fully customizable or you can simply assign a group with one of the default privilege profiles. You can, however, assign more than one users to the "admin" account if you wish to do so. The guest account comes with a "view-only" privilege in the "Live View" page, and users in this group do not have the power to make any changes in the "Live View" page or have access to pages other than the "Live View" page.

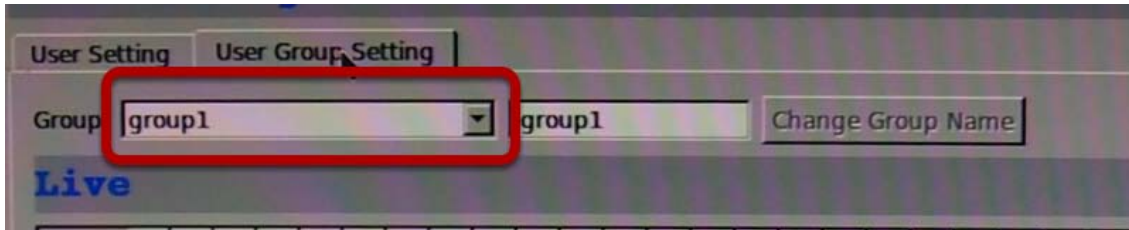

To create a group, select a group from the "Group" drop-down menu.

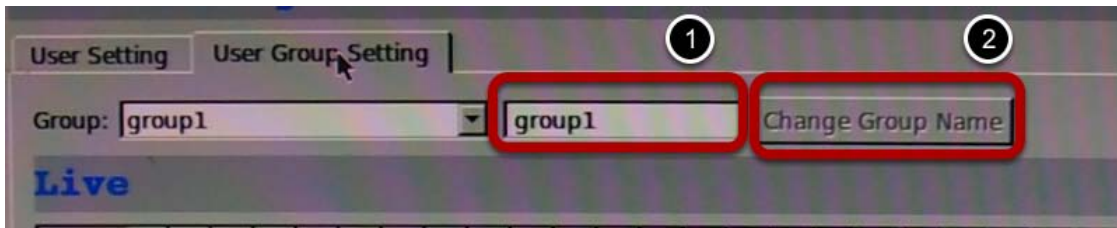


You can change the group name by typing in a new group name and click the "Change Group Name" button to finish.

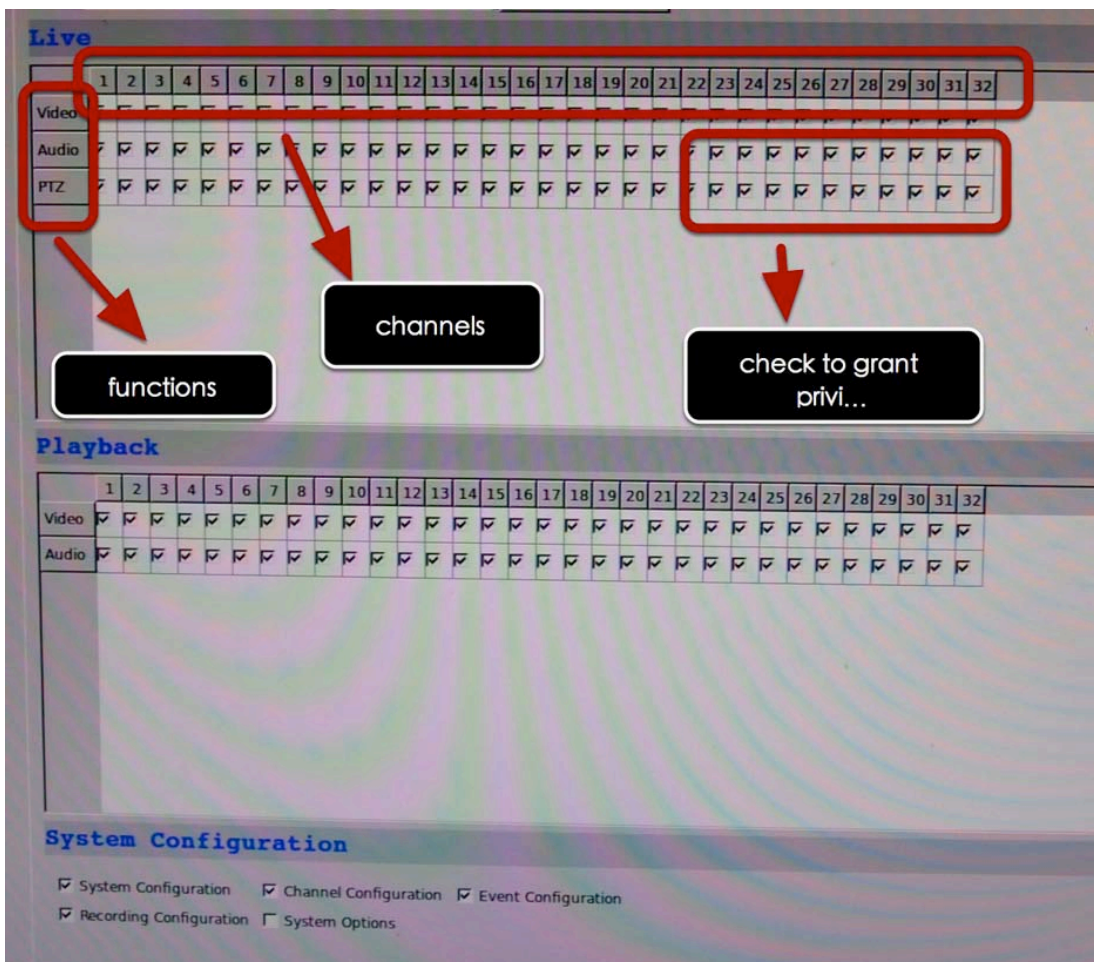

Use the check boxes to allow or deny access to certain functions/channels. You can also restrict access on certain system wise configuration pages.

Disk

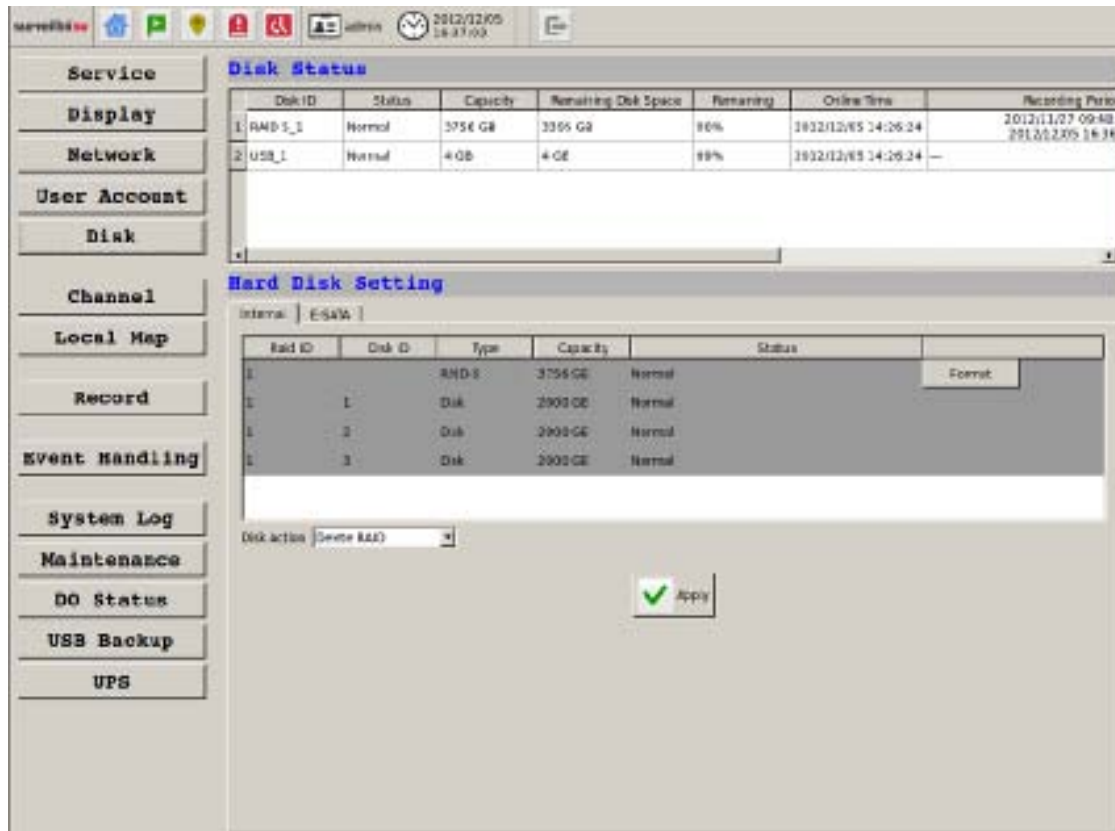

Once you install a new hard disk to the recorder, it will be listed in this page and shown status "offline". You would need to initialize it so that it can be ready for recording. You can obtain basic information about the disk you installed in this page.

To initialize it, simply click the "Format" button.


**This page will list the Internal disks (or RAID volumes), and the E-SATA disk only. The HDD will be formatted in EXT3 file system.*

**The USB HDDs will only be listed in the "USB Backup" page. The USB HDDs have to be formatted in advance in FAT16/FAT32 or EXT3 file system. (FAT32 is recommended)*

** The internal disks that are formatted in EXT3 or FAT32 elsewhere will be listed in this page and shown as "Online" after they are installed to the NVR. It's highly recommended that it's formatted by the NVR, which will be formatted to EXT3 file system to ensure best*


performance. FAT32 can be used but will result in a performance slowdown.

* HDDs formatted in file systems other than EXT2/3, or FAT32 will not be listed, and therefore cannot be used.

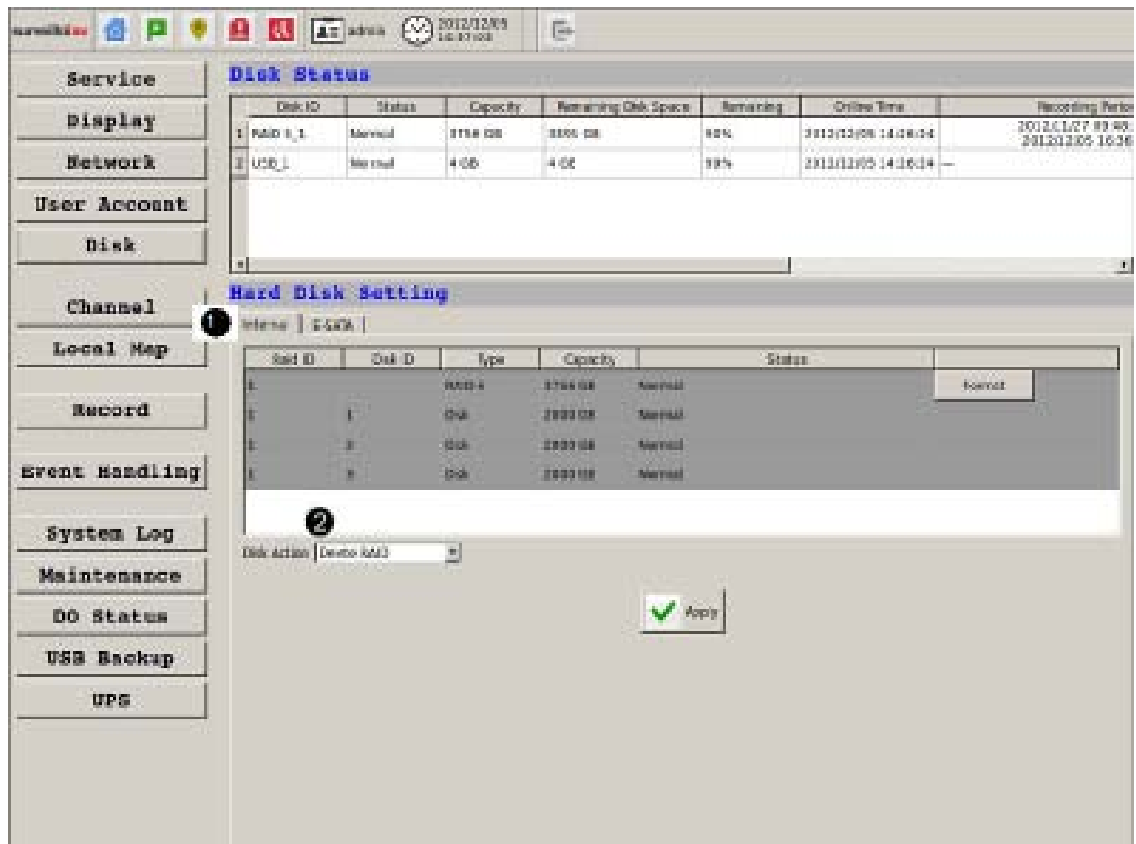


Go to the RAID Volume page and select a desired Disk action from the drop-down menu.


Channel Configurations -- Add a camera (Automatic Search)

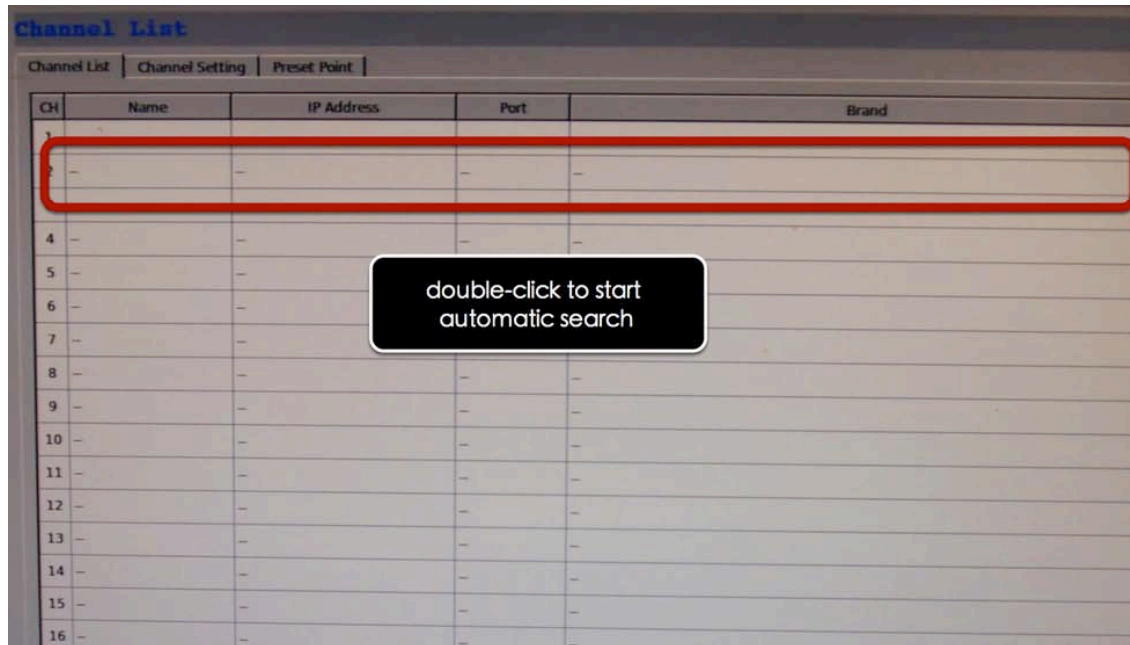


The NVR provides two options for adding a new camera. Users have the option to let the recorder automatically find the cameras or it is possible to enter camera's information and add it manually. You will be greeted with the "Channel List" page when you first enter the "Channel" configuration page. Simply double-click on any channel in the list to start automatic search and add camera to that channel.

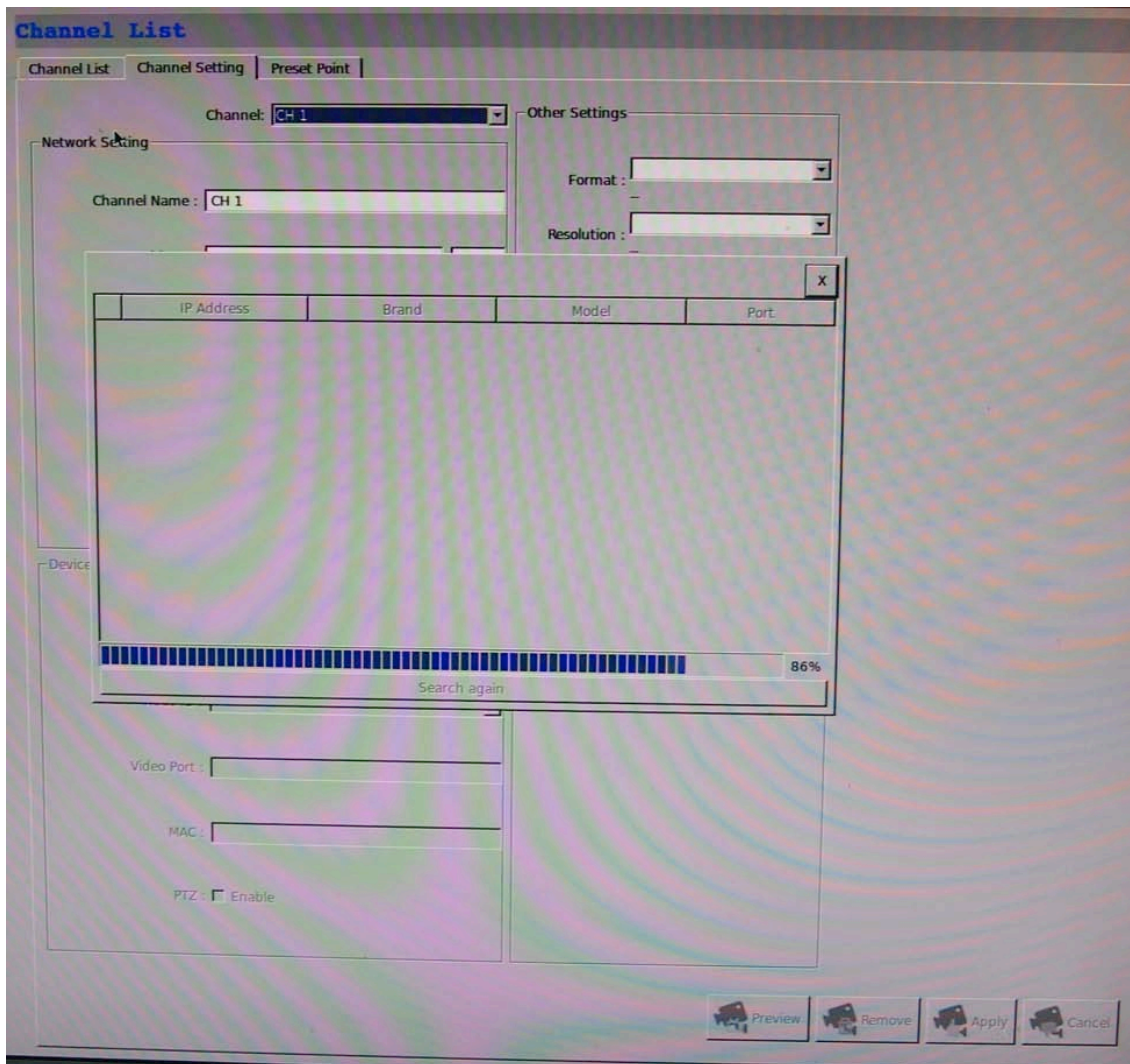


The progress will be displayed, and you will be switched to the "Channel setting" page for more configurations.

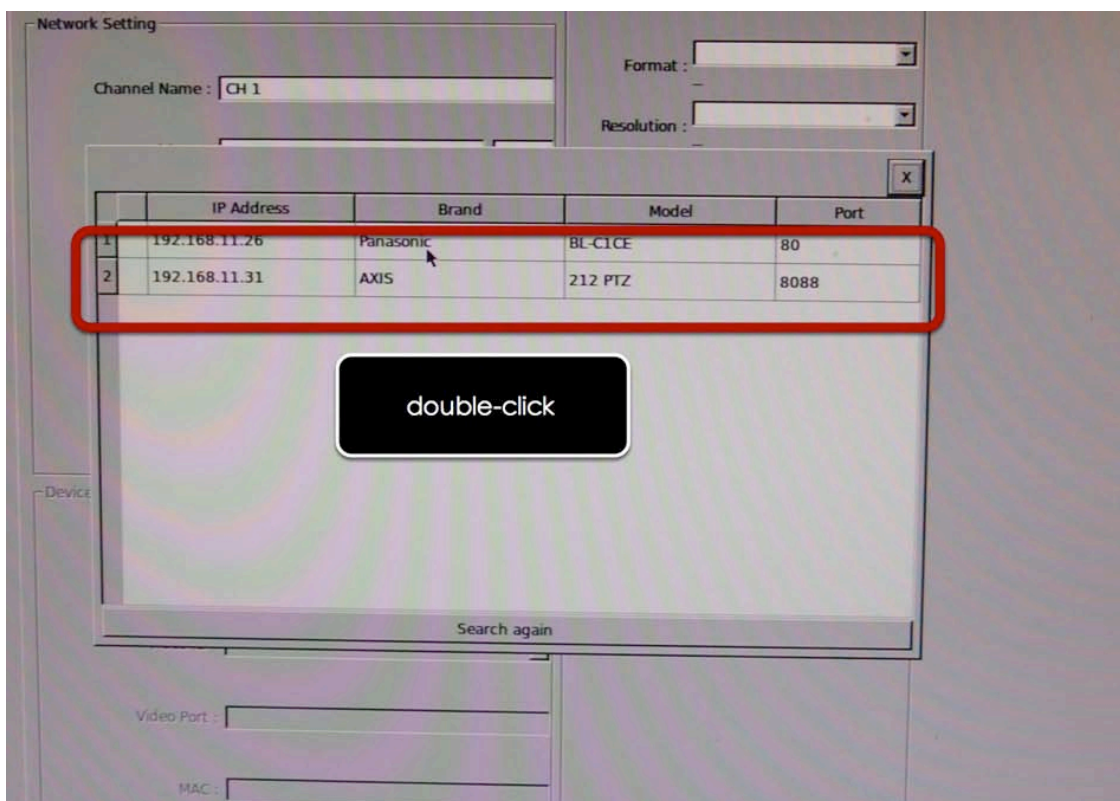

Double-click on one from the search result to add it and for more detail configurations

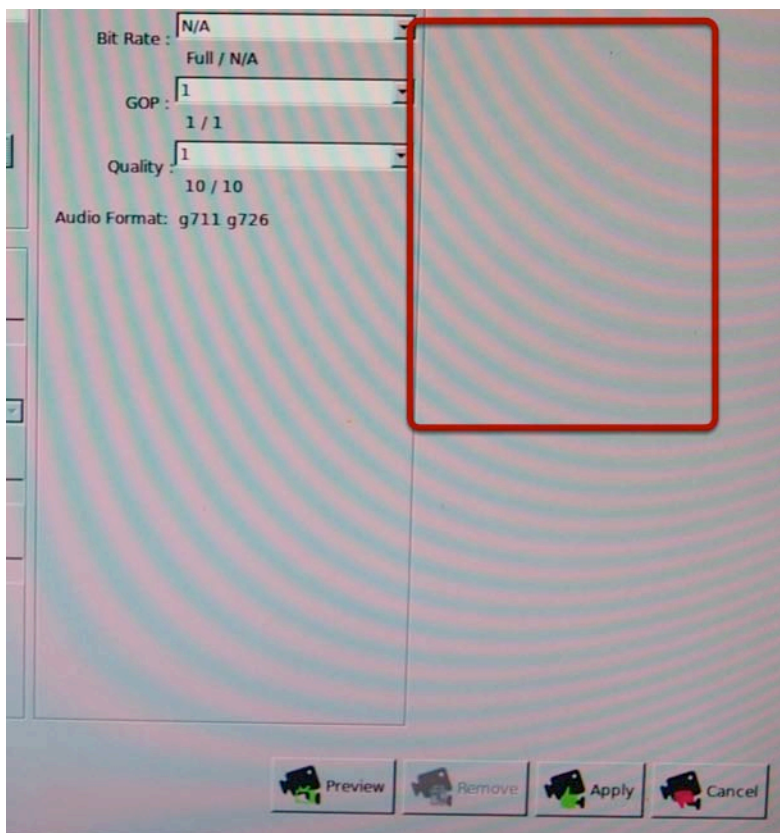


The camera's current settings will be displayed on the right and you can adjust settings such as "Format", "Resolution" or "FPS" before adding it to the NVR.

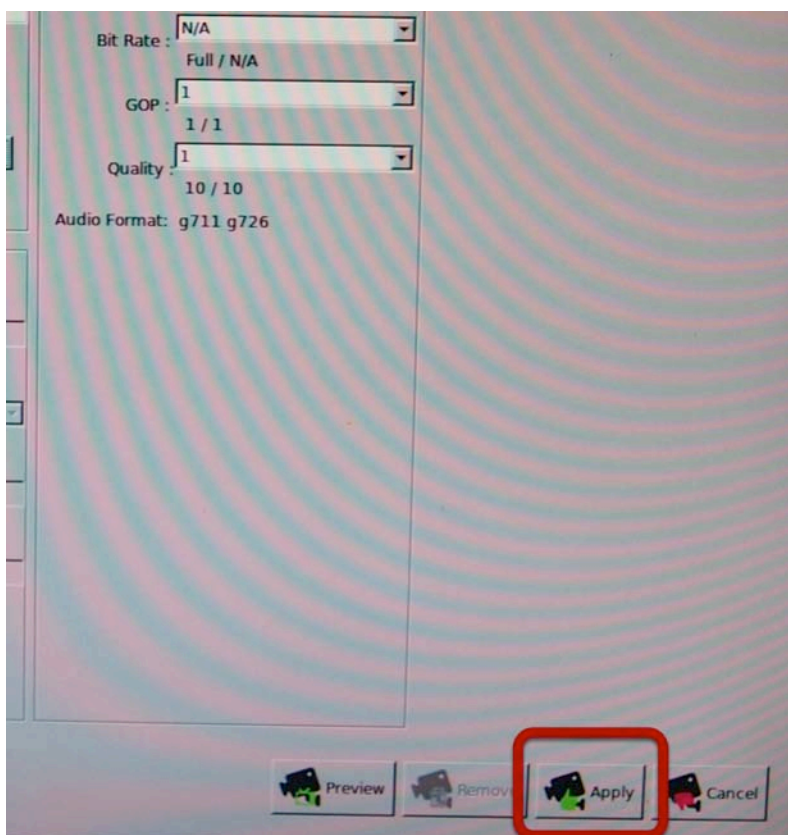


Click "Apply" to finish and save the settings.


Channel Configurations -- Add a camera (Add manually)

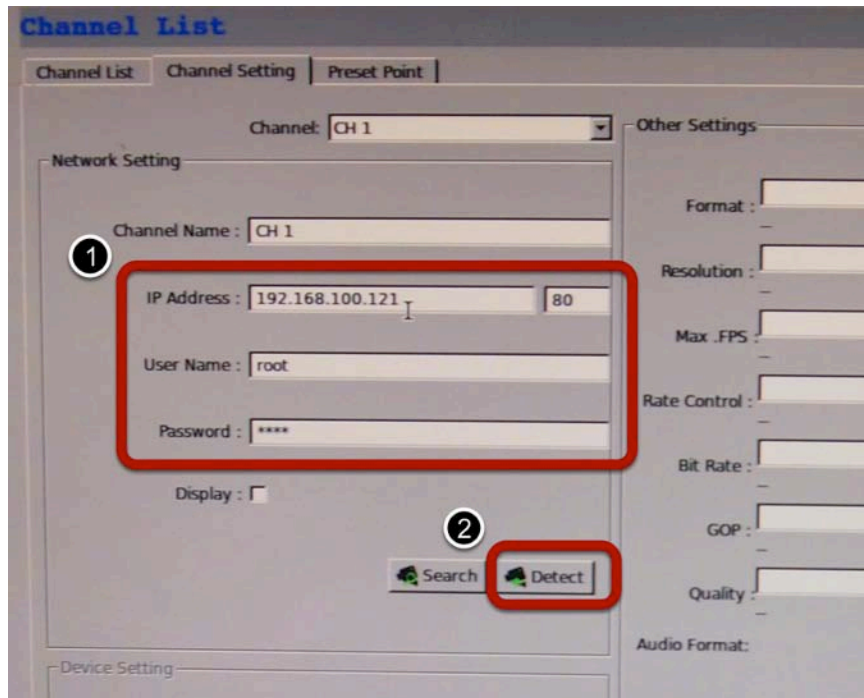

To add a camera manually, go directly to the "Channel Setting" page, and enter the camera's IP address, HTTP port, username and password. Click "Detect" to retrieve camera's settings.

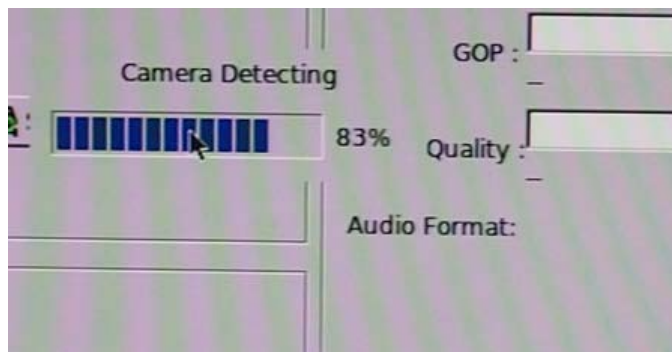


The progress will be displayed. Once it's successfully detected, follow the procedures described in the previous section to finish configuring and adding camera to the NVR.

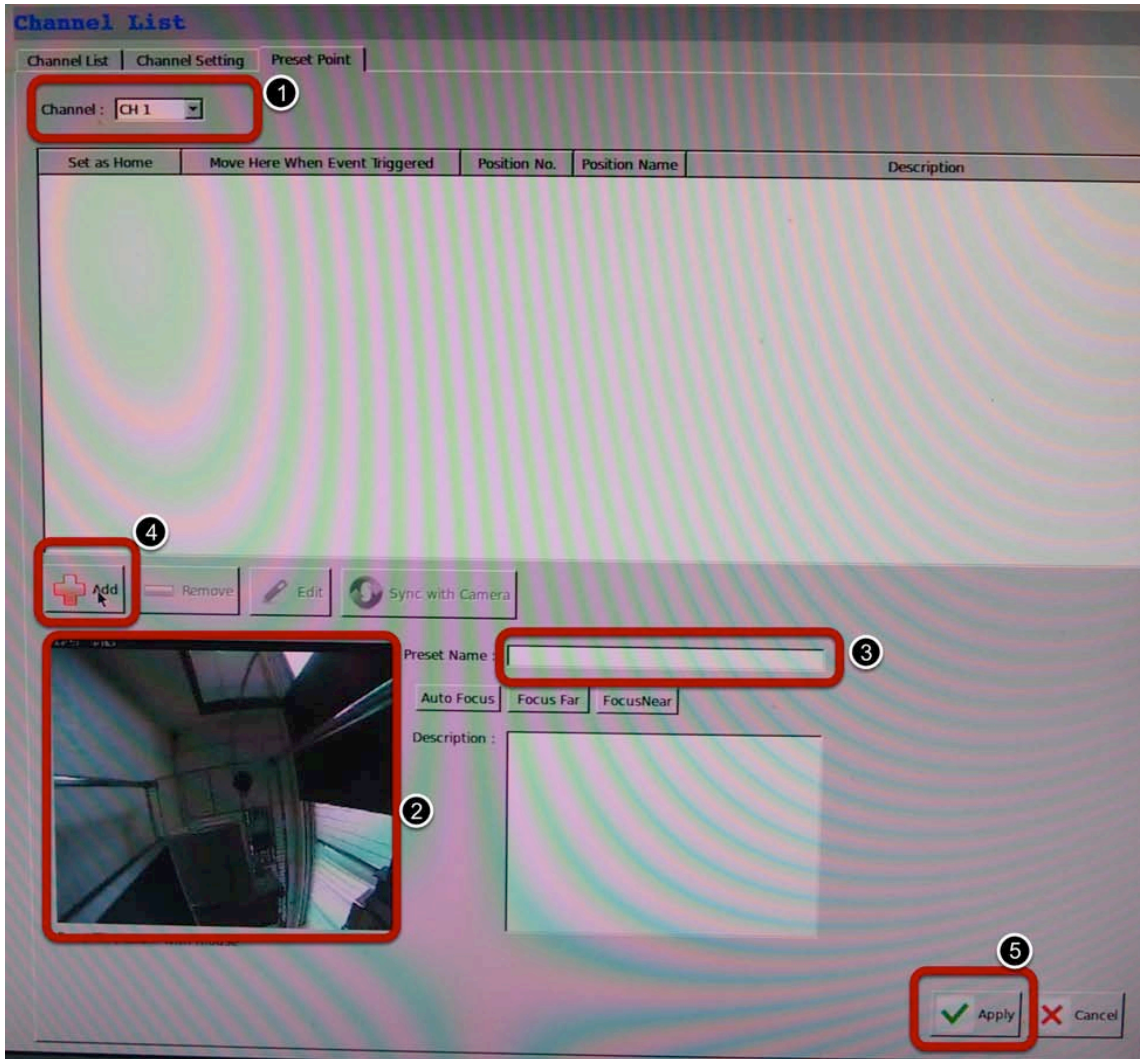


You can create up to 8 preset points for each channel if it's a PTZ-capable camera. To add a preset point:

1. Select a channel from the "Channel" list and its video will be displayed at the lower-left hand corner.
2. Click on the video to change its pointing direction.
3. Assign a name to this preset position.
4. Click "Add" to add it.
5. Click "Apply" to save the settings.

E-Map

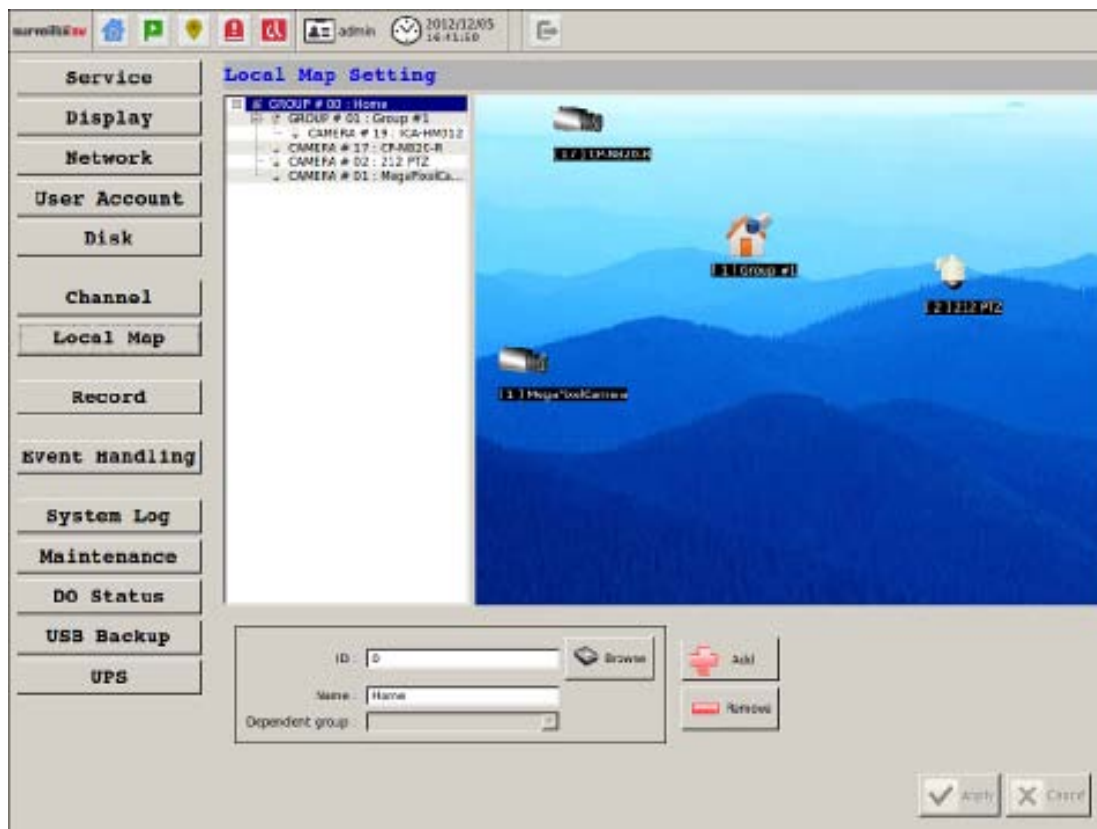


E-Map monitor is a function that alerts users whenever there is an event triggered (e.g. motion detected) from a camera with a geographical perspective. With this function, users can quickly identify which camera has detected an unusual event and where this event is happening. This function works by incorporating the event detection function as well as the recording function, which, as a result, helps users take all the necessary actions when an unusual event occurs.

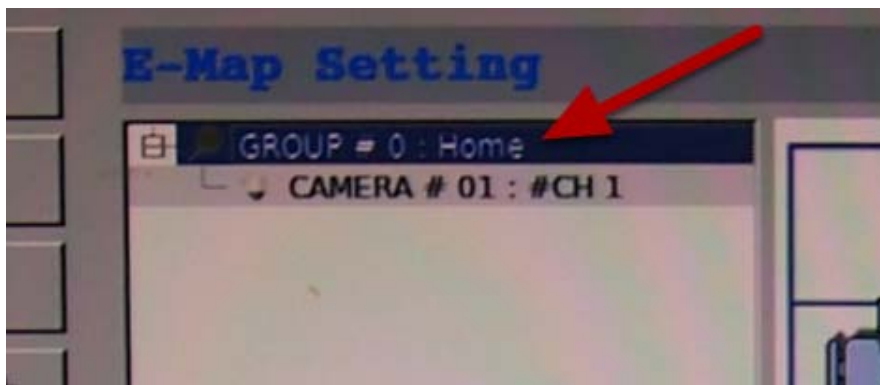


By default, all cameras are placed in the "Home" E-map group.

Add new E-map

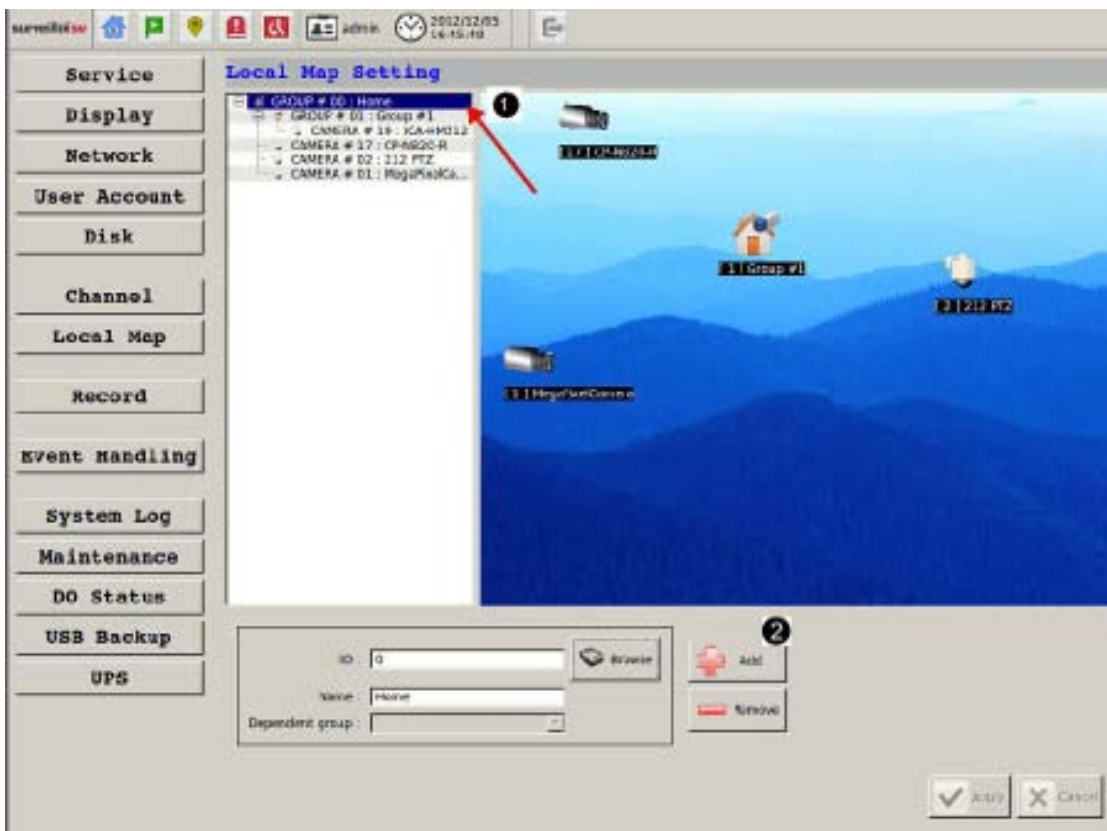


You are able to create unlimited number of "sub-groups" within the Home group, or a sub-group. To do so, select a group first from the list and click "Add". It will add a new sub-group within the group you selected.


Change E-map Image

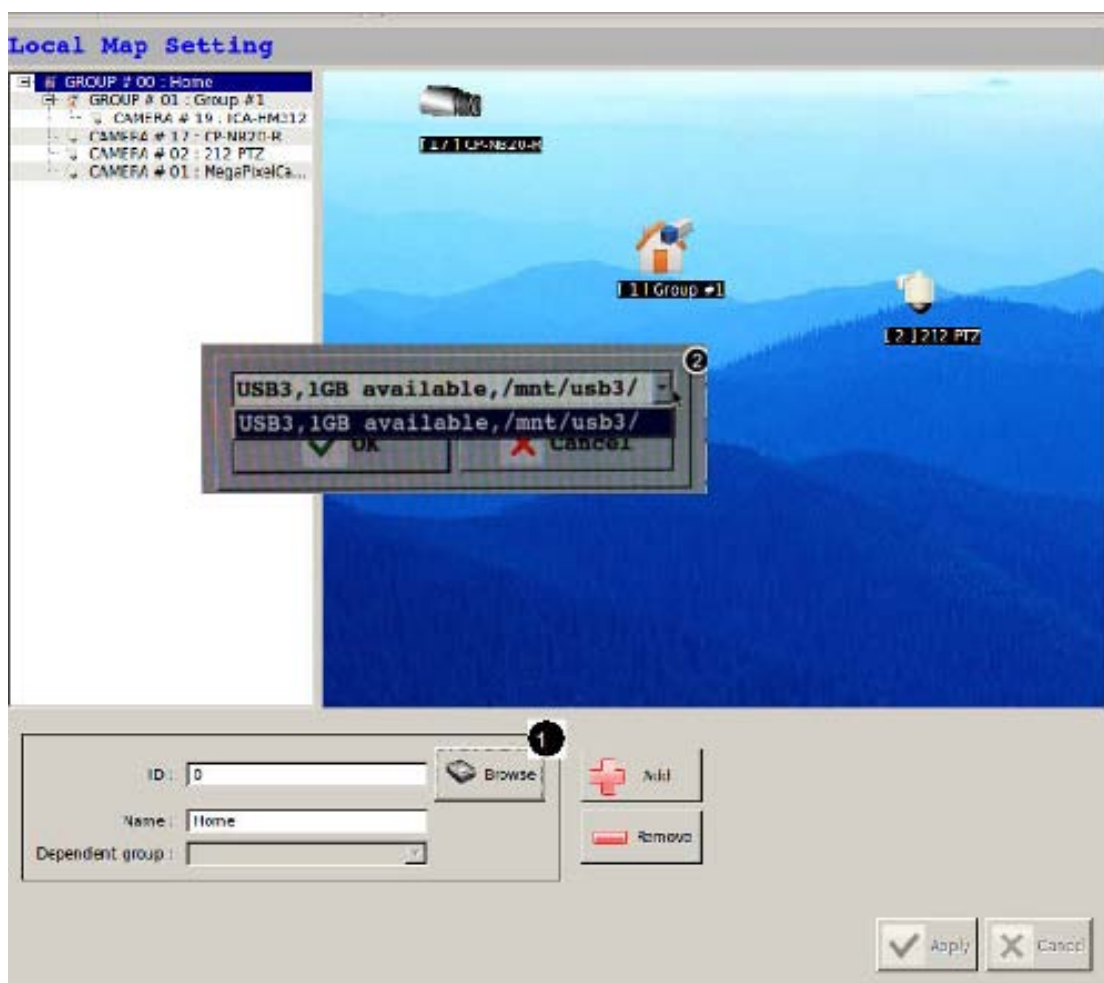


To change the map image, place your own image on a USB disk and plug it into one of the USB ports on the NVR. Click "Browse" button and select the USB disk when prompted.

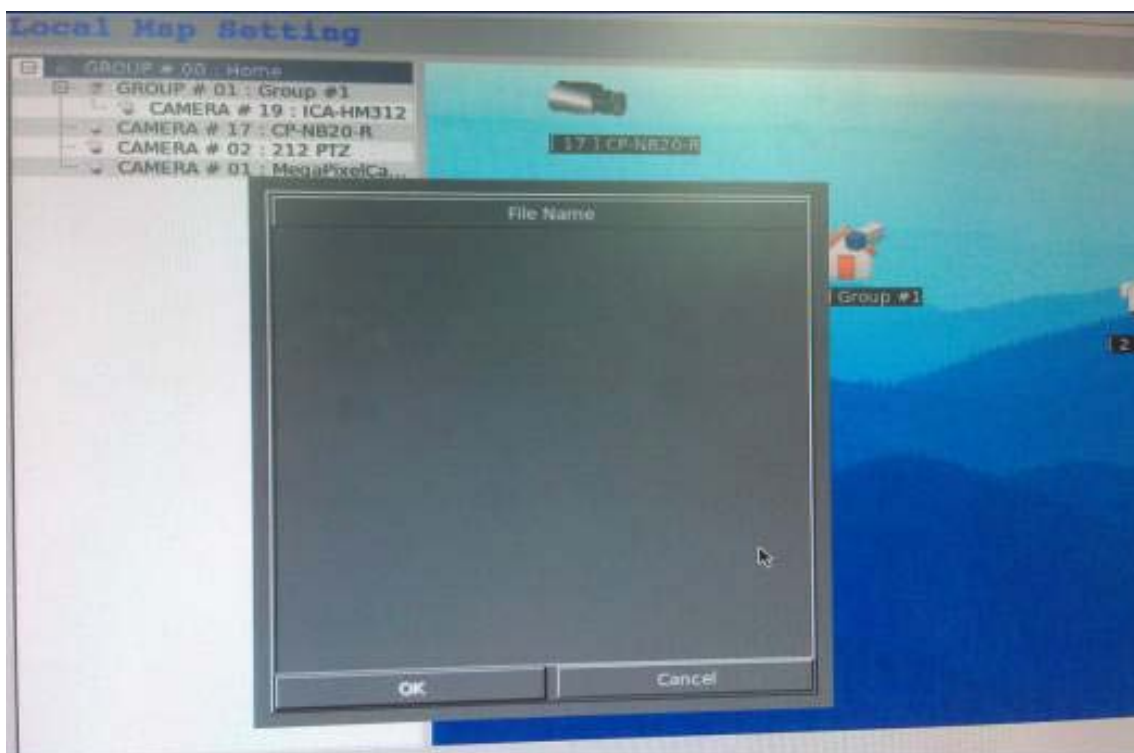


Locate the image file (.jpg) and click "Open" to finish.

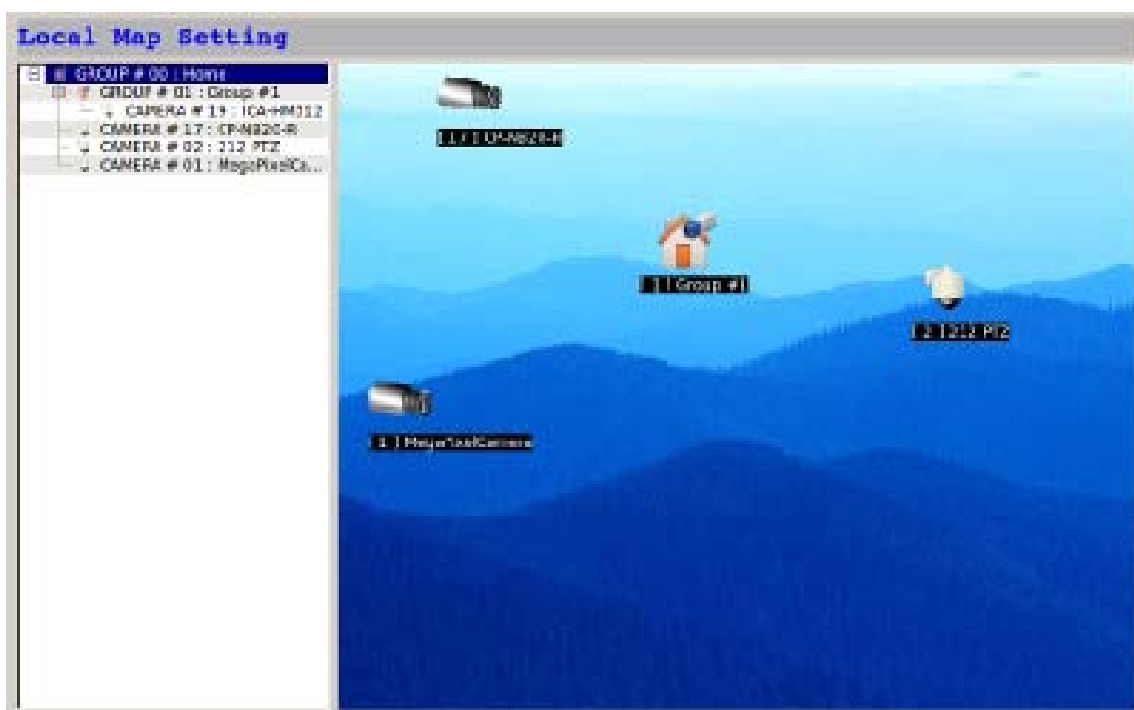


Above is an example once the background image is replaced and multiple E-map groups are created.

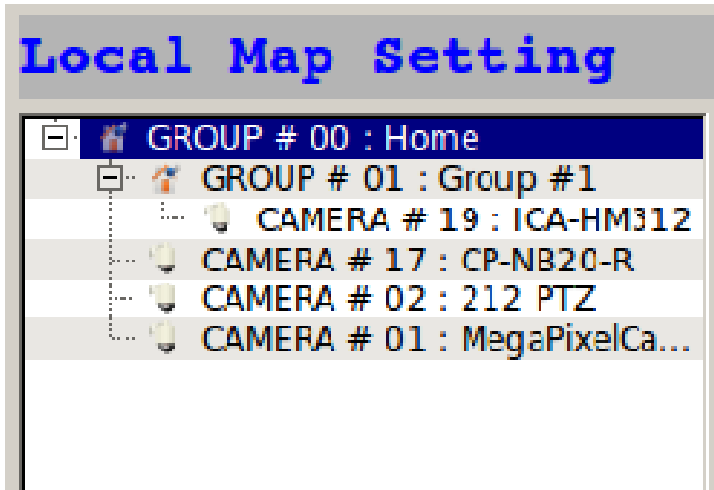


You can quickly re-arrange the groups/cameras by dragging one from the list and drop it to a new group.

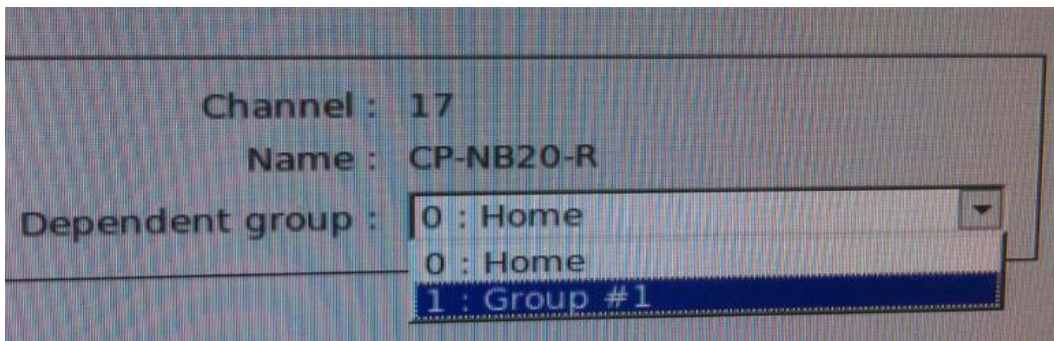


Or you can move a camera or a sub-group to a new one by using the "Dependent group" option at the bottom.

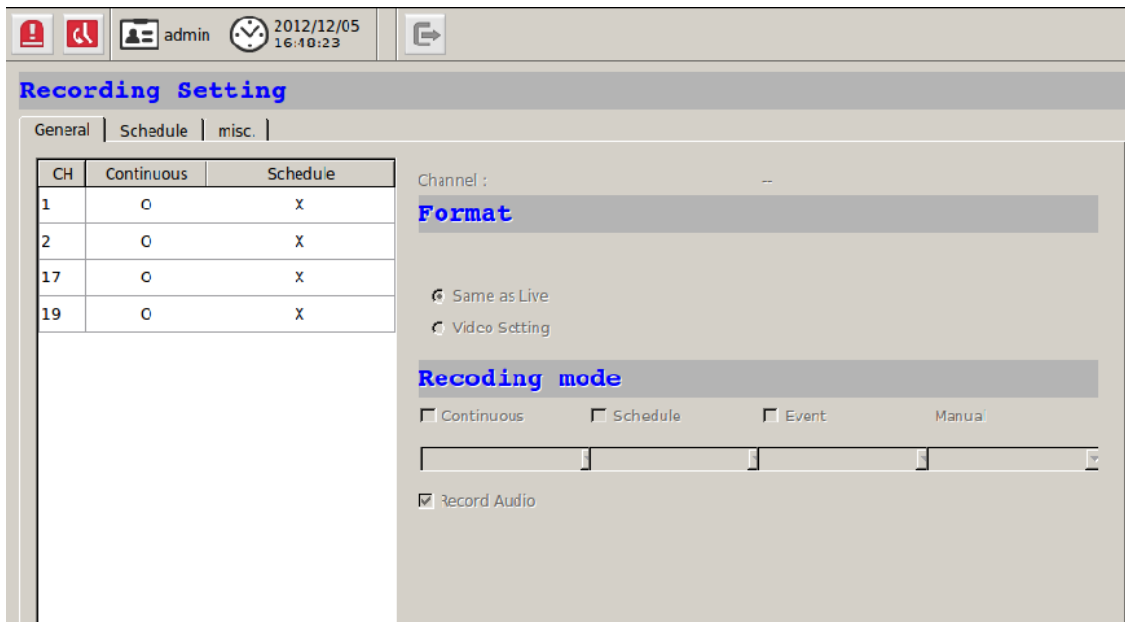


The "recording configurations" gives users the overall control of how and when a recording is performed and the quality of different types of recordings that will be performed on each channel. It can help the NVR to operate with sufficient system resource by performing recording only when it's necessary with adjustable recording frame rate. The NVR supports displaying live video and recording with different video quality settings or format if camera supports outputting multiple video streams.

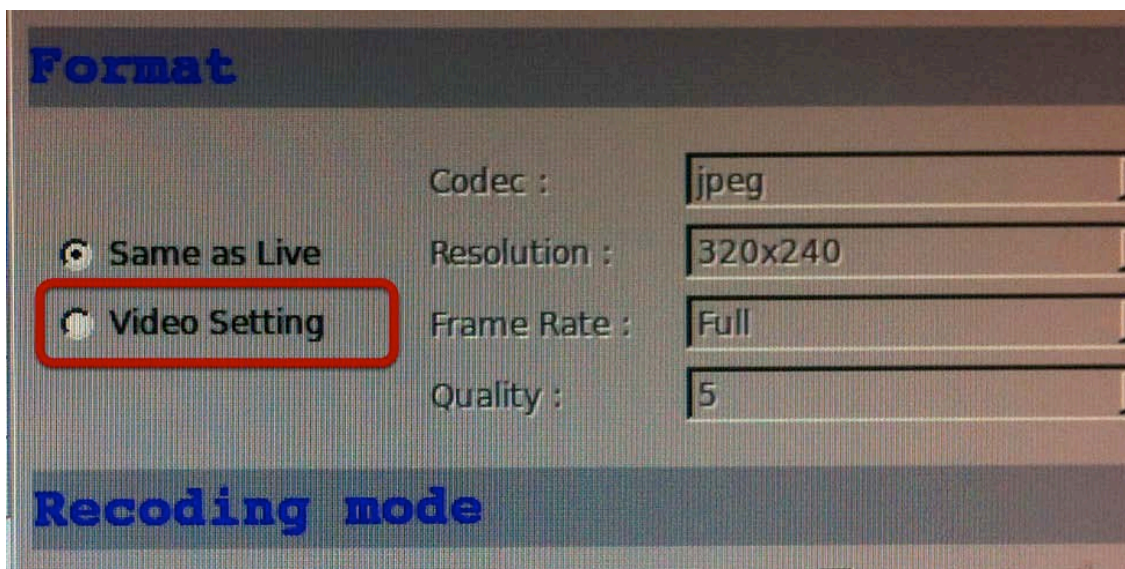

You can tell that you are configuring a multi-stream capable camera if the "Video setting" option is available.

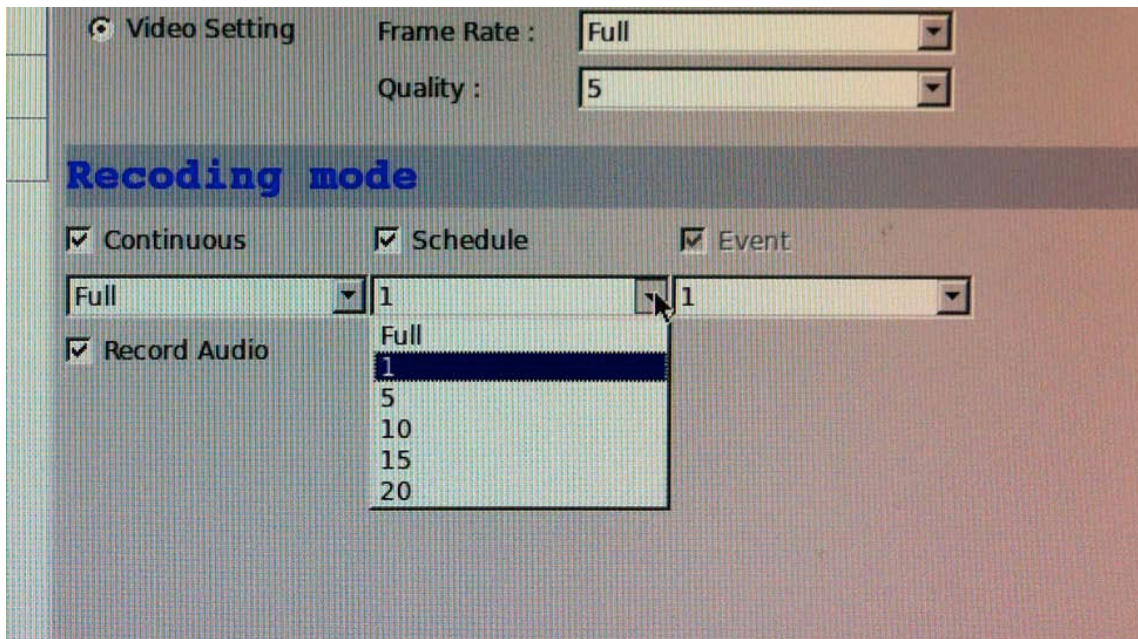


You can further configure the recording frame rate for different types of recording, and choose whether to recording audio or not.

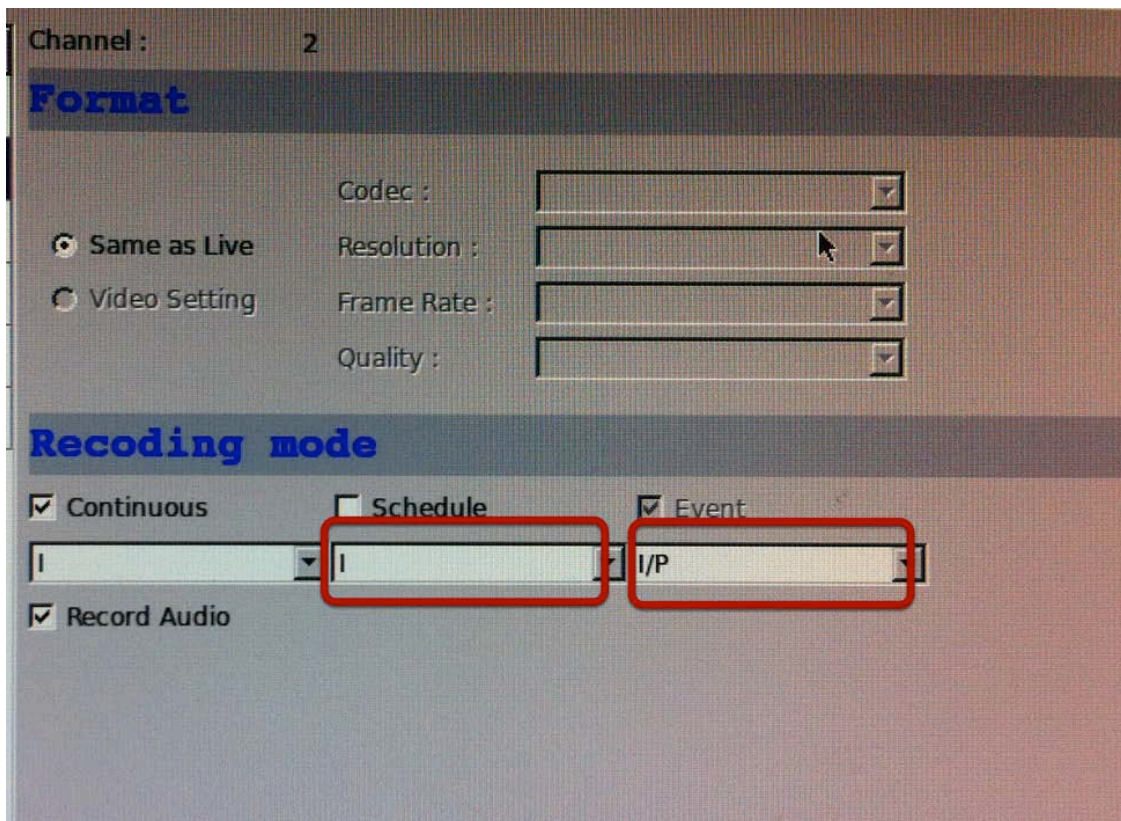


You will be given with options to record I frame only or I+P frames if the recording format is MPEG4 or H.264.


Schedule Recording

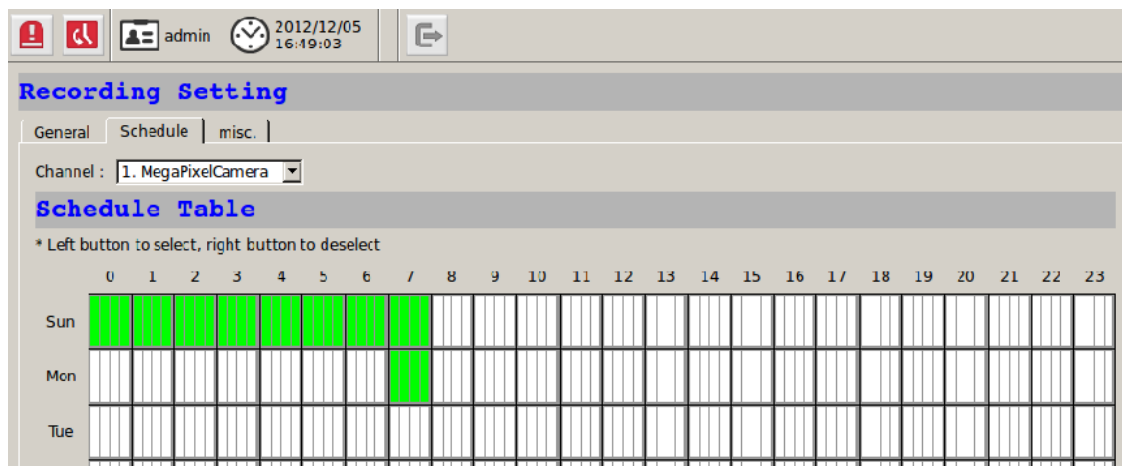


In the "Schedule" page, you are able to configure the NVR to recording during a particular time frame for each channel.

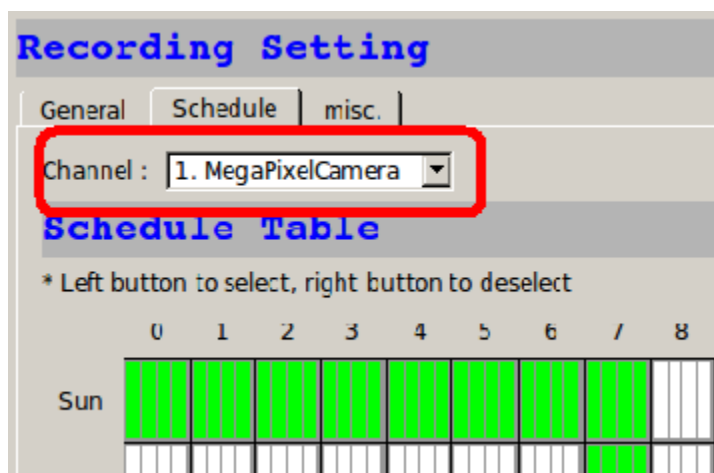

Start by selecting a channel for configuration from the upper-right hand corner.

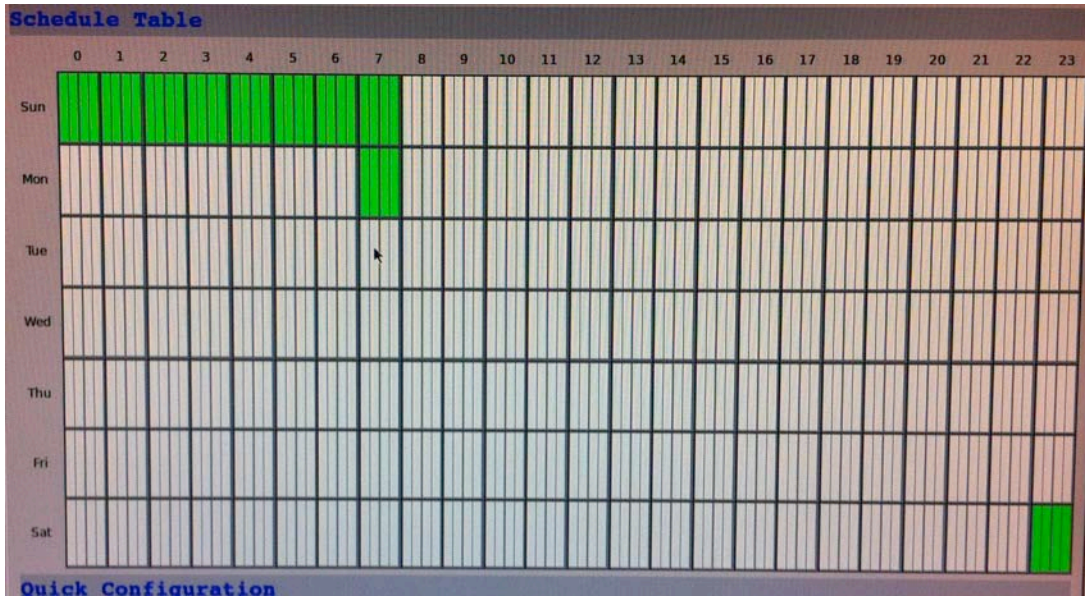

Use the schedule table to define recording time frame. Each cell box represents 15 minutes. You can click one to select or click and hold down the mouse left button and drag horizontally to select consecutive hours of a particular day, or drag vertically to select a particular hour for multiple days.

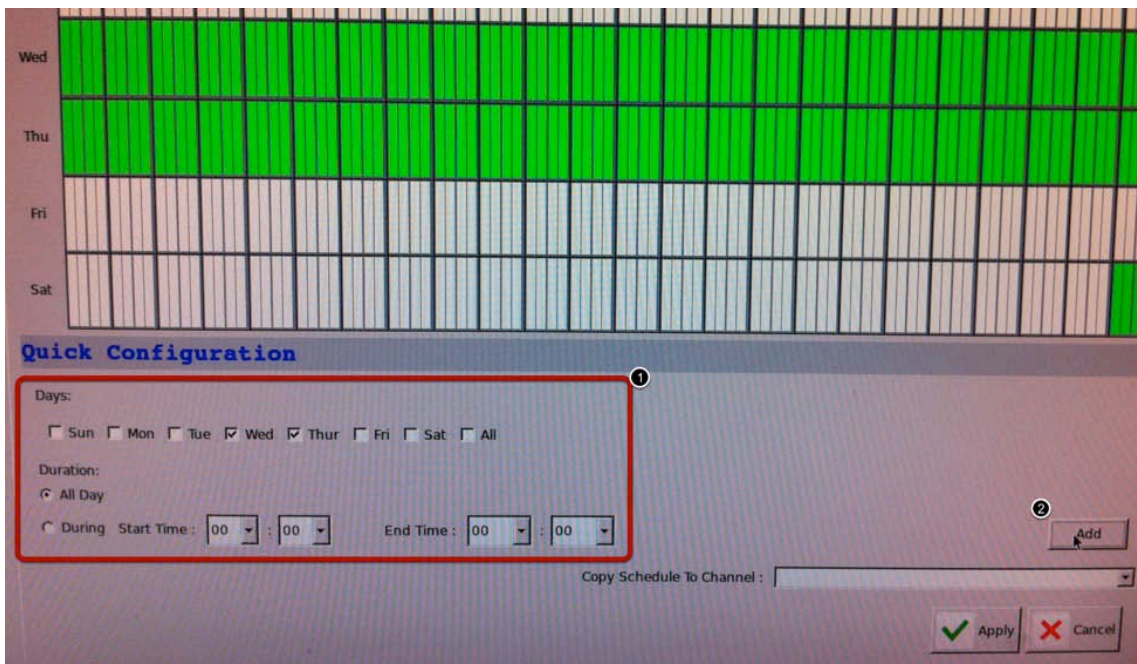

You can also use the options in the "Quick Configuration" section to quickly define the recording time frame without using the schedule table.

Record Buffer

Recording Setting

General | Schedule | misc.

Record Buffer

Pre-Alarm Buffer: Seconds (0 ~ 10)

Post-Alarm Buffer: Seconds (5 ~ 60)

☒ Enable Recycle (When enabled, recycle automatically starts when remaining HDD space reaches 20GB. The system recycles HDD space 32GB at a time)

☐ Keep the previous days of recorded videos.

The record buffer allows you to set the NVR to start recording with a certain period of time before and after an event trigger.

Event Handling

Event Setting

General Setting | DI Setting | DO Setting | Event Servers | Event Trigger

Event Trigger Duration

☒ Always ☐ Scheduled * Left button to select, right button to deselect

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun																								
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								

Event Trigger Interval

Interval: Seconds. (5~86400)

Trigger Actions

☐ Send Message

Subject: [Help](#)

Text:

FTP File Name:

☐ Send Image

File Name:

☒ Apply ☐ Cancel

The “Event Handling” section allows users to define conditions that constitute an event, its corresponding trigger action and when it will be triggered. Such setting can reduce the management overhead and notify the administrator only when it's necessary.

The general settings section can help you quickly configure when an event is triggered, how often events are triggered and the corresponding actions when events are triggered.

General Setting

Event Setting

General Setting | DC Setting | DC Setting | Event Servers | Event Trigger

Event Trigger Duration

☒ Always ☐ Scheduled * Left button to select, right button to deselect

0 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23

Sun
Mon
Tue
Wed
Thu
Fri
Sat

Event Trigger Interval

Interval: Seconds (5~86400)

Trigger Actions

☐ Send Message

Subject:

Text:

FTP File Name:

☐ Send Image

File Name:

Start the configuration by defining the general settings:

Define when an event will be triggered

- Choose “Always” or “Scheduled” under “Event Trigger Duration”

Event Setting

General Setting | DI Setting | DO Setting | Event Servers | Event Trigger |

Event Trigger Duration

☐ Always ☒ Scheduled * Left button to select, right button to deselect

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
Sun																								
Mon																								
Tue																								
Wed																								
Thu																								
Fri																								
Sat																								

Event Trigger Interval

Interval: Seconds. (5~86400)

• For the “Scheduled” option, use the table to define a range of time if you would like events to trigger corresponding actions only during a certain period of time.

* Use the mouse left button to select and the right button to deselect.

* You can click and hold down the left button and drag horizontally to quickly select consecutive hours of a particular day, or drag vertically to select same time for multiple days. Drag diagonally to select consecutive hours/days at once.

* Each cell box represents 15 minutes of time.

The screenshot shows a configuration interface for an event trigger. At the top, there is a calendar grid with 'Fri' and 'Sat' visible. Below the calendar, the 'Event Trigger Interval' section contains a text box with the value '5' and the label 'Seconds. (5~86400)'. The 'Trigger Actions' section includes a 'Subject' text box with 'event', two checked checkboxes for 'Send Message' and 'Send Image', a dropdown menu set to '2 frames', a 'Text' text box with 'eee', and an 'FTP File Name' text box with 'aaa'.

Event Trigger Interval

Interval : 5 Seconds. (5~86400)

Trigger Actions

Subject : event

☒ Send Message ☒ Send Image 2 frames

Text : eee

FTP File Name : aaa

How often an event is triggered

- Set a time interval under "Event Trigger Interval" to define how often events are triggered

Trigger action

Now that you have the event trigger duration and interval defined, choose what action to be taken during an event trigger:

- You can choose to have the recorder send out the first few frames of the video recorder upon an event is triggered
- You can also choose to have the recorder send out a warning message in e-mail or in txt file format and upload it to a destined FTP server

DI /DO Setting

Concept of DI /DO event

The NVR has built-in DI port x 8, and DO port x 4 which can be used for event trigger. Some cameras also come with DI port built-in as a source of event. The NVR can detect such capability from the camera after it's being added. User can then configured event trigger by either from camera's or NVR's DI port.

In summary, DI/DO event can basically be configured for three purposes:

- (1) Configure devices connected on NVR's DO port to be triggered by camera's or NVR's DI port.
- (2) Configure devices connected on NVR's DO port to be triggered by NVR's system events.
- (3) Configure devices connected on NVR's DO port to be triggered by NVR's system event.


Steps required to properly DI /DO events

To properly set up a DI/DO event, the following steps are required:

- (1) Defined DI/DO ports trigger conditions (from camera's or NVR's)
- (2) Enable NVR to trigger event when receiving DI trigger signal from the camera
- (3) Enable desired system events
- (4) Enabled the NVR to trigger the DO ports for the configured DI conditions/system events


Define DI /DO ports trigger conditions (System events)

Noticing in the section highlighted below, users don't get to configure the DI ports but the NVR's DO port. This is for configuring chosen DO port in the NVR to be triggered to the desired "State" by the NVR's system events.

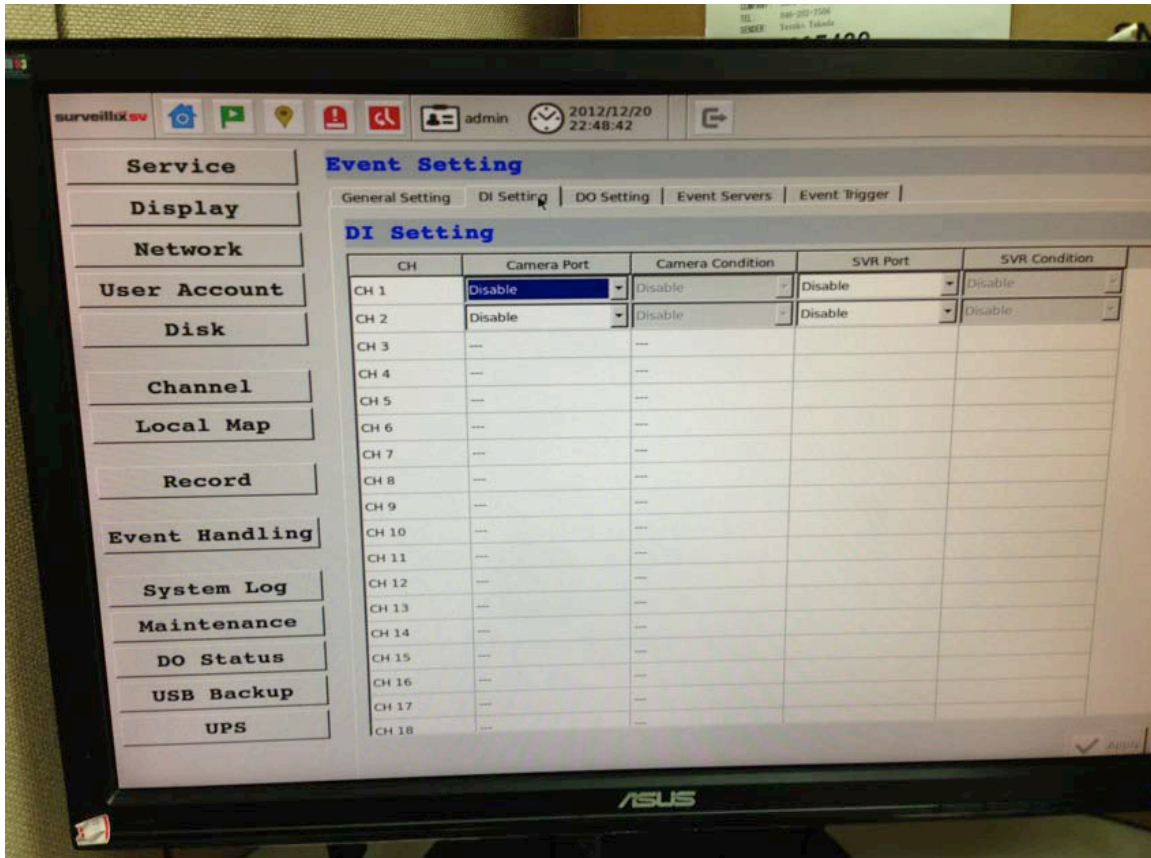


Define DI/DO ports trigger conditions (camera's or NVR's DI events)

The section highlighted below which users can defined events to be triggered by camera's or/and NVR's DI port(s) for each channel. Then the chosen DO ports to be triggered to desired states by the corresponding DI ports defined.

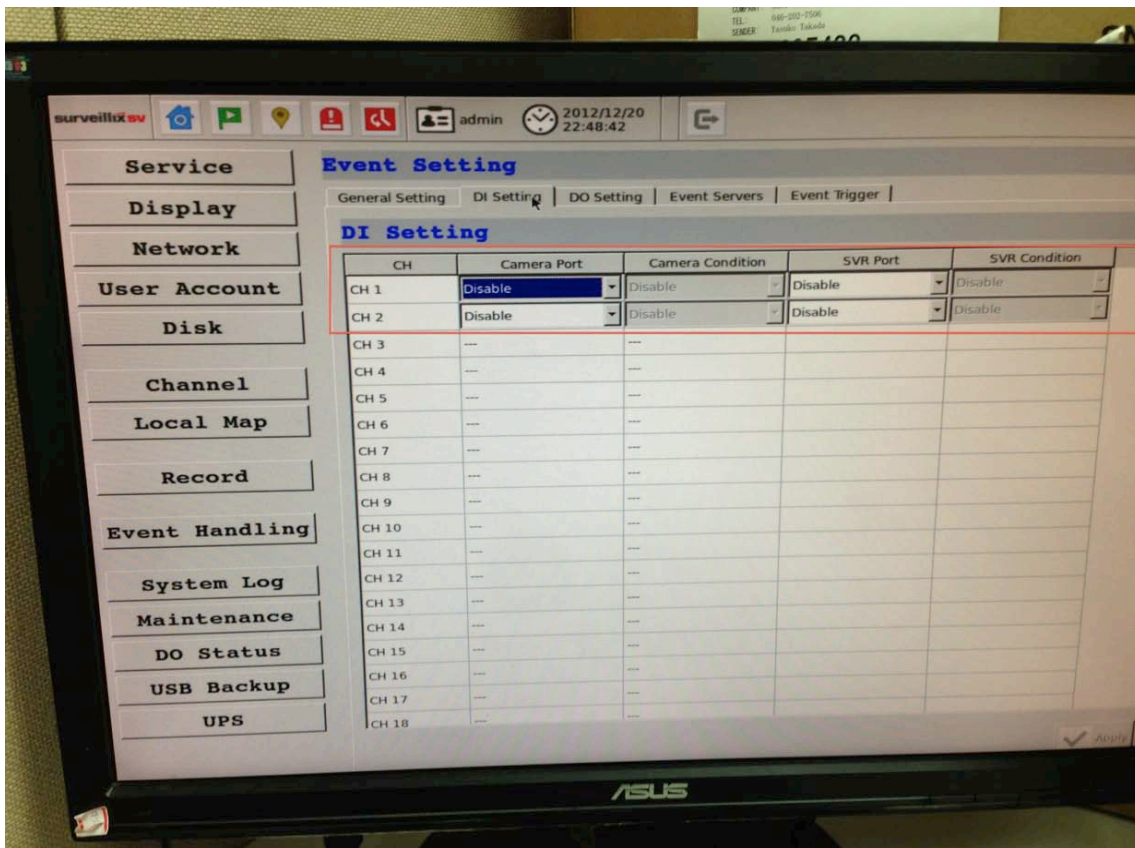

Define DI/DO ports trigger conditions (camera's DI port conditions)

The section highlighted below is to defined the trigger condition from the **camera's DI port**. Users can select the desired port from the desired channel and configure event trigger when the DI port condition is in "Open", "Ground", or "Change".

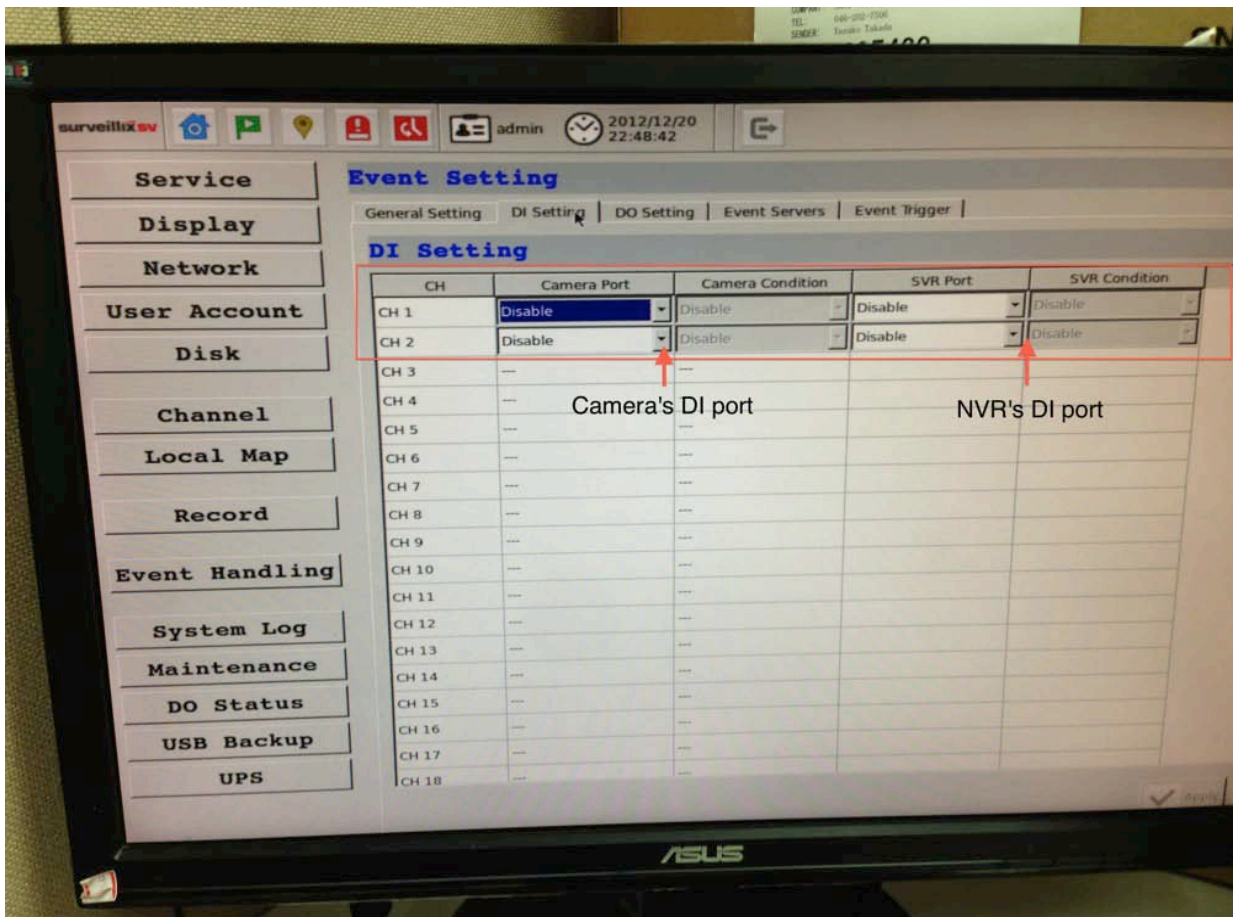


Define DI/DO ports trigger conditions (NVR's DI port conditions)

The section highlighted below is to defined the trigger condition from the **NVR's** DI port. Users can select the desired channel to use the desired DI port from the NVR, and configure event trigger when the DI port condition is in "Open", "Ground", or "Change".


Define DI/DO ports trigger conditions (NVR's DO port conditions)

Once you have the DI ports conditions properly defined, configure the section highlighted below for the corresponding DO ports to be triggered by the conditions defined on the left for each channel. Users can choose which DO port to be triggered and changes the DO port to be either "Open" or "Ground" state by the defined DI condition and how long the trigger lasts before user interrupts it.

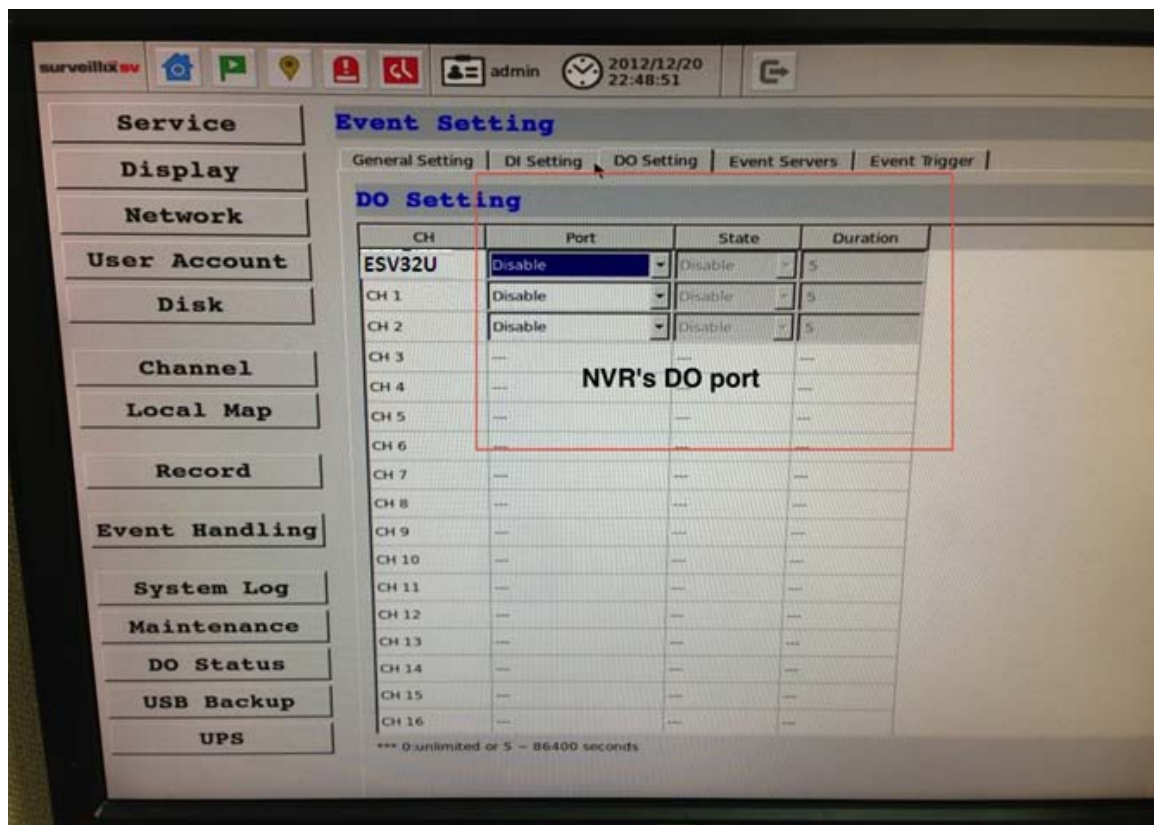


Enable NVR to trigger event when receiving DI trigger signal from the camera

If you have defined camera's DI ports as source of event in the DO/DO setting page, when done, head over to the Event Trigger page under "Event Configuration" and enable the NVR to trigger event when receiving DI signals from the camera by ticking the checkboxes highlighted below.

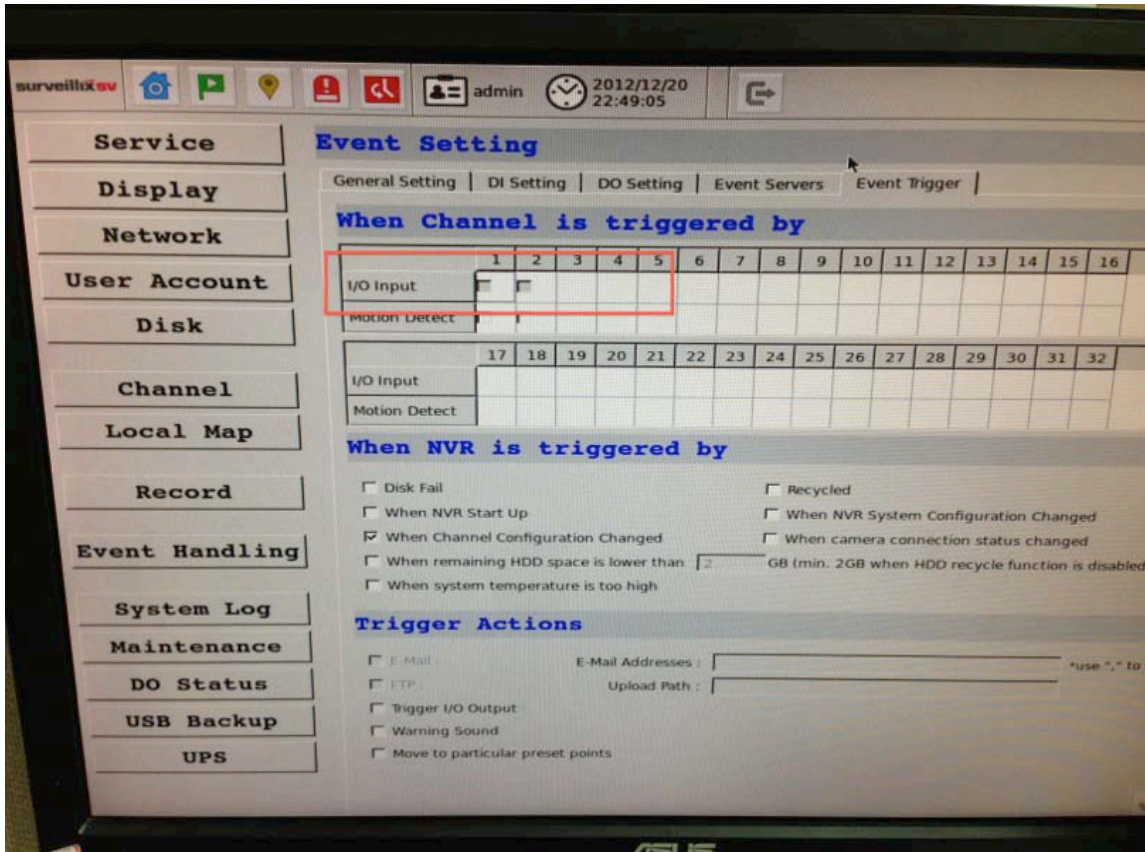

Enable desired system events


If you have define corresponding DO port to be triggered by NVR's system event, section highlighted below is where you define what system events will trigger the DO port.

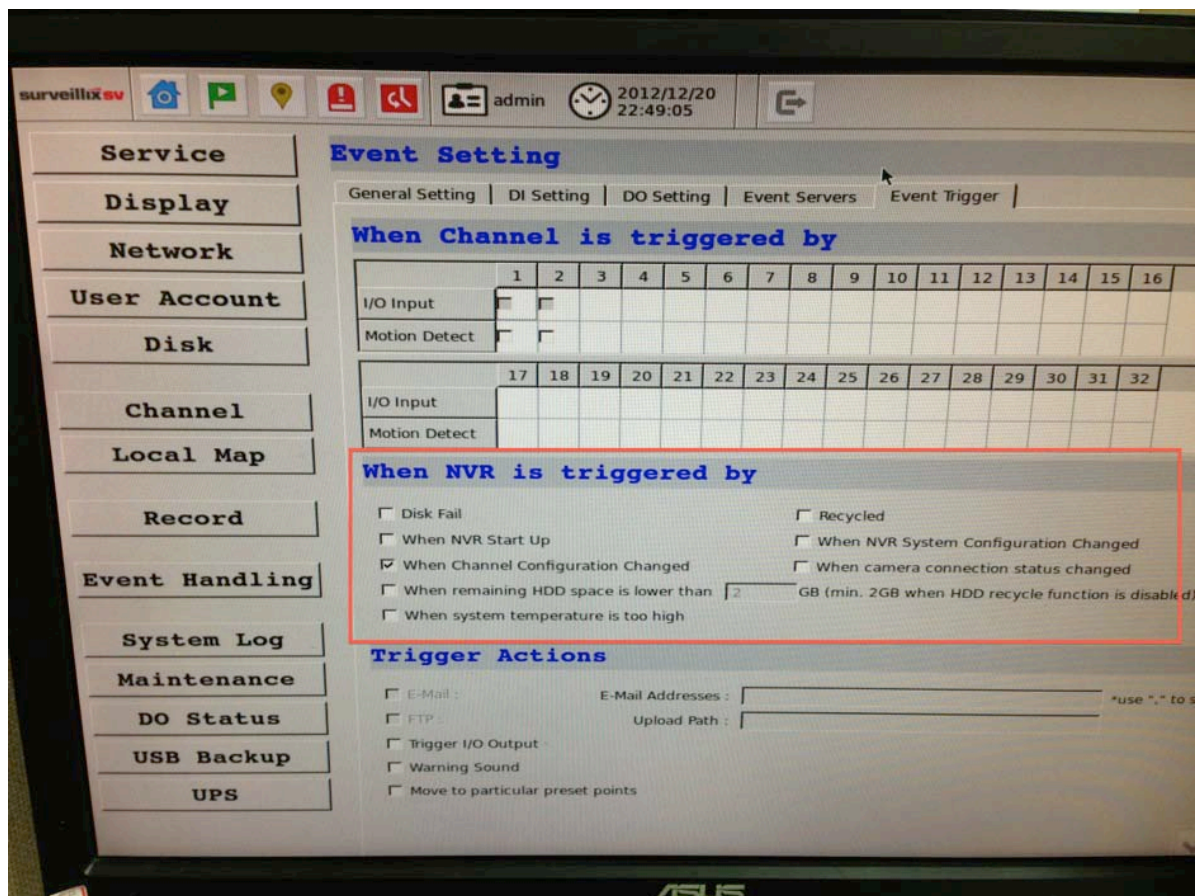

Enabled the NVR to trigger the DO ports for the configured DI conditions/system events

Lastly, check and enable the option highlighted below in the Trigger Actions section in the Event

Trigger setting page to enable the NVR to trigger the DO ports for the configured DI/system events.

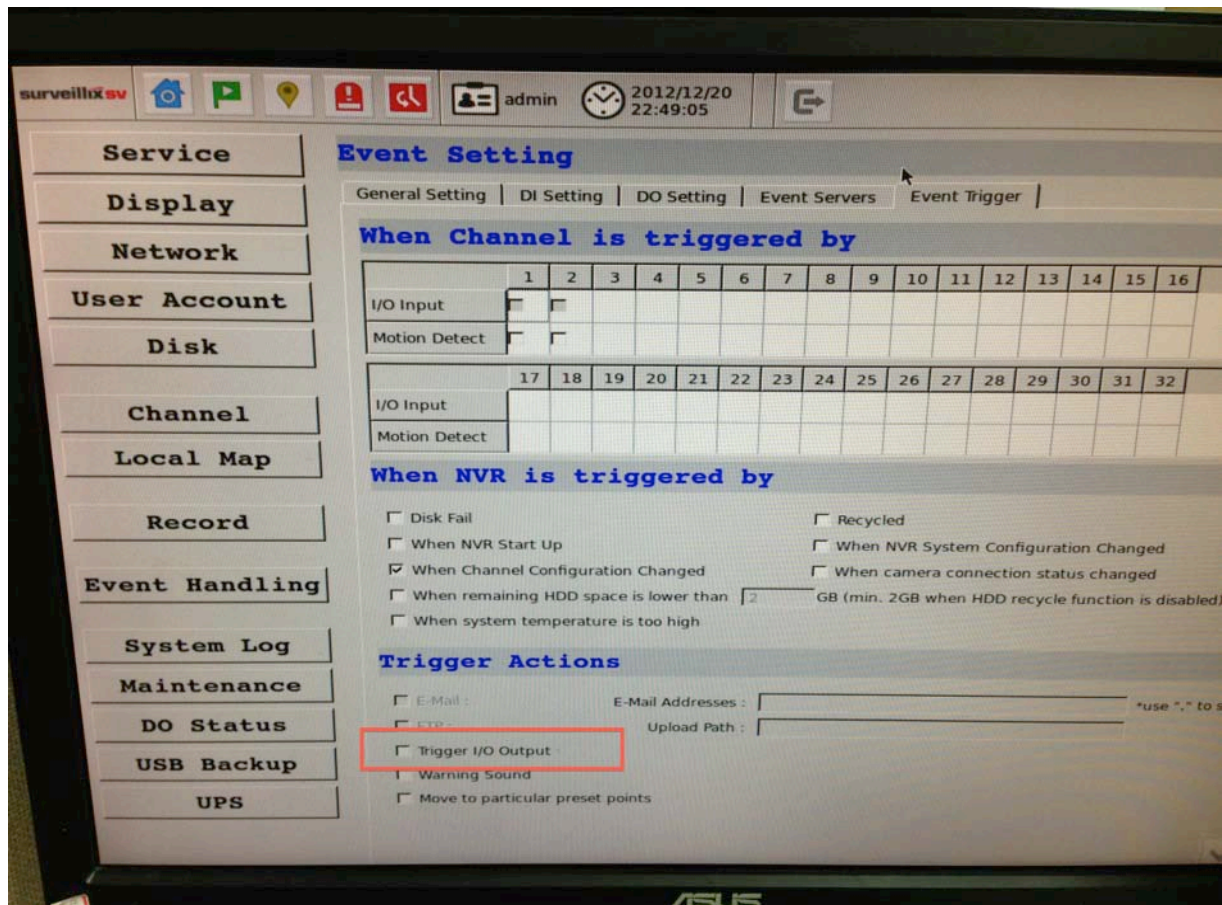

This function allows users to use camera's digital input port from the recorder as source of an event. You can setup the recorder to receive events from a particular camera's input port and then triggers the NVR to start recording.

**The recorder only acts as a medium for pairing up input/output ports between cameras and the recorder.*

**Only connected cameras will be displayed in the list.*

**Some cameras only allow one trigger source be configured at a time, e.g.:*

if the camera has the motion detection function turned on, its digital input will be disabled and vice versa. Under such circumstance, if you set to use camera's digital input port as the event trigger source, you will not be able to select motion detection as the trigger source for this camera under "Event Trigger" setup page.

** The image(s) that are uploaded to the destined FTP server or emailed to a destined mail recipient are in their own proprietary image file format (.h4i or .p4i), which can only be opened by the NVR media player.*

System Log


ID	Time	Type	Sub-type	Channel	SourceAP	IP	User
1	12/15 12:15:54	Channel	Channel connect	4			
2	12/15 12:15:54	Recording	Stop schedule recording	1			
3	12/15 12:15:41	User login	User login		NVR UI	127.0.0.1	admin
4	12/15 12:15:37	Service	Service Start				
5	12/15 12:15:22	User login	User login		NVR UI	127.0.0.1	admin
6	12/15 12:15:18	Service	Service Start				
7	12/15 12:15:04	User login	User login		NVR UI	127.0.0.1	admin
8	12/15 12:14:59	Service	Service Start				
9	12/15 12:14:45	User login	User login		NVR UI	127.0.0.1	admin
10	12/15 12:14:41	Service	Service Start				
11	12/15 12:14:26	User login	User login		NVR UI	127.0.0.1	admin
12	12/15 12:14:22	Service	Service Start				
13	12/15 12:14:20	Recording	Stop schedule recording	1			
14	12/15 12:14:07	User login	User login		NVR UI	127.0.0.1	admin
15	12/15 12:14:02	Service	Service Start				
16	12/15 12:11:29	User login	User logout		PI Vu Central ...	192.168.102.35	admin
17	12/15 12:08:35	User login	User logout		PI Vu Central ...	192.168.102.35	admin
18	12/15 12:08:13	User login	User login		Web	192.168.102.35	admin
19	12/15 12:06:06	User login	User login		Web	192.168.102.35	admin
20	12/15 12:05:39	Channel	Channel connect	7			
21	12/15 12:05:35	User login	User login		Web	192.168.102.35	admin
22	12/15 12:05:34	Recording	Stop schedule recording	1			
23	12/15 12:05:33	Service	Reload Configuration				
24	12/15 11:54:27	User login	User login		PI Vu Central ...	192.168.102.35	admin
25	12/15 11:50:31	User login	User logout		PI Vu Central ...	192.168.102.35	admin
26	12/15 11:50:23	User login	User login		Web	192.168.102.35	admin
27	12/15 11:38:51	User login	User login		Web	192.168.102.35	admin
28	12/15 11:38:49	User login	User login		PI Vu Central ...	192.168.102.35	admin

< Prev Next >> 128/1984

Clear Log


"System Log" keeps a record of what's been happening to the device and provides basic information for troubleshooting.

Maintenance

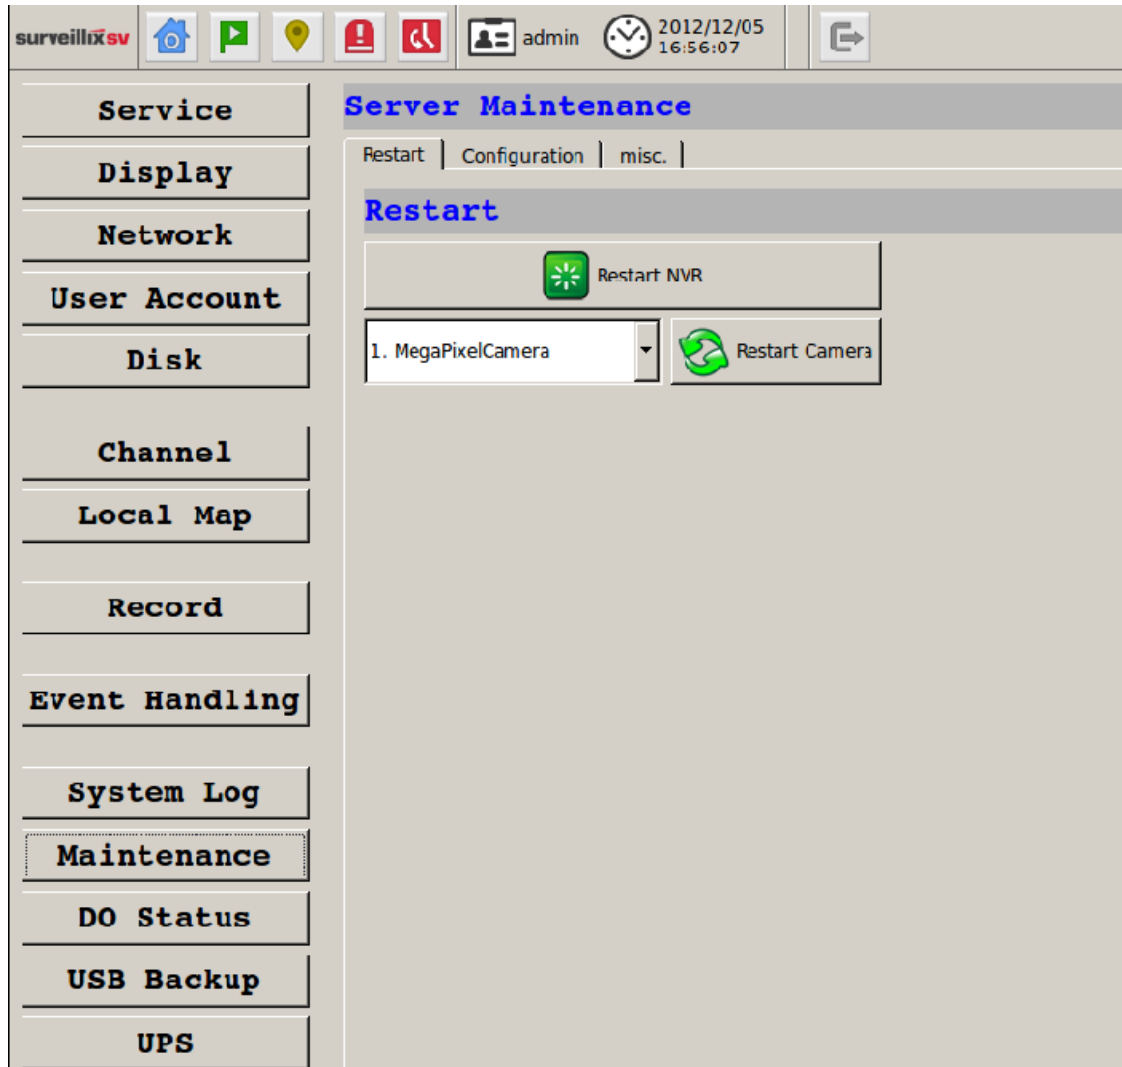


“Maintenance” provides functions for users to:


- Reboot the NVR when necessary
- Reboot cameras directly from the NVR
- Perform Firmware Upgrade
- Backup the NVR's settings to a local hard drive
- Restore the NVR's settings from a previously saved configuration file
- Reset the NVR's settings to their factory default values

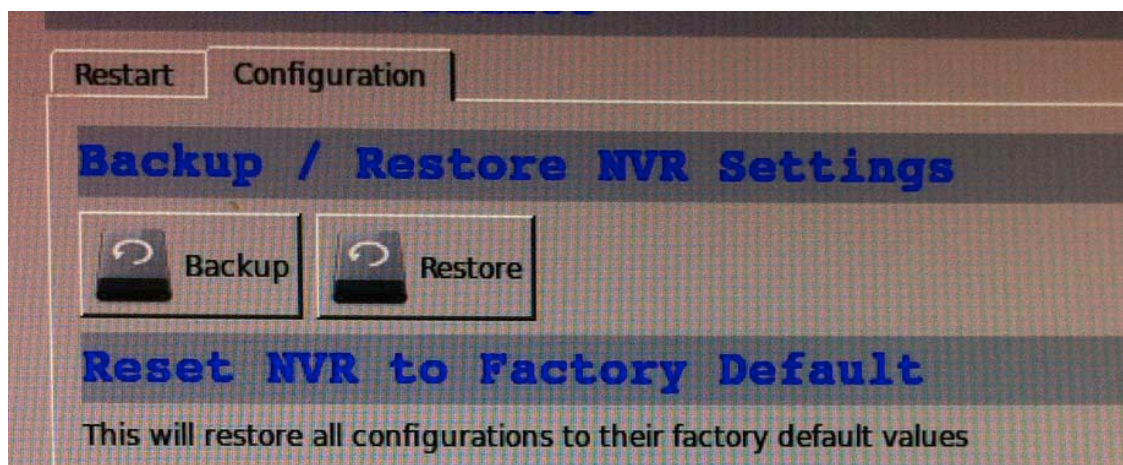


The configuration can be backed up to or restore from a USB disk. It is required to plug in a USB disk formatted in FAT32, EXT3, or EXT4 prior to using the backup and restore functions.

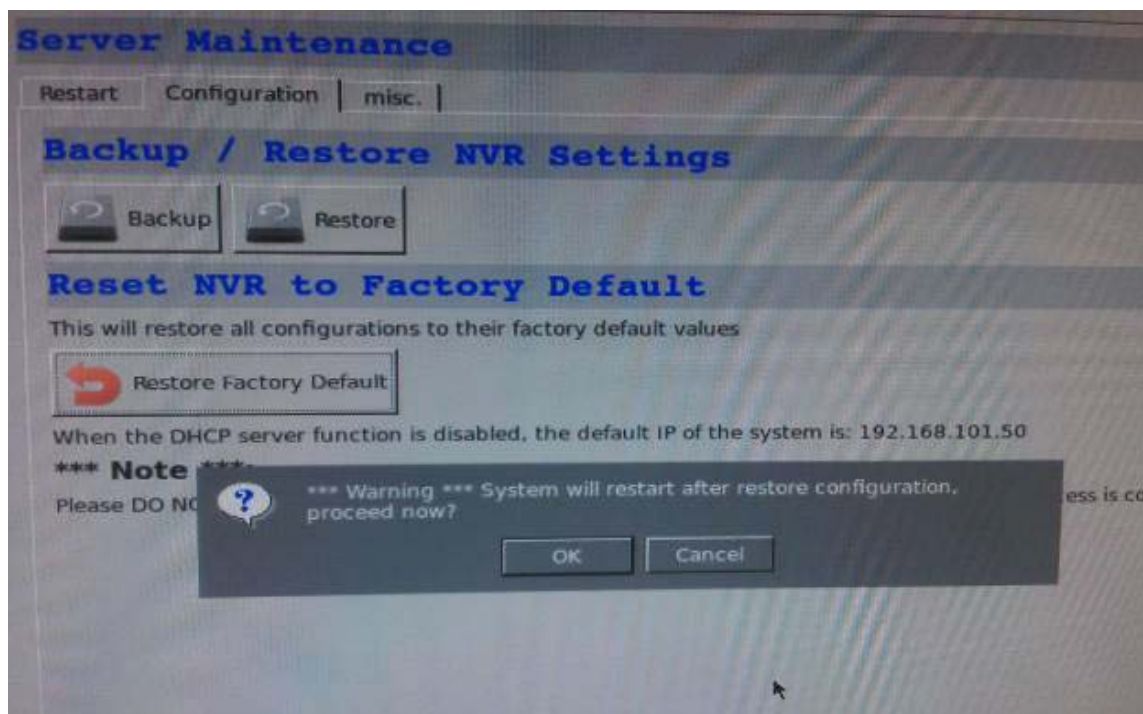


To reset the recorder back to its factory default, click "Restore Factory Default" button and begin the process.

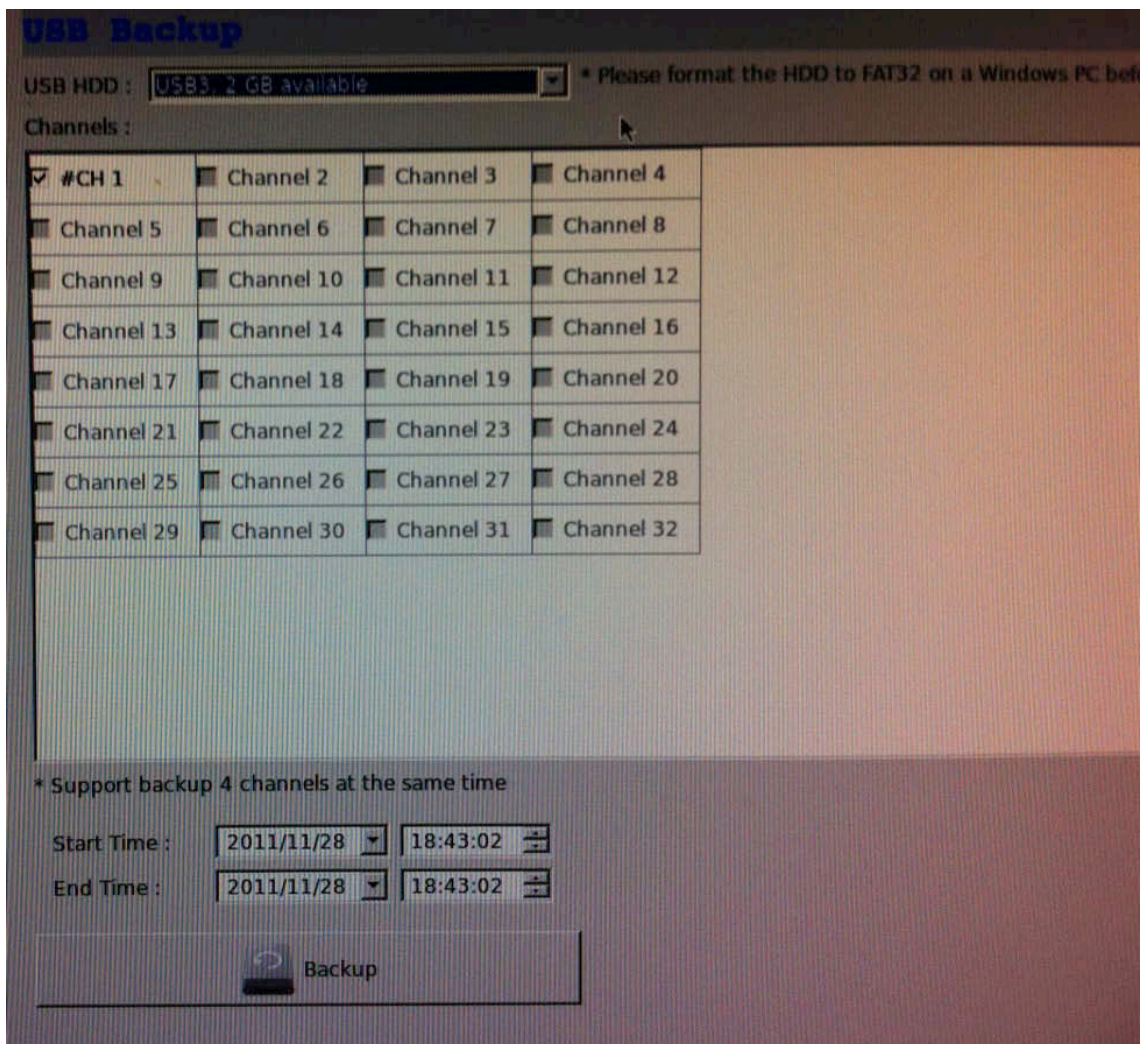


It's a function that allows users to backup the recording data in its database file format as well as in AVI to the externally connected USB hard disk.

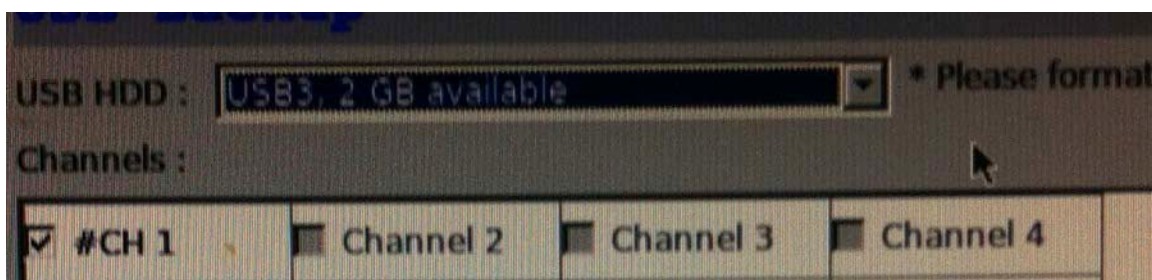

The USB hard disk(s) will be listed in the drop-down menu displaying the remaining disk space. Make your selection from the drop-down menu if you have more than one disks connected to the NVR.

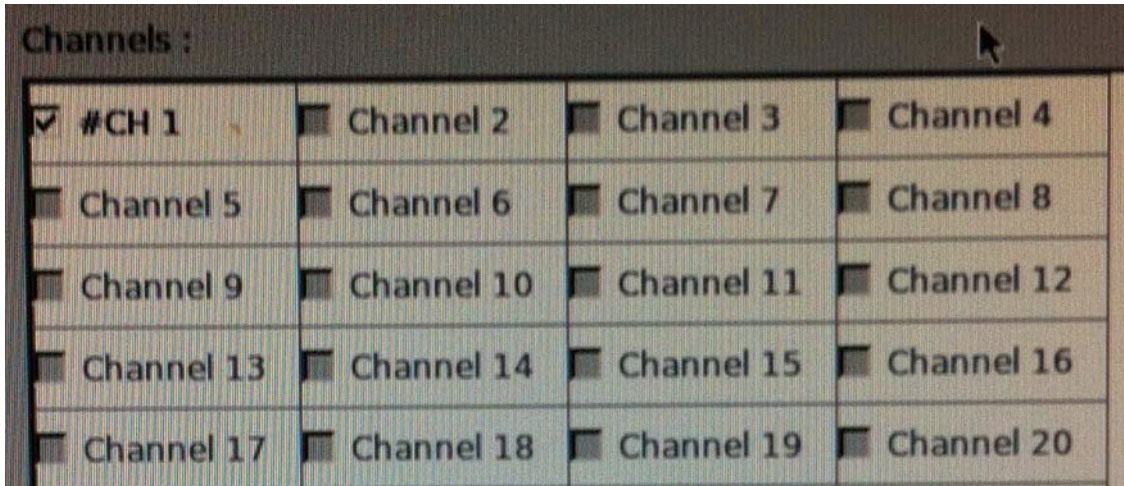

Next, select channels which you would like to backup the recording data from. Maximum 4 channels can be selected at once.

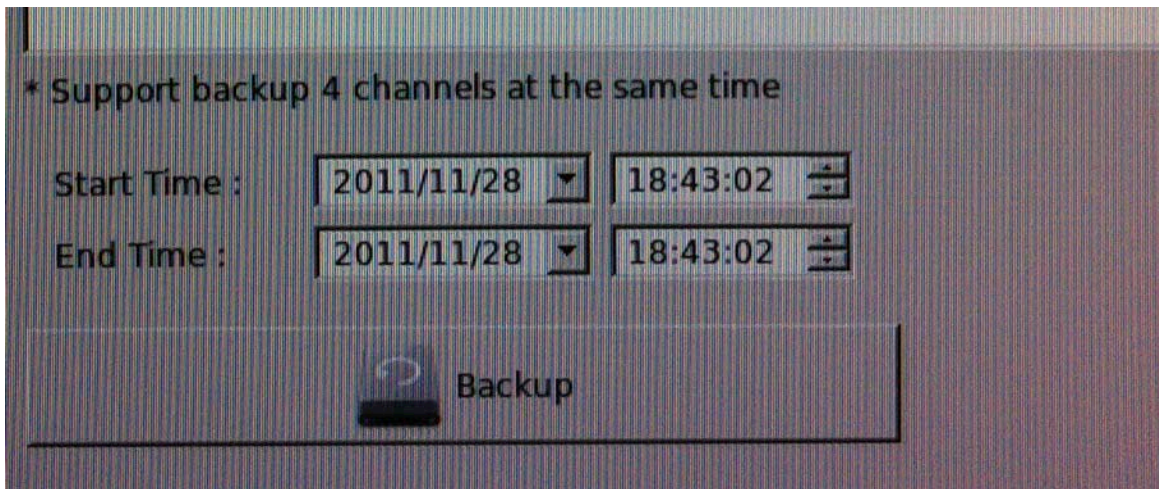

Configure the start and end time of the recording data you would like to backup and click the "Backup" button to begin.

Things to pay attention to the USB Backup function

Limitation:

- It does not support USB Hub extend the number of HDD connected to the NVR
- Only one backup process can be performed at a time
- Maximum 4 channels can be selected for backup
- Only FAT32 USB hard disk is supported for backup
- The USB hard disk needs to have more than 100MB remaining space
- If multiple partitions are presented in one disk, only the first partition will be detected and used for backup

Process:

- Progress will be displayed on the UI
- If the backup process gets interrupted, which the process stops at a point of time that is before the "END Time" user defined, such time will be displayed on the UI
- A folder will be automatically created in the USB hard disk with a name format like 0028687831_20100610151515_20100605110010_20100606110010 (MAC_backupbuttonclicktime_starttime_endtime)

Note:


- Please plug in the USB HDD only after the NVR is fully started, or the HDDs will be incorrectly mounted.
- Play the backed up files using the NVR media player.

UPS Configuration

To enable local UPS support (NVR acting as UPS server):

1. Connect the compatible USB UPS to the NVR
2. Turn on the NVR
3. Go to "NVR Setup" >> "UPS", and check "Enable UPS Support" option.

You can adjust how long the UPS stays on to provide backup electricity to the NVR after a power failure by choosing one of the options from the drop-down shown below:

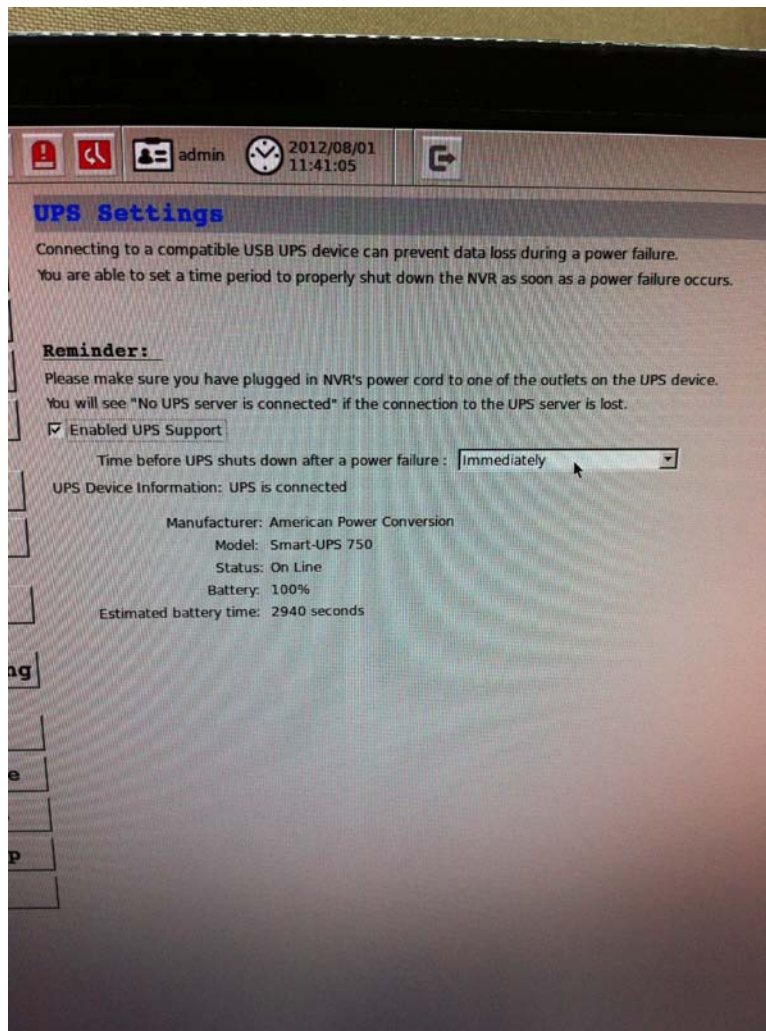


** Currently only APC Smart-UPS 750 is supported (05282012)*

The UPS information should be obtained and displayed at the bottom of the page after the settings are applied:

To enable network UPS support (NVR acting as UPS slave):

1. Go to "NVR Setup" >> "UPS Configurations", and check "Enable UPS Support" option.
2. Enter the IP address of the **NVR running as UPS server. (The NVR with USB UPS physically attached to)**

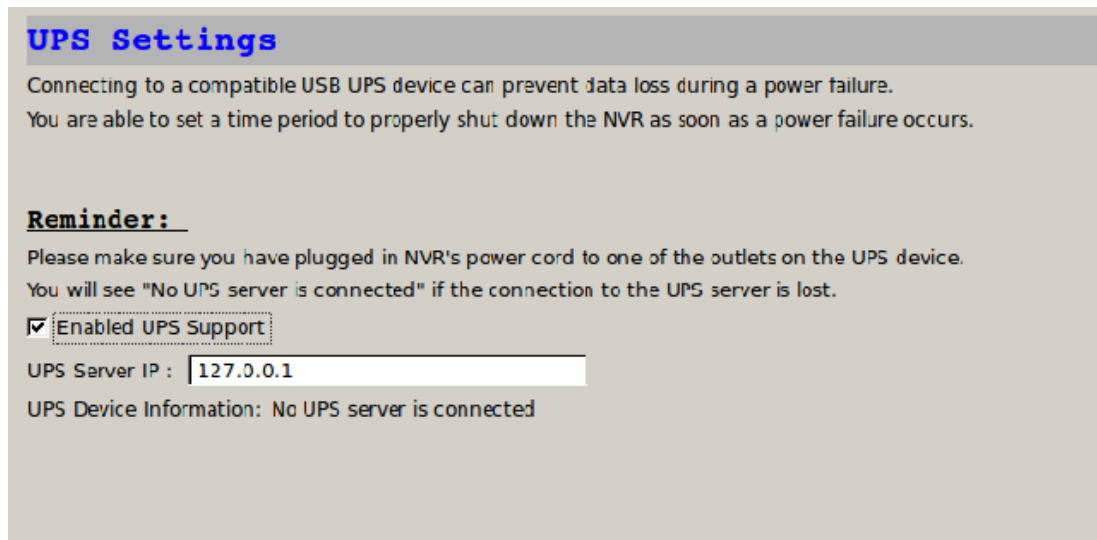

UPS Settings

Connecting to a compatible USB UPS device can prevent data loss during a power failure.
You are able to set a time period to properly shut down the NVR as soon as a power failure occurs.

Reminder:
Please make sure you have plugged in NVR's power cord to one of the outlets on the UPS device.
You will see "No UPS server is connected" if the connection to the UPS server is lost.

☒ Enabled UPS Support

UPS Server IP :


UPS Device Information: No UPS server is connected

** Please make sure both NVRs (UPS server and slave) are on the same local network to ensure the communication between the two.*

** Please make sure both NVRs are plugged into the outlets that connect to the UPS.*

Playback (VGA output Interface)

Playback

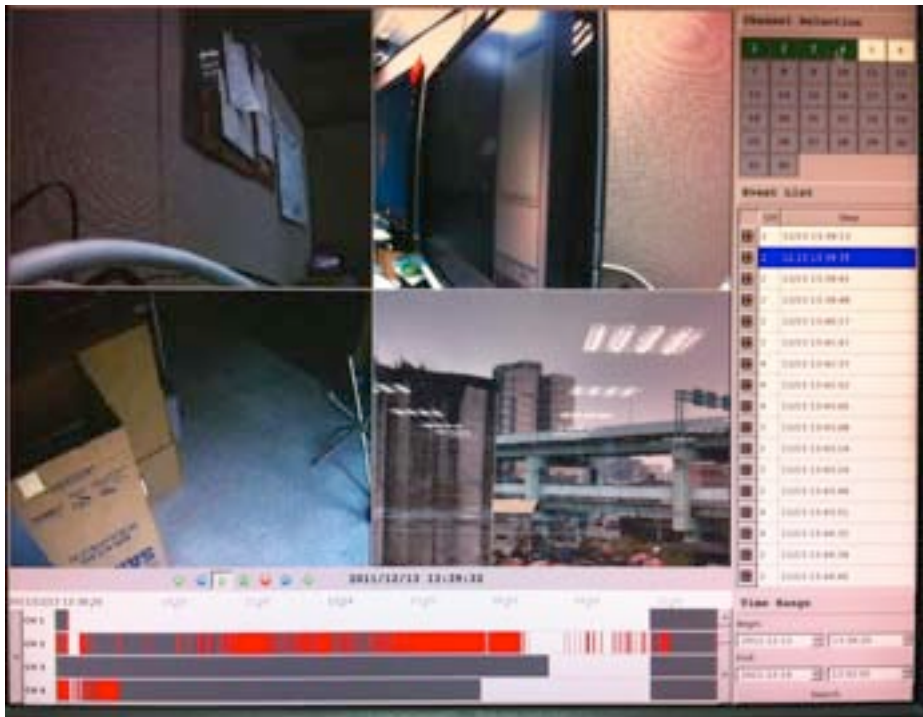

Playback is a function that allows you to play one or more videos that were previously recorded by a chosen recording method or due to an event trigger. The NVR offers synchronized playback from up to 4 channels and various types of search methods are provided to help you find the footage you need quickly.


You can turn on or off the audio of a recorded video at your choice if audio was also recorded during the recording of the video.

Playback video can be viewed in full screen and snapshots can be taken and saved during a video playback.


Methods to Search Playback Videos

The NVR offers three methods to quickly help users find videos that were previously recorded:


- **Search by time:** *Specify a time range and search videos recorded within that range*
- **Search by event:** *Find videos that were recorded due to event triggers*
- **Most Recent Events:** *Displays the most recent 15 events*
- **Play by start time:** *Enter a specific time a video was recorded to start playing back the video*

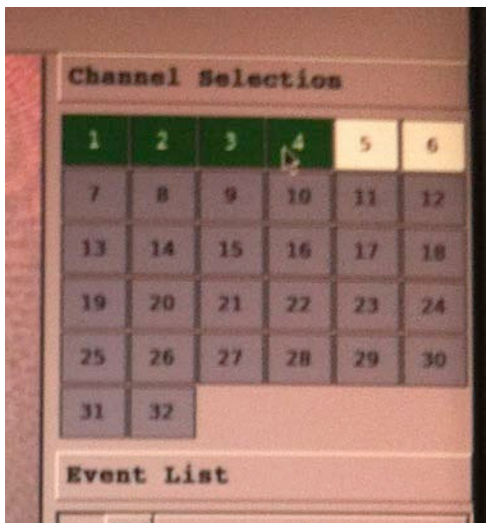

Start by selecting channels to search playback data first.

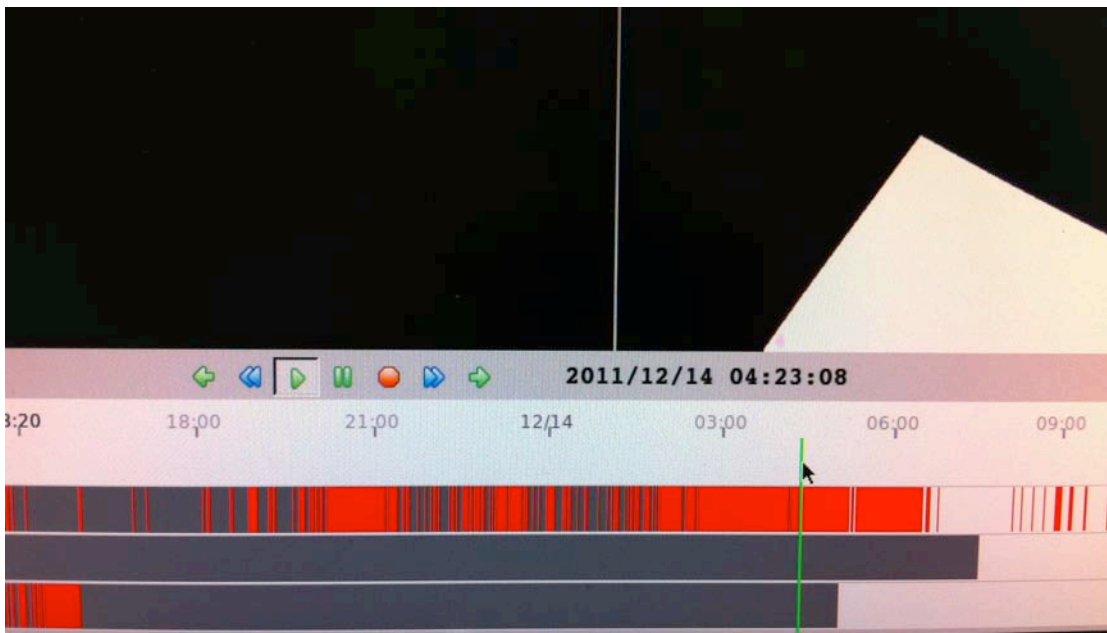


Recording data will be displayed at the bottom. Red means event recordings.

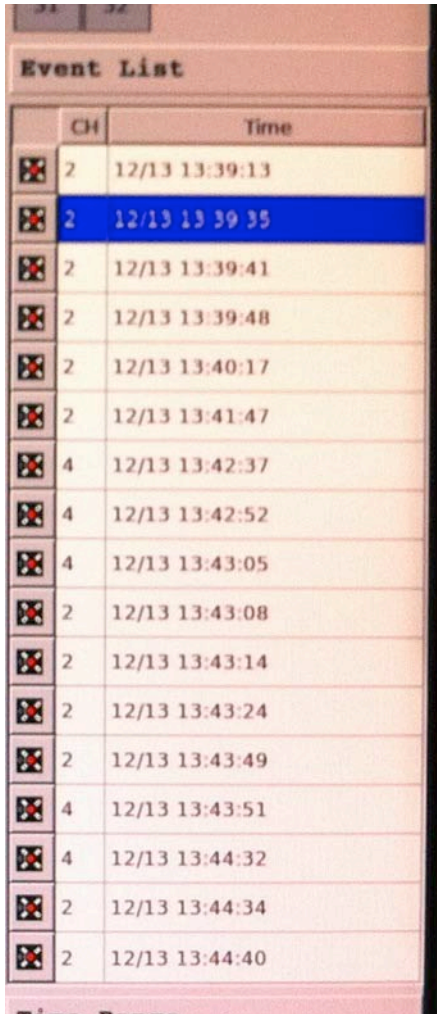

Event List	
CH	Time
2	12/13 13:39:13
2	12/13 13:39:35
2	12/13 13:39:41
2	12/13 13:39:48
2	12/13 13:40:17
2	12/13 13:41:47
4	12/13 13:42:37
4	12/13 13:42:52
4	12/13 13:43:05
2	12/13 13:43:08
2	12/13 13:43:14
2	12/13 13:43:24
2	12/13 13:43:49
4	12/13 13:43:51
4	12/13 13:44:32
2	12/13 13:44:34
2	12/13 13:44:40

Event only recordings will also be listed on the side. Double-click to start playing.

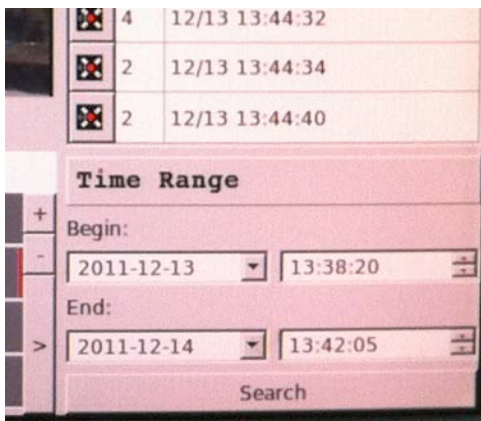

4	12/13 13:44:32
2	12/13 13:44:34
2	12/13 13:44:40


Time Range

Begin: 2011-12-13 13:38:20

End: 2011-12-14 13:42:05

Search

You can define a range of time to narrow down the search result.

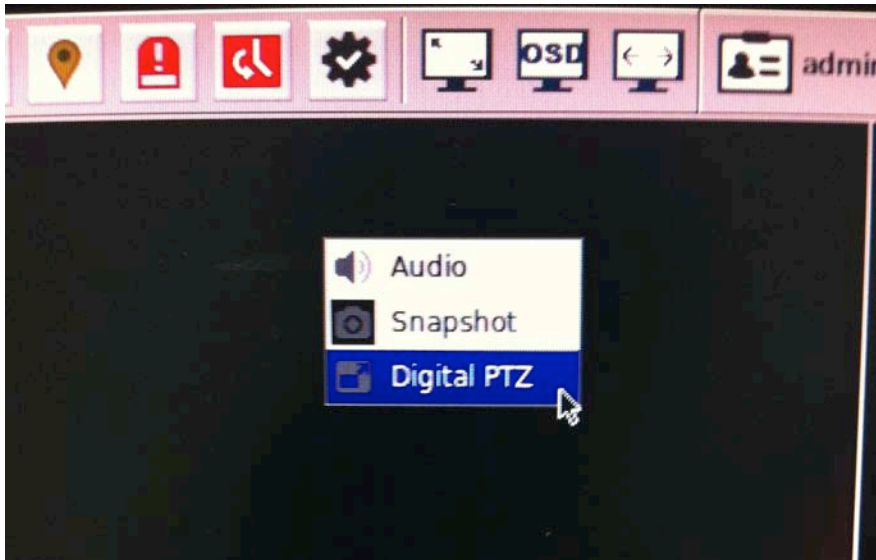


You can do the followings to the playback video by right clicking anywhere on the video:


1. Choose to listen to the recorded audio or not
2. Take snapshots of the recorded video (required USB disk)
3. Digital PTZ

E-Map Monitor


E-Map Monitor

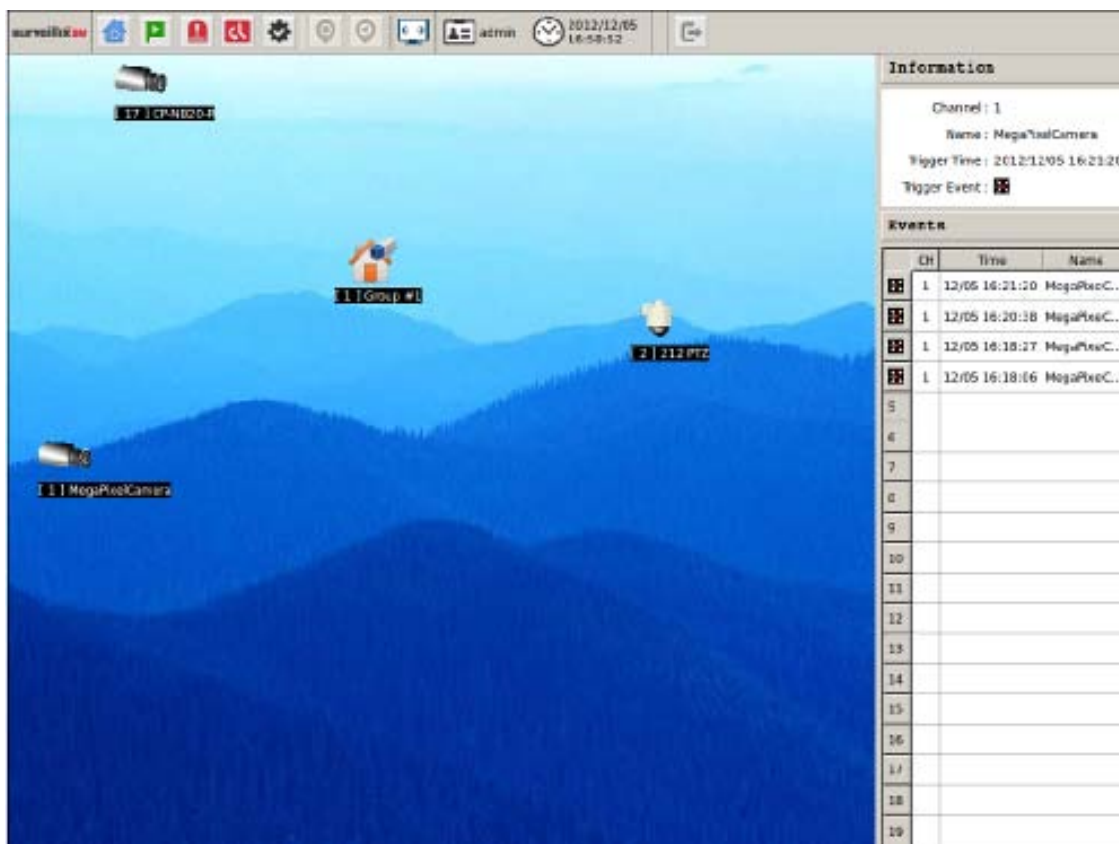


E-Map Monitor provides monitoring with instant event notifications with the geo- graphical information of each camera (and camera group). Small-sized video of a channel will be shown on the map during a trigger of an event.

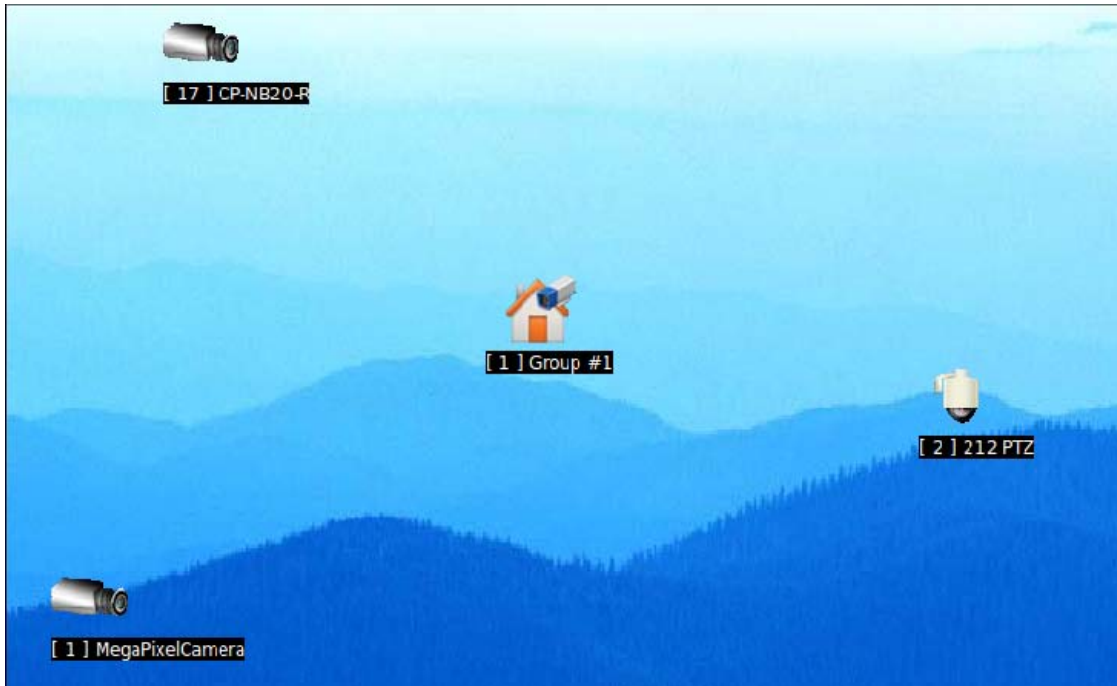


The E-Map Monitor displays the top layer of E-map by defaults. Double-click on the camera group icon to go down a layer and enter the E-map of the camera group.

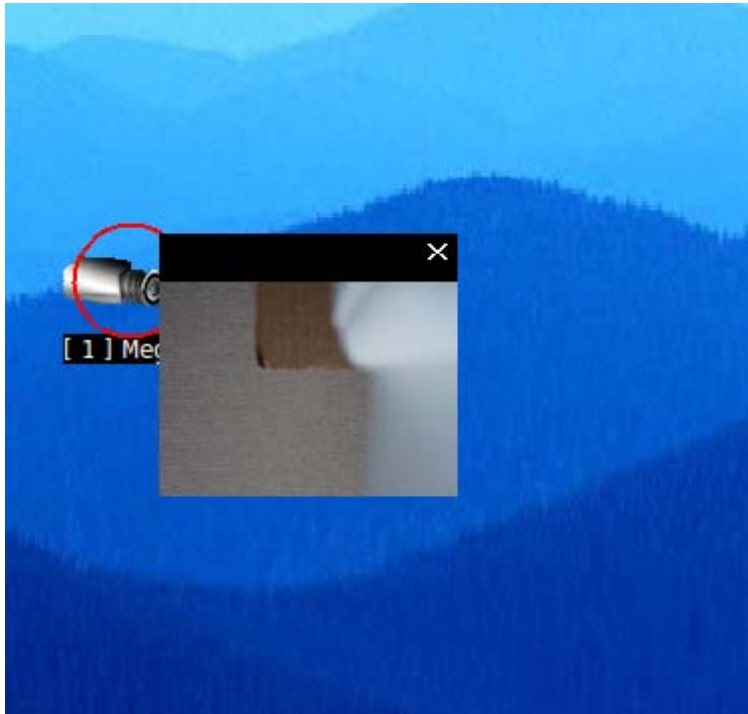

When there is an event going on, the camera icon (or the camera group icon) will be surrounded with red square flashes on the map. Its live video will also be displayed on a small pop-up window. You can double-click on the video to enlarge it.

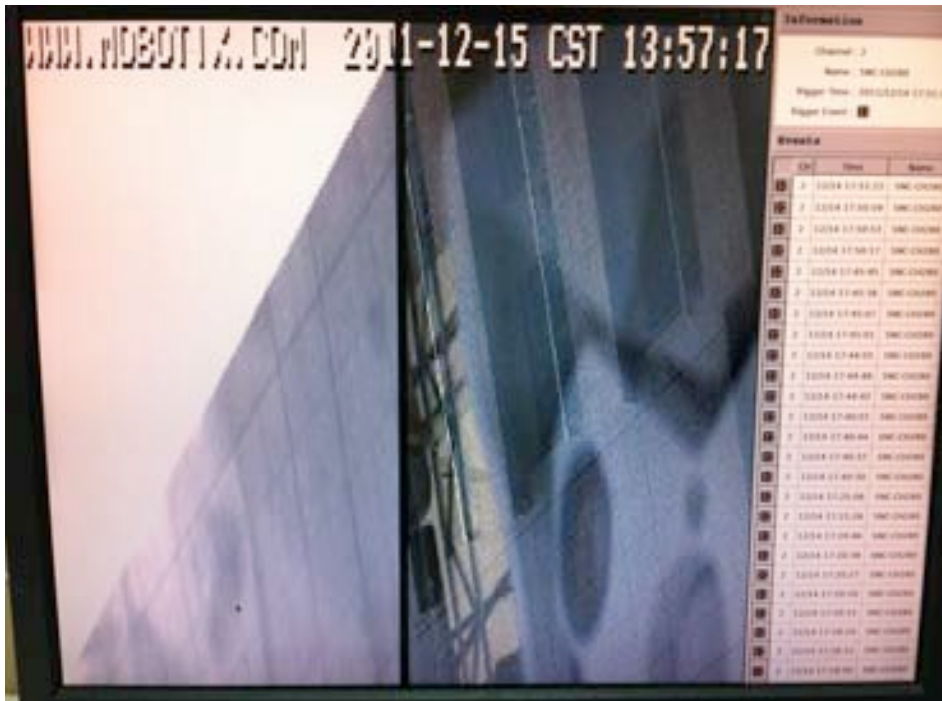


You can double-click on the video again to go back to the E-map view.

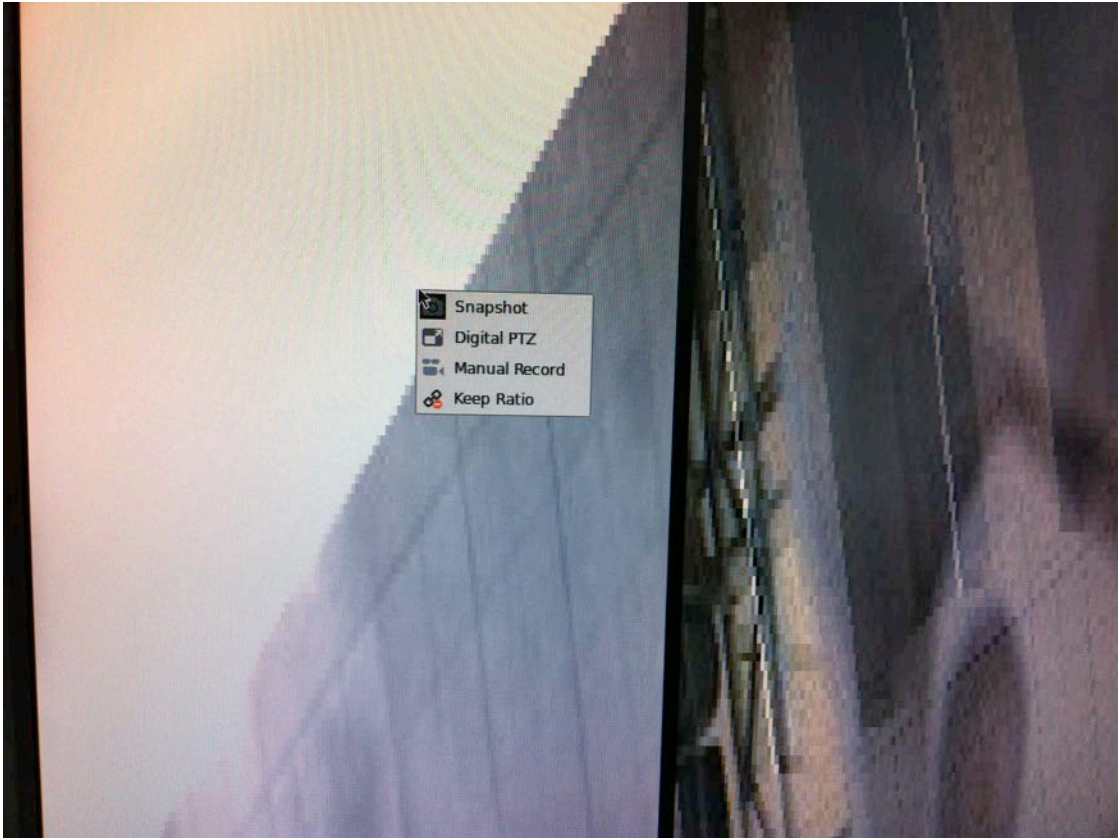


Or you can right-click on the enlarged video to perform the following tasks:

1. Take snapshot
2. Digital PTZ
3. Start/stop manual recording
4. Display video in its original aspect ratio

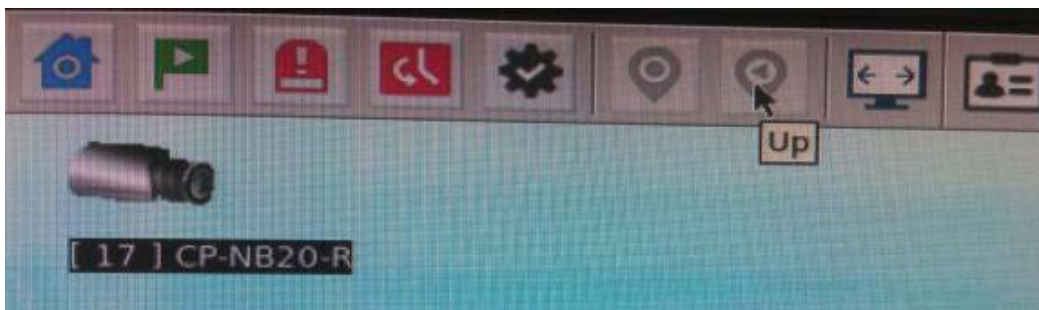

You can always go back to the previous layer of e-map whenever you are taken to a sub-layer E-map.

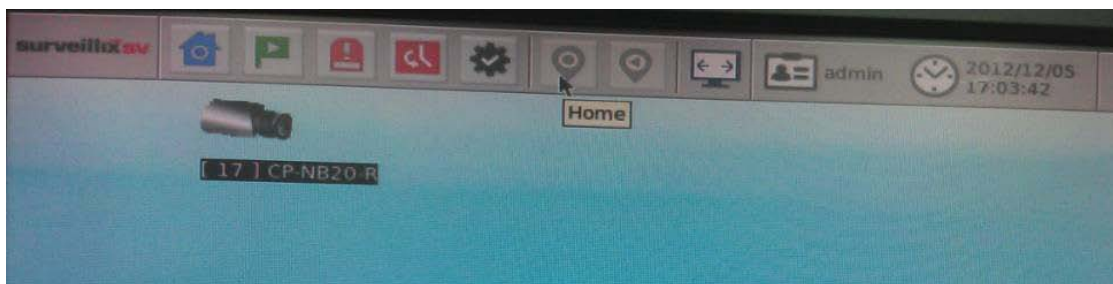



























Alternatively, you can click the "Home" button to go back to the top layer of e-map directly.

Event Monitor


Event Monitor



Event Monitor is a function that plays back "event only" videos. It's a convenient tool that allows users to play through a list of event recordings that are happening at the moment.

Information			
Channel : 2			
Name : #CH 2			
Trigger Time : 2011/12/14 13:38:38			
Trigger Event : 			
Events			
	CH	Time	Name
	2	12/14 13:38:38	#CH 2
	2	12/14 13:38:31	#CH 2
	2	12/14 13:38:22	#CH 2
	2	12/14 11:53:19	#CH 2
	2	12/14 11:53:12	#CH 2
	2	12/14 11:52:37	#CH 2
	2	12/14 11:52:31	#CH 2
	2	12/14 11:52:24	#CH 2
	2	12/14 11:52:17	#CH 2
	2	12/14 11:52:02	#CH 2
	2	12/14 11:51:57	#CH 2
	2	12/14 11:51:50	#CH 2
	2	12/14 11:51:18	#CH 2
	2	12/14 11:51:12	#CH 2
	2	12/14 11:49:59	#CH 2
	2	12/14 11:49:51	#CH 2
	2	12/14 11:49:02	#CH 2
	2	12/14 11:48:55	#CH 2
	2	12/14 11:47:45	#CH 2
	2	12/14 11:47:38	#CH 2
	2	12/14 11:46:51	#CH 2
	2	12/14 11:46:45	#CH 2
	2	12/14 11:45:51	#CH 2
	2	12/14 11:45:44	#CH 2
	2	12/14 11:45:37	#CH 2

Events will be listed on the side bar and double-clicking on any one of them will instantly play back the recording.

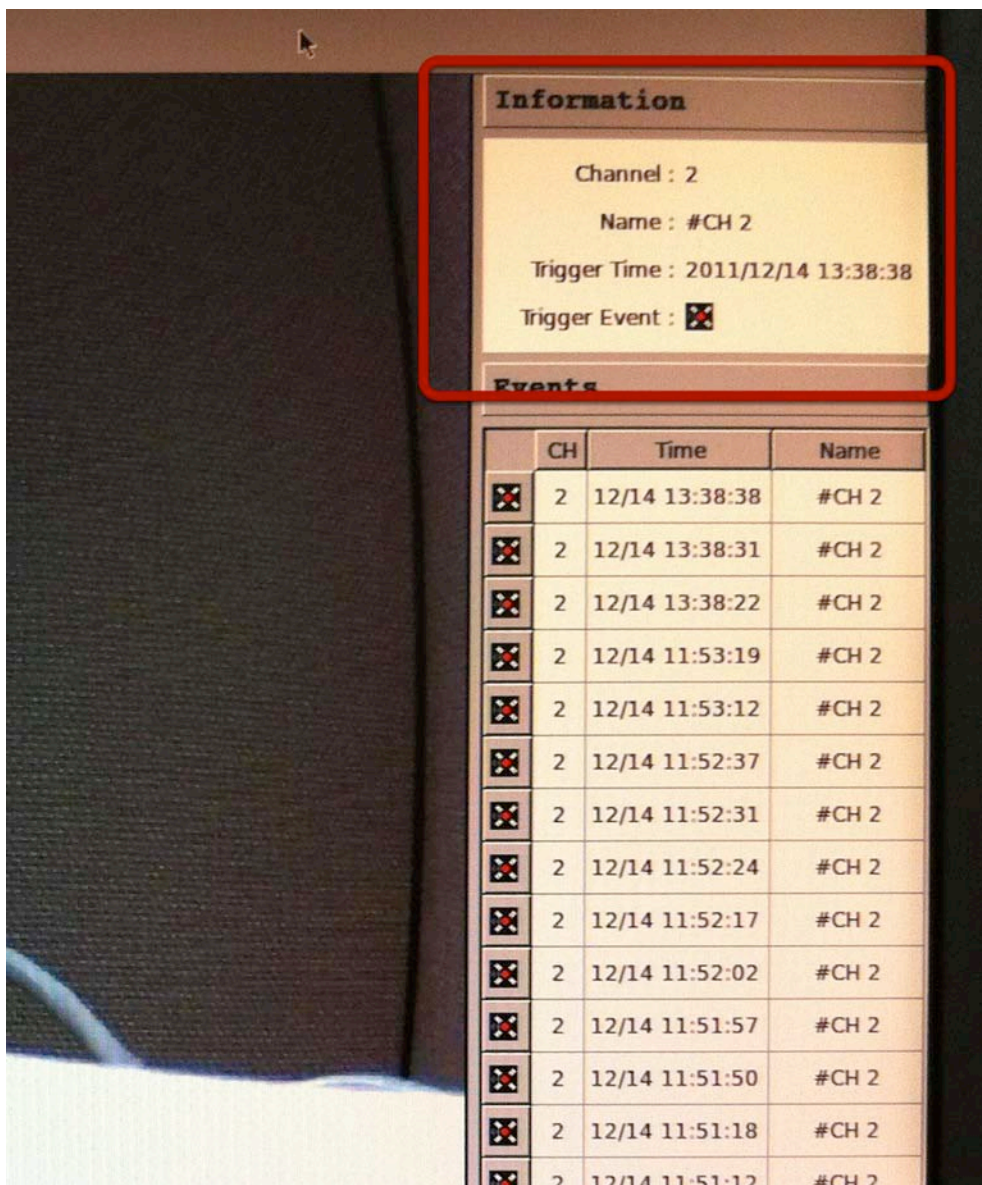

The channel information and contact information of that particular channel will also be displayed on the side bar.




The software also displays thumbnail images of the most recent events. The images get replaced whenever there are new events coming in.

Double-clicking on a thumbnail will start playing back the event-recorded video.

History Event Monitor



You can switch to the history event monitor mode to search for event only data from a much earlier time frame.

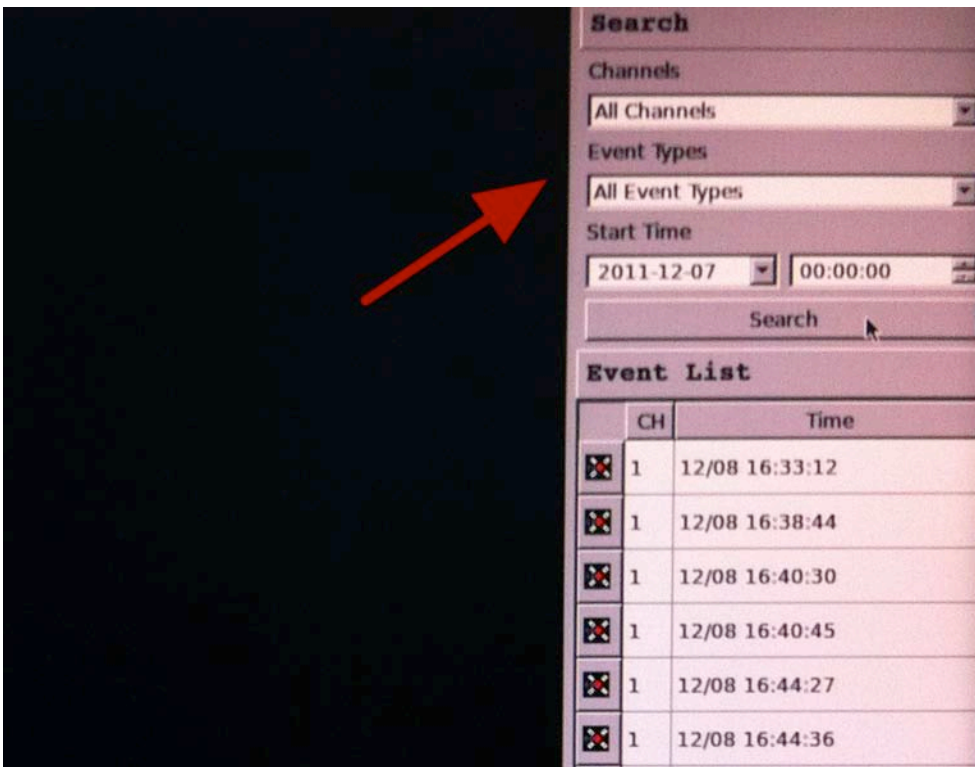

You can define search conditions to look for specific types of events that were recorded at a specific time.

Specifications

Hardware	
CPU & Memory	ATOM D525/2GB DDR2 RAM
Ethernet	10BaseT/100BaseTX/1000Base-T and half duplex/full duplex auto-negotiation
Built in HDD (HDD is NOT supplied.)	SATA HDD Slot*4 (SATA I or SATA II) Max. Capacity: 3TB each
External HDD port (HDD is NOT supplied.)	eSATA*1 Max. Capacity:8TB (2TB each*4HDDs)
LED indicator	Power/System/Event
Switches	Reset/Power
Connectors	USB*4, eSATA*1, Audio (line-in, line-out, microphone-in), VGA, Dlx8, DOx4
Power unit	200W ATX power supply INPUT:100-240V 3.5A
Dimensions	462*430*54mm
Weight	7 kg (15.4 lb)
Operating temperature and Humidity	32 to 113 deg K (0 to 45 deg C) 0% to 80% , non-condensing
Storage temperature and Humidity	-4 to 140 deg K (-20 to 60 deg C) 5% to 90% , non-condensing
Radio Standard	(Radio) FCC Class A
Software	
Camera search	Manual/AUTO (Smart Camera Search supports measure camera brands.)
Camera setup items	Name, IP address (Build in DHCP server to assign IP address to cameras automatically), video format, resolution, fps
Max. Camera number	ESV16U:16 CH, ESV32U:32CH
Camera status display	fps, resolution, bandwidth, IP address
Video	
Compliant codec system	MJPEG/MPEG-4/H.264
Max. Resolution	5 MP
Max. Recording Frame Rate	ESV16U:480 FPS (Full-HD, H.264), ESV32U:960FPS(1.3MP,H.264)
Max. Bitrate	Max. 250Mbps, (Avg. 200Mbps)
Audio	
Direction	Two-way audio
Live View	
Display Mode	Live View/Full Screen/Playback
Split Screen	(web) 1/4/16 /36, (local) 1/4/6/9/13/16/36
PTZ Camera Support	Virtual PTZ Panel/Auto Pan/Preset Point/Preset Sequence/Digital PTZ
Video Snapshot	JPEG format
Camera status display	Connection / Recording / Event
Map function	Local-Map / Google Map
Mobile Device support	Live image (JPEG) and P/T control

Playback	
Split Screen	(web) 1/4/16 / (local) 1/4
Search Method	Time/Date, Event
Playback Controls	Play/Pause/Stop/Forward/Reverse/Speed Adjust/Frame by Frame
Export video format	AVI / MJPEG
Video Snapshot	JPEG format
Recording	
Recording Mode	Manual / Continuous / Scheduling / Event
Type of Scheduling	Manual Select / Profile-based / Weekly Mode
Recording fps	H.264 & MPEG4: I frame / FULL frame MJPEG: 1/5/10/15/20/FULL frames
Storage period	1~365 days
Network	
Protocols	HTTP/SMTP/DHCP/ARP/NTP/DNS/UPnP/FTP
DDNS	DynDNS
User Management	
Management	User / Group
Number of Groups	7 (Administrator/Guest/User Define*5)
Privileges	Live View/Playback/System Configurations/Camera Configurations/Recording Configuration/Event Configuration/PTZ/System Options
Trigger & Events	
Events	System Events -- System Start, System Settings modified, Camera Settings Modified, Start Recycle, Disk Fail, camera status, HDD remaining space Camera Events -- Motion/Sensor Detection
Event Actions	Mail / FTP / Buzzer / Record
Event Recording	Pre / Post Event Settings
Bundle software	
Central Management SW	Free bundled (256CH "CMS Basic")
NVR search SW	Free bundled (NVR search)
Log	
Log Types	Service / Camera PTZ / Recording / Camera Connection / Backup / Restore
Systems	
Minimum Requirements	CPU: Intel® Core™ 2 Duo: 2.4GHz or higher RAM: 2GB Network: 100 Megabit Network Interface or above Microsoft® Internet Explorer® version 8 or above
General	
Language	(web) English / Trad. Chinese / Simp. Chinese / Japanese / Italian / Spanish / Portuguese / German / Danish / Czech / Polish / French / Russian / Slovene / Hungarian / Turkey / Finnish / Dutch (local) English
Package contents	NVR (without HDD), CD-ROM, QIG, Warranty Card, Power code, LAN Cable, Rack Mounting Kits, Screws (pan head x4, flat head x 20, flat headx2)

- Designs and specifications may change without prior notice for better improvement.
- Screens, photos, illustrations and other diagrams contained in this user's manual may slightly change from actual ones.

Technology license Notice

About the software

This product contains a piece of software licensed to TOSHIBA CORPORATION (hereafter TOSHIBA) by a third party. The copyright and other intellectual property rights of the software are held by this third party or the licensor. The software is protected by the Copyright Law, Universal Copyright Convention, and other intellectual property laws and agreements. The permission of Toshiba and the third party must therefore be obtained before the software can be reproduced. Contact Toshiba if you need it for more information at <http://www.toshibasecurity.com/support/firmware.jsp>.

End-user License Agreement on Free Software Components Used in the Network Video Recorder

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it,

either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and those users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, does not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable.

However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a

whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details. You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author

Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w'.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c' for details.

The hypothetical commands `show w' and `show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w' and `show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program

`Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.